


OPERATING MANUAL

A30 SERIES

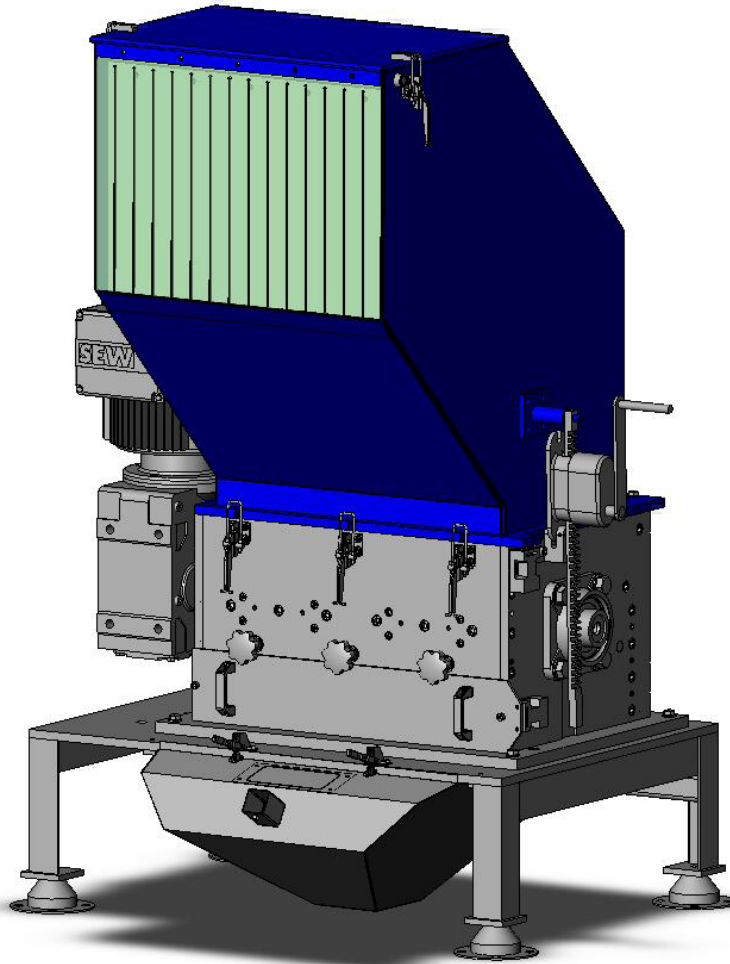

Virtus Equipment

9120 Centerlinks Commerce Dr., Unit 4
Fort Myers, FL 33912

239-219-1500

Parts@Virtus-Equipment.com

www.Virtus-Equipment.com

Virtus
Equipment

The Right Machine for Today's
Recycling Requirements

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

Table of Contents

1	Information on this instruction manual	6
2	Technical data	7
3	General Information	10
3.1	Copyright	10
3.2	Application	10
3.3	Safety	10
3.4	Inspection of goods	10
4	General safety advice	11
4.1	Safe operation of the machine	11
4.2	Use in accordance with the regulations	12
4.3	Liability and Responsibility	14
4.4	Structural changes, spare parts, accessories	15
4.5	Operation manuals from other manufacturers	15
4.6	Noise levels and noise control measures	16
4.7	Work stations	16
4.8	Remaining risks	17
4.8.1	Mechanical dangers	17
4.8.2	Electrical dangers	18
4.8.3	Dangers caused by the control system	19
4.8.4	Thermal dangers	19
4.8.5	Dangers caused by noise	19
4.8.6	Dangers caused by vibration	20
4.8.7	Dangers caused by materials and substances	20
4.8.8	Danger caused by manipulation of the protective devices	20
4.9	Protective devices	21
4.9.1	Safety device for housing flap	21
4.9.2	Safety device for hopper	22
4.9.3	Safety device for suction trough	23
4.9.4	Splash guard	24
4.9.5	Safety markings	24
4.10	Authorized persons	25
4.11	Personal protective gear	26
4.12	Safety measures at the application site	27
4.13	Fire fighting agents	27
4.14	Cleaning agents	27
4.15	Conduct in case of an emergency	27
4.16	Classification of specific safety advice	28

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

5	Description of the machine	29
5.1	Grinding material in feed	29
5.1.1	In feed hopper	29
5.1.2	Additional in feed device	29
5.2	Base frame	30
5.3	Drive	30
5.4	Granulator upper section/hopper	31
5.5	Granulator lower section	32
5.5.1	Rotor and cutting knives	32
5.5.2	Screen and screen support	33
5.6	Discharge of grinding material	34
6	Initial startup	35
6.1	General Advice	35
6.2	Requirements at the application site	35
6.3	Unloading and installing the machine	36
6.3.1	Installing the machine with frame Nr 1	37
6.4	Electrical connection	38
6.5	Machine check prior to initial start-up	40
7	Operation	41
7.1	Machine checks before switching on the machine	41
7.2	Switch on machine	41
7.3	Switch off machine	42
7.4	Manual in feed of grinding material	42
8	Maintenance	43
8.1	Safety advice	43
8.2	Maintenance plan	43
8.3	Checking the protective devices	44
8.4	Opening and closing the hopper	45
8.4.1	Opening the hopper	45
8.4.2	Closing the hopper	46
8.5	Cleaning the machine	46
8.6	Replacing the main bearing	47
8.6.1	Dismounting the main bearing	47
8.6.2	Mounting the main bearing	48
8.7	Lubricating the main bearings	49
8.7.1	Lubrication intervals:	49
8.7.2	Check lubricant quality	50
8.7.3	Replacing or refilling lubricant	50
8.7.4	List of lubricants	52

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.8	Replacing the screen	53
8.9	Working on the cutting knives	54
8.9.1	Replacing and checking the cutting knife mountings	54
8.9.2	Checking the condition of the cutting knives	55
8.9.3	Dismounting the cutting knives	56
8.9.4	Mounting the cutting knives	58
8.9.5	Sharpening cutting knives	59
8.9.6	Transporting and storing the cutting knives	62
9	Troubleshooting	63
9.1	Machine blocks or switches itself off	63
9.2	Rotor does not grip bulky material	63
9.3	Overheating of the grinding material	63
9.4	Unusual vibrations	63
9.5	Extreme cutter wear	63
9.6	Bearings too hot	63
9.7	Too many fines in grinding material	64
9.8	Cutting gap alters during operation	64
9.9	Screen damage	64
9.10	Granulator does not start	64
9.11	Granulator blocks when under load	64
10	Storage, disposal, transportation	65
10.1	Storage	65
10.2	Disposal	65
10.3	Transportation	65
11	Customer service and spare parts orders	66
12	Spare Parts List A 30 /40	67
13	Spare Parts List A 30 /60	69
14	Spare Parts List A 30 /80	71
15	Clarification for Personal Training	76
16	Standard machine layouts	77
16.1	A 30 /400	77
16.1.1	Hopper Nr 1, Frame Nr 1, Suction bin Nr 1	77
16.1.2	Hopper Nr 2, Frame Nr 1, Suction bin Nr 1	78
16.1.3	Hopper Nr 1, Frame Nr 2, Suction bin Nr 2	79
16.1.4	Hopper Nr 2, Frame Nr 2, Suction bin Nr 2	80
16.2	A 30 /600	81
16.2.1	Hopper Nr 1, Frame Nr 1, Suction bin Nr 1	81
16.2.2	Hopper Nr 2, Frame Nr 1, Suction bin Nr 1	82

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.2.3	Hopper Nr 1, Frame Nr 2, Suction bin Nr 2	83
16.2.4	Hopper Nr 2, Frame Nr 2, Suction bin Nr 2	84
16.3	A 30 /800	85
16.3.1	Hopper Nr 1, Frame Nr 1, Suction bin Nr 1	85
16.3.2	Hopper Nr 2, Frame Nr 1, Suction bin Nr 1	86
16.3.3	Hopper Nr 1, Frame Nr 2, Suction bin Nr 2	87
16.3.4	Hopper Nr 1, Frame Nr 2, Suction bin Nr 2	88
17	Electrical Connection	89
17.1	A 30 /40 Standard wiring diagram Version 1	89
17.2	A 30 /40 Standard wiring diagram Version 2	98
17.3	A 30 /60 Standard wiring diagram Version 1	107
17.4	A 30 /60 Standard wiring diagram Version 2	116
17.5	A 30 /80 Standard wiring diagram	125
18	ADDITION	135

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

1 INFORMATION ON THIS INSTRUCTION MANUAL

Author: VIRTUS EQUIPMENT

No part of this operation manual may be reproduced, distributed or used in any shape or form, stored in a data processing system or translated into another language without written permission.

This operation manual serves to help you to get to know your machine and how to make use of its application possibilities in accordance with the regulations.

The operation manual contains important information on how to operate the machine safely, correctly and economically. Following this advice will help you to avoid danger, minimize repair costs and down times and to increase the reliability and durability of the machine.

Before you begin to work on and with the machine, please read the operation manual thoroughly. Only after you have read and understood the contents of this operation manual may you begin work on and with the machine. Keep this operation manual at the application site for future reference.

References to chapters, plans and other documents as well as key markings are written in *italics*.

↓ Instructions on handling are marked in this way.

The machine is designed in modular system and offers a wide spectrum of variations to do justice to your expectations. In order that you receive with the delivery of your machine all the information relevant for you, this operation manual is divided into three parts:

1. Part A: Information of the basic machine.
2. Part B: Plans, operation manuals for systems from other manufacturers etc.

Should you wish to order further operation manuals, please quote the machine number.

We wish you every success with your new machine!

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

2 TECHNICAL DATA

A 30/40

Opening cutting chamber	Data in mm:	400x400
Rotor dimension:	Diameter in mm:	300
	Width of cut in mm:	400
Rotor knives:	No. of rotor knives:	33
Stator knives:	No. of stator knives:	2(4 edges)
Rotor speed (50 Hz):	rpm	150
Width:	Data in mm:	820
Length:	Data in mm:	1050
Height:	Data in mm:	1680
Drive motor:	Power in kW:	7.5; 11
Screen:	Type and screen hole size dependent on the application and customer requirements.	
Machine weight:	In kg	550
Opening device:	Hand winch	Manual
Electrical connection data:	markings are attached to the machine	
Noise level: Depends on plant location and type of grinding material!	Without noise equipment, in dB(A):	ca. 90

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

A 30/60

Opening cutting chamber	Data in mm:	600x400
Rotor dimension:	Diameter in mm:	300
	Width of cut in mm:	600
Rotor knives:	No. of rotor knives:	44
Stator knives:	No. of stator knives:	2(4 edges)
Rotor speed (50 Hz):	rpm	150
Width:	Data in mm:	1020
Length:	Data in mm:	1250
Height:	Data in mm:	1680
Drive motor:	Power in kW:	11
Screen:	Type and screen hole size dependent on the application and customer requirements.	
Machine weight:	In kg	765
Opening device:	Hand winch	Manual
Electrical connection data:	markings are attached to the machine	
Noise level: Depends on plant location and type of grinding material!	Without noise equipment, in dB(A):	ca. 90

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

A 30/80

Opening cutting chamber	Data in mm:	800x400
Rotor dimension:	Diameter in mm:	300
	Width of cut in mm:	800
Rotor knives:	No. of rotor knives:	66
Stator knives:	No. of stator knives:	2(4 edges)
Rotor speed (50 Hz):	rpm	150
Width:	Data in mm:	1410
Length:	Data in mm:	1070
Height:	Data in mm:	1750
Drive motor:	Power in kW:	11; 15; 18.5
Screen:	Type and screen hole size dependent on the application and customer requirements.	
Machine weight:	In kg	980
Opening device:	Hand winch	Manual
Electrical connection data:	markings are attached to the machine	
Noise level: Depends on plant location and type of grinding material!	Without noise equipment, in dB(A):	ca. 90

3 GENERAL INFORMATION

3.1 Copyright

VIRTUS EQUIPMENT holds the copyright for these operation instructions, entrusted to the owner of the granulator for his personal use. These contains technical instructions and drawings which are not be copied complete or in part, distributed or used for reasons of unauthorized competition or for informing others.

3.2 Application

The granulator is designed for size-reduction of blow moulding parts such as PE, PP, and PVC etc. The user is responsible for consequences resulting from incorrect operation: This will lead to the loss of the warranty as well as any compensation claims.

3.3 Safety

The granulator has been constructed in accordance to the general standards of technology and is fitted with safety devices to prevent accidents that could endanger the life or health of the operator. The company operating the unit is responsible for the compliance of the safety regulations. We recommend staff training courses at regular intervals subsequent to initial training during commissioning.

3.4 Inspection of goods

The goods must be inspected by the purchaser to ensure that the delivery is complete and free from damage during transport. In the event of any queries VIRTUS must be informed with regard to missing items or transport damage. In the event of actual transport damage, written notification including photographs should be made and sent to the transport company as well as sent to VIRTUS immediately after delivery.

4 GENERAL SAFETY ADVICE

4.1 Safe operation of the machine

The machine is built according to the state of the art and recognised safety regulations.

It is equipped with protective devices; however there is still the threat of danger in case of incorrect conduct or misuse:

- for the health of the operator and that of other persons,
- for the machine,
- for the environment,
- for material assets belonging to the company and the operator.

All persons involved in:

- transportation and storage,
- start-up and shutdown,
- operation,
- setting and fitting
- maintenance and waste disposal...

of the machine must carefully read and take note of the following advice. However, not only the general safety advice listed in this chapter has to be observed, but also the safety advice which is added specifically in the other chapters.

Failure to heed this safety advice can lead to loss of all compensation claims.

Furthermore, the existing rules and regulations for the prevention of accidents as well as in house company working, operational and safety regulations have to be observed.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

4.2 Use in accordance with the regulations

The operational safety of the delivered machine is only guaranteed for use in accordance with the regulations!

This regulation use is only achieved if the following points are observed and fulfilled.

Manufacturing process and grinding material

The granulator is suitable exclusively for the grinding of material, which corresponds to the agreed customer-specific specifications in all points (see *Contract of sale*).

Any other work or design will differ from the specified requirements. VIRTUS EQUIPMENT will not be held responsible. The specified requirements also include all information found in the owner's manual such as maintenance and service. Any change in the specifications or requirements must be brought to the attention of VIRTUS.

Suction unit

If emissions occur during grinding of material, which exceed the permissible legal values for contaminants in the air, the granulator may only then be operated when the customer on site has installed a suitable air suction device.

Safety device for the in feed hopper

In the case that your design of granulator does not contain any additional in feed device (e.g. nip roll feed device), the in feed hopper must be safeguarded in a suitable way against persons reaching in or falling in.

Connection of the Emergency Stop button

The machine may only be operated with the installed Emergency Stop buttons. In case no Emergency Stop buttons have been installed, an Emergency Stop button must be mounted on the control cabinet, the second on the material in feed.

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

Miscellaneous:

- The working conditions and instructions specified in this operation manual must be adhered to.
- The machine is not suitable for operation in an explosive environment.
- Faults, which can impair safety, are to be reported immediately and eliminated by a trained and skilled specialist.
- The machine may only be used in the industrial application range.

General Requirements Safety Information

- The service and maintenance in this owner's manual must be performed on a regular basis.
- The machine is not designed for operation in a volatile environment.
- Faults that could be a safety factor must be reported immediately and repaired by experienced personal.
- The machine must only be installed in a production type building.

Known uses not in accordance with the regulations

Never grind grinding materials, which do not correspond to the agreed customer-specific specifications. If this occurs, there is a danger to persons and the possibility of the machine being damaged.

Informal Safety Requirements

The owner's manual should always be located near the machine. New excerpts or additions to the owners' manual must always be replaced to include any safety requirements or environmental requirements.

All safety or caution signs must be visual and easy to read.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

4.3 Liability and Responsibility

The General Conditions of Sale and Delivery basically apply. These conditions apply no later than the end of the contract. Liability and or responsibility to seller do not apply to the following;

- Equipment is not properly used for its specific application.
- Non-conforming installation, commissioning or service of the machines.
- Operation of the equipment without proper safety guards.
- Not conforming to the directions of the owners' manual regarding transport, storage, installation, commissioning or servicing the equipment.
- Any designs alterations on the machine.
- Any changes on the program logic which can alter the machine operation or electrical function.
- Changes in the logic function.
- In proper maintenance or serving the machines that can lead to extraordinary wear
- In proper serving of equipment
- Spontaneous crashes caused by foreign objects falling into the machine or acts of God

We honour a 6 month guarantee valid after delivery under the conditions that originally delivery or original parts from VIRTUS EQUIPMENT are used or accepted for use in accordance with our owners manual.

Otherwise the guarantee will be considered invalid. Excluded are wear and tear parts such as knives, screens, drive belts, bearings, etc.

4.4 Structural changes, spare parts, accessories

For reasons of safety, remodelling and modifications to the machine, in particular to the electrical devices, are only permissible by arrangement with the manufacturer!

Replace faulty parts immediately. Only use original spare parts or spare parts from other manufacturers, which correspond, to the original spare parts with regards to function, stress and safety. This applies in particular for reasons of EMC (electro-magnetic compatibility) for electrical components.

The use of unsuitable parts can impair resistance to rays and increase the emission of rays!

If parts are replaced which are relevant for safety, they must be checked afterwards for proper functioning.

Only use accessories, which have been approved by the manufacturer. Use of accessories can change work with the machine. You must therefore observe the additional advice for your work and your safety. Read *Part B: Accessories*, before you commission the machine.

4.5 Operation manuals from other manufacturers

Integrated in the machine are systems from other manufacturers. When working on or with these systems, please observe the advice in the operation manuals from the respective manufacturer. These operation manuals are enclosed with the machine documentation.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

4.6 Noise levels and noise control measures

The GSL series granulator standard design is without a sound proof enclosure.

The noise level of the granulator depends on location and type of grinding material.
In order not to exceed the noise level of 85 dB (A) is the purchaser required to provide soundproofing.

The noise level can be affected by foundation static or dynamic, aux. blowers etc. or other additional equipment. Therefore it is necessary to actually determine if the noise level is directly coming from the machine or accessory equipment.

VIRTUS EQUIPMENT can supply equipment to reduce the noise levels.



CAUTION

The user or purchaser is responsible for compliance with the instructions and procedures!

4.7 Work stations

During normal operation, the work station is the station at the in feed of the grinding material.

For maintenance work, the whole area around the machine is at your disposal.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

4.8 Remaining risks

The machine is constructed so that you are able to operate it safely. Structurally non-avoidable dangers are prevented as well as possible by the protective devices. A certain remaining risk does however always remain! Being aware of these remaining risks of the machine will help you to structure your work more safely and in so doing to avoid accidents.
 To avoid danger, please observe in addition the specific safety advice in the individual chapters.

4.8.1 Mechanical dangers

Type of danger:	Danger of crushing by heavy parts falling down or falling over.
Activity:	Unloading and transporting the machine or machine components.
Possible consequences:	Serious injury could result.
Preventative measures:	Wear personal protective gear. Follow the instructions in this <i>Operation manual</i> .

Type of danger:	Danger of cutting caused by sharp cutting knives, even when the rotor is stationary.
Activity:	Knife replacement, knife setting, and knife sharpening, other maintenance work.
Possible consequences:	Serious injury, particularly to hands and fingers can result.
Preventative measures:	Wear personal protective gear. Follow the instructions in this <i>Operation manual</i> .

Type of danger:	Danger of crushing when closing the granulator upper section.
Activity:	Maintenance work.
Possible consequences:	Serious injury can result.
Preventative measures:	When closing the granulator upper section, ensure that no persons are in the danger area.

Type of danger:	Tripping over cables and other objects lying around.
Activity:	All activities.
Possible consequences:	Serious injury can result.
Preventative measures:	Lay cables in accordance with the regulations. Keep work station clean and tidy.

Type of danger:	Danger of crushing, cutting and amputation
------------------------	--

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

	caused by up to 3 minute run down of the rotor.
Activity:	Maintenance work.
Possible consequences:	Serious injury or death can result.
Preventative measures:	The housing upper section must always be tightly locked during operation using the connecting screws. Do not make the run down safety devices ineffective by using technical aids or other manipulations. Never check by hand whether the rotor has come to a stop.

4.8.2 Electrical dangers

Danger:	Direct or indirect contact with live parts in the terminal box.
Activity:	Maintenance work, start-up.
Possible consequences:	Serious injury or death.
Preventative measures:	<p>Trained electricians may only carry out all work on the electrical equipment.</p> <p>If work is necessary on parts, which conduct dangerous voltage, a second person should be called in who can break the power supply in case of emergency.</p> <p>The yellow-marked lines conduct voltage even when the machine is switched off (main switch to 0).</p> <p>Only use original safety fuses with stipulated intensity of current.</p> <p>Faulty electrical components must be replaced immediately.</p> <p>If faults occur in the electrical energy supply, switch machine off immediately.</p> <p>The terminal box must be locked during operation. Before opening the terminal box: Main switch to 0.</p>

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

4.8.3 Dangers caused by the control system

Type of danger:	Danger caused by failure of the Emergency Stop function.
Activity:	All activities.
Possible consequences:	Serious injury or death.
Preventative measures:	It must be guaranteed that failure of an Emergency Stop button is displayed and leads to an immediate stop of the machine.

4.8.4 Thermal dangers

Type of danger:	Danger of fire and explosion caused by throwing dangerous objects (e.g. spray cans) into the granulator.
Activity:	Grinding.
Possible consequences:	Serious injury or death can result.
Preventative measures:	Only grind grinding material, which corresponds to the agreed customer-specific specifications in all points.

4.8.5 Dangers caused by noise

Type of danger:	Damage to hearing.
Activity:	All activities.
Possible consequences:	Diminished hearing, headaches, impaired balance, and deterioration of concentration.
Preventative measures:	Reduce noise emissions by taking suitable measures. Wear ear protection.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

4.8.6 Dangers caused by vibration

Type of danger:	Instability of the granulator caused by vibration.
Activity:	All activities.
Possible consequences:	Serious injury can result.
Preventative measures:	Install the machine according to the instructions of this <i>Operation manual</i> and the <i>Assembly drawing</i> .

Type of danger:	Loosening of the cutting knife mountings caused by vibration.
Activity:	All activities.
Possible consequences:	Serious injury can result.
Preventative measures:	Check the cutting knife mountings regularly according to the instructions in this operation manual.

4.8.7 Dangers caused by materials and substances

Type of danger:	Inhalation of grinding dust.
Activity:	All activities.
Possible consequences:	Diseases of the respiratory tract etc.
Preventative measures:	Mount a suitable air suction device. Wear breathing equipment if necessary. When cleaning the machine do not blow out grinding dust, use suction instead.

4.8.8 Danger caused by manipulation of the protective devices

Type of danger:	Danger of crushing, cutting and amputation.
Activity:	All activities.
Possible consequences:	Serious injury or death can result.
Preventative measures:	Never make the protective devices ineffective. Check the protective devices regularly for proper functioning according to the specifications given in this operation manual.

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series


4.9 Protective devices

The machine may under no circumstances be operated without these protective devices or with faulty or manipulated protective devices.

4.9.1 Safety device for housing flap

Illustration:

- (1) Safety switch
- (2) Threat spindle

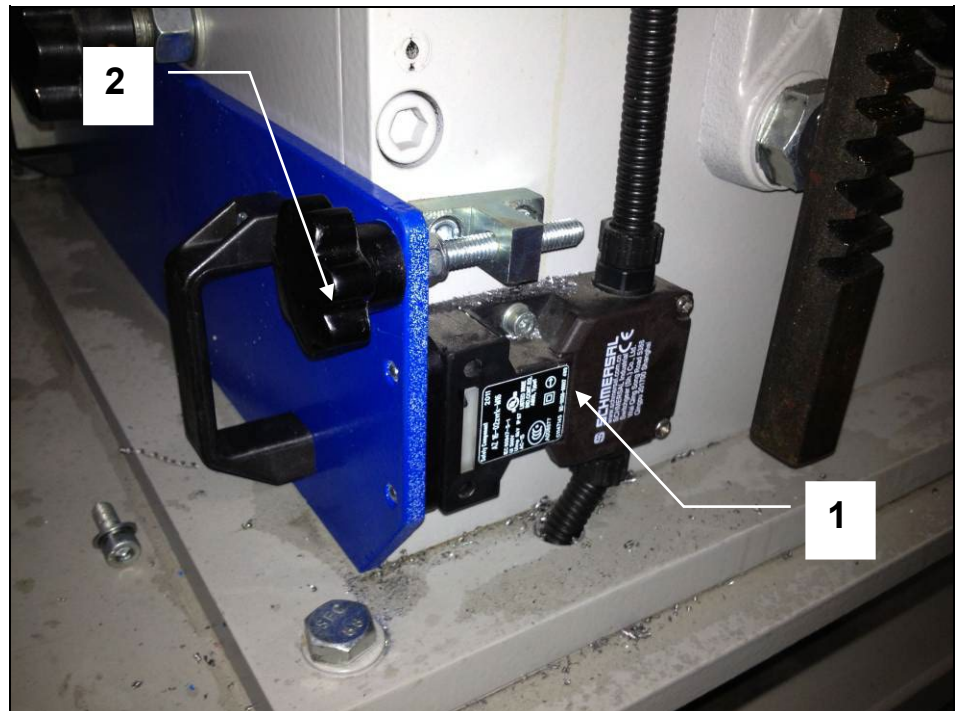

The housing flap is equipped with a safety switch and a threat spindle for a time delay.
The granulator can only be operated if the housing flap is fixed and the screws are tightened. Otherwise the safety switch is activated.
If the housing flap will be opened during operation, the safety switch is activated, thus switching off the machine.

ORIGINAL INSTRUCTION


PART A: Basic machine

Slow speed Granulator A 30 Series

4.9.2 Safety device for hopper

Illustration:

- (1) Hand winch
- (2) Safety switch

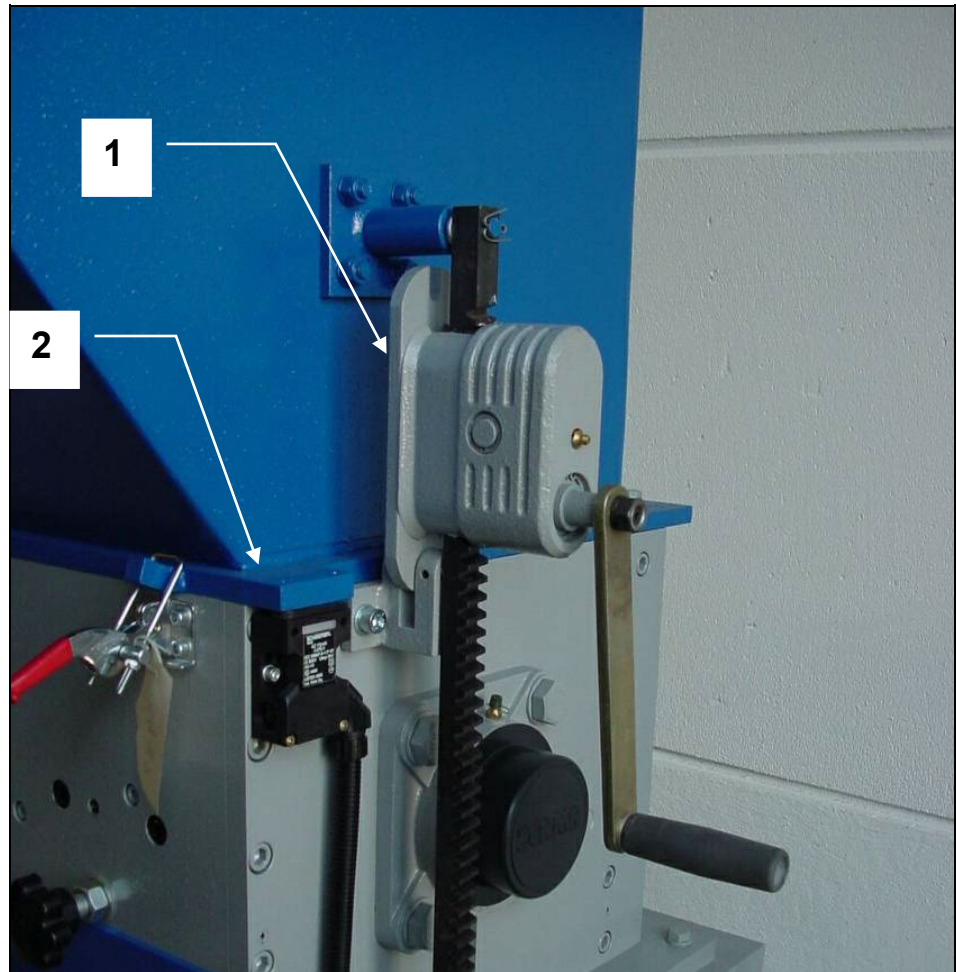

The hopper can be opened or pivoted upwards for maintenance work and for cleaning. It is connected with the cutting chamber by means of a joint.

It can be opened manually with the mounted hand winch.

Therefore the hopper is safeguarded against opening while running.

If the hopper will be opened during operation, the safety switch will be activated and the machine stops.

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

4.9.3 Safety device for suction trough

Illustration:

Safety switch for suction trough



The suction trough can be taken out for maintenance work and for cleaning.

The suction trough is equipped with a safety switch.

If the suction trough will be taken out during operation, the safety switch will be activated and the machine stops.

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

4.9.4 Splash guard

In case that the grinding material is introduced directly via the in feed hopper, the input opening is provided with a splash guard to prevent fly out.

Illustration:
Splash guard



4.9.5 Safety markings

Safety markings are attached to the machine. If one of these markings becomes detached or is no longer recognisable, it must be replaced. You can order new markings at specialist shops or from us (see *Customer service and spare parts orders*).

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

4.10 Authorized persons

Authorized personnel may only carry out work on the machine. Observe the legally permissible minimum age!

As a basic rule, persons who have received training on the machine may only operate the machine.

Personnel, who are still to be trained or receive instruction on the machine, may only work on the machine under constant supervision by an experienced person.

The company operating the machine must make the operation manual accessible to the machine user and ensure that he has read and understood it. Only then may he put the machine into operation.

Responsibility for the different jobs on the machine must be clearly established and adhered to. There must be no unclear areas of authority, as this could endanger the safety of the machine user.

If several persons work on the machine, a detailed division of workstations should be set up.

Trained electricians may only carry out all work on the electrical equipment.

Authorized specialist personnel may only eliminate faults on the control system.

All work related to installation, trained specialist personnel having received instruction on the machine might only carry out fittings and maintenance of the machine.

The operator must make sure that only authorized person's work on the machine. He is responsible for the safety of third persons in the working area of the machine.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

4.11 Personal protective gear

Wear close-fitting clothing. Jewellery and hair must be worn so that they cannot be pulled into the machine by moving parts.

The following protective gear must be worn when carrying out the following tasks:

	Safety helmet	Safety boots	Safety gloves	Safety goggles	Ear muffs
Unloading machine.	x	x	x		
Connecting machine.		x			
Operation.		x	x	x	x
Cleaning.		x	x	x	
Maintenance of bearings.		x			
Screen replacement.		x	x		
Maintenance of "V"-belts.		x			
Maintenance of cutting knives.		x	x		
Knife sharpening.		x	x	x	x

If necessary, protect yourself (in addition to the air suction device) with breathing equipment before inhaling substances harmful to the health.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

4.12 Safety measures at the application site

Requirements at the application site: see chapter *Initial Start-up*.
The machine must be erected horizontally on a horizontal surface and in a stable manner.
Ensure by means of appropriate in house orders and controls that the environment of the work station is always clean and clear of obstructions.

4.13 Fire fighting agents

In the case of fire, disconnect the power supply of the machine or pull out the mains plug. Extinguish the fire from a distance of several meters using a fire extinguisher suitable for the machine and the grinding material.

4.14 Cleaning agents

Only use suitable cleaning agents to clean the machine and in doing so, the advice of the manufacturer is to be heeded. Please be aware that unsuitable cleaning agents (e.g. thinners) can damage the paint of the machine as well as the cables and plastic parts.

4.15 Conduct in case of an emergency

The machine may only be operated with the installed Emergency Stop buttons. An Emergency Stop button must be mounted onto the control cabinet, the second onto the grinding material in feed.

Emergency Stop:

- ↓ In case of emergency, immediately press one of the *Emergency Stop buttons*.

CAUTION



The EMERGENCY STOP must be activated in all situations whereby injury or damage could result!



Reoperation:



- ↓ Eliminate cause of Emergency Stop.
- ↓ Unlock **EMERGENCY STOP BUTTON**.
- ↓ Acknowledge fault.
The machine is now ready for operation again.



ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

4.16 Classification of specific safety advice

The specific safety advices in the following chapters of this operation manual are classified as follows:

 DANGER	
	Indicates an immediately threatening danger. If you do not take avoiding action, death or serious injury will result.

 WARNING	
	Indicates a possibly dangerous situation. If you do not take avoiding action, death or serious injury could result.

 CAUTION	
	Indicates a possibly dangerous situation. If you do not take avoiding action, slight or minor injury could result.

This safety advice refers to the remaining risks for certain working steps and helps you to work safely with the machine. In addition to the safety advice above, there are also the hint and the tip.

HINT



Indicates a possibly harmful situation. If you do not take avoiding action, the machine could be damaged.

TIP





Indicates application tips and other particularly useful information.

5 DESCRIPTION OF THE MACHINE

5.1 Grinding material in feed

The grinding material can be fed into the granulator in the following ways:

- Manual in feed of the grinding material directly into the in feed hopper.
- Manual in feed of the grinding material with the help of an additional in feed device (e.g. nip roll feed device).
- Automatic in feed of the grinding material by means of an additional in feed device (e.g. conveyor belt).

 WARNING	
	The machine is not allowed to manually feed cut film, fibers, strands or similar materials. Risk of to cause entanglement

5.1.1 In feed hopper

The grinding material in feed ensues via an in feed hopper, which is formed so that the grinding material can be delivered correctly and safely. A splashguard at the input opening prevents thrown-back parts being able to escape. The grinding material in feed can take place manually or with the help of an additional in feed device.

5.1.2 Additional in feed device

If your machine has an optional in feed device such as roller feeder or conveyor belt please refer to the additional information about the accessories in the appendix.

ORIGINAL INSTRUCTION


PART A: Basic machine

Slow speed Granulator A 30 Series

5.2 Base frame

Illustration:

- (1) Base frame
- (2) Gear motor
- (3) Hopper
- (4) Cutting chamber
- (5) Hand winch
- (6) Anti vibration pads
- (7) Control panel

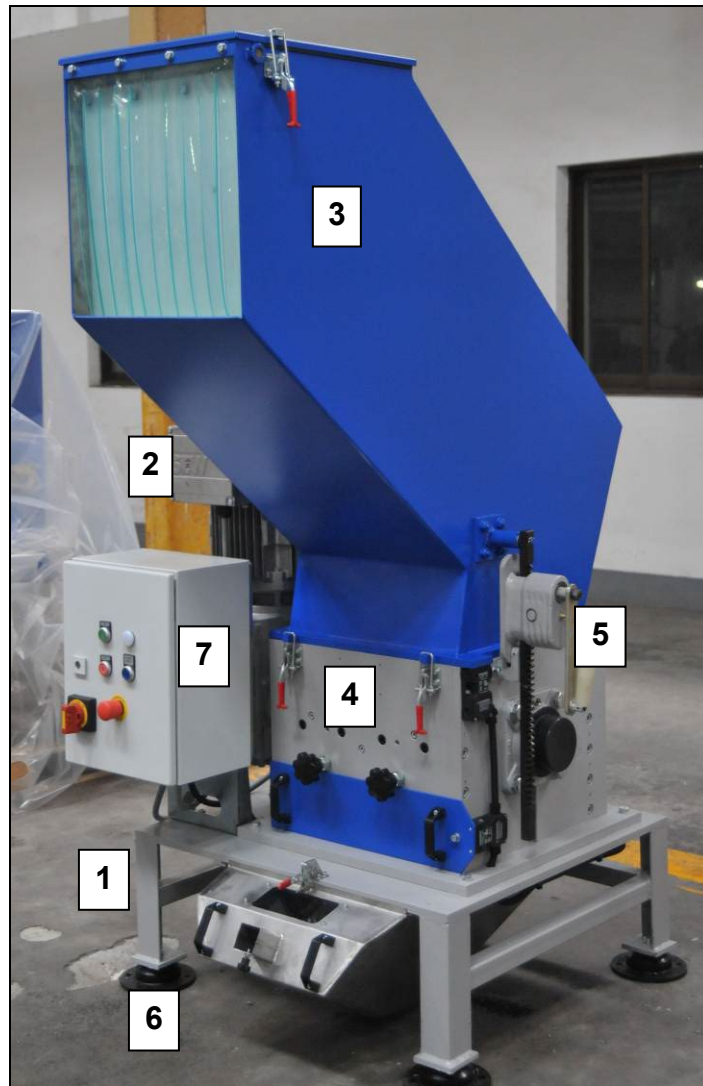

The granulator, the suction trough and the drive motor are mounted on the base frame.

The base frame is equipped with anti vibration pads.

5.3 Drive

The drive of the rotor ensues by means of an electric helical gear motor. The motor is flanged on the cutting chamber.

Please observe the operation manual from the manufacturer!

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

5.4 Granulator upper section/hopper

The hopper can be opened by hand for maintenance work and for cleaning. It is connected with the granulator lower section by means of a joint.

It can be opened with the mounted hand winch.

Illustration:
Hopper (opened)



ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

5.5 Granulator lower section

The cutting chamber is mounted onto the base frame. The motor is flanged onto the cutting chamber. On the motor shaft the rotor stars are mounted. The end of the drive shaft sits in a flange bearing, which is mounted on the cutting chamber. The bearings lie outside the grinding chamber and are sufficiently sealed off against penetrating dirt.


The stator knives which are installed in the cutting chamber are easily accessible and simple to install and dismantle.

The ground material falls through a screen into the suction trough mounted underneath the rotor and can be sucked off from there.

5.5.1 Rotor and cutting knives

Abbildung:

- (1) Stator knives
- (2) Rotor knives
- (3) Scraper
- (4) Screen
- (5) Screen holder
- (6) Housing flap
- (7) Screen holder support screws

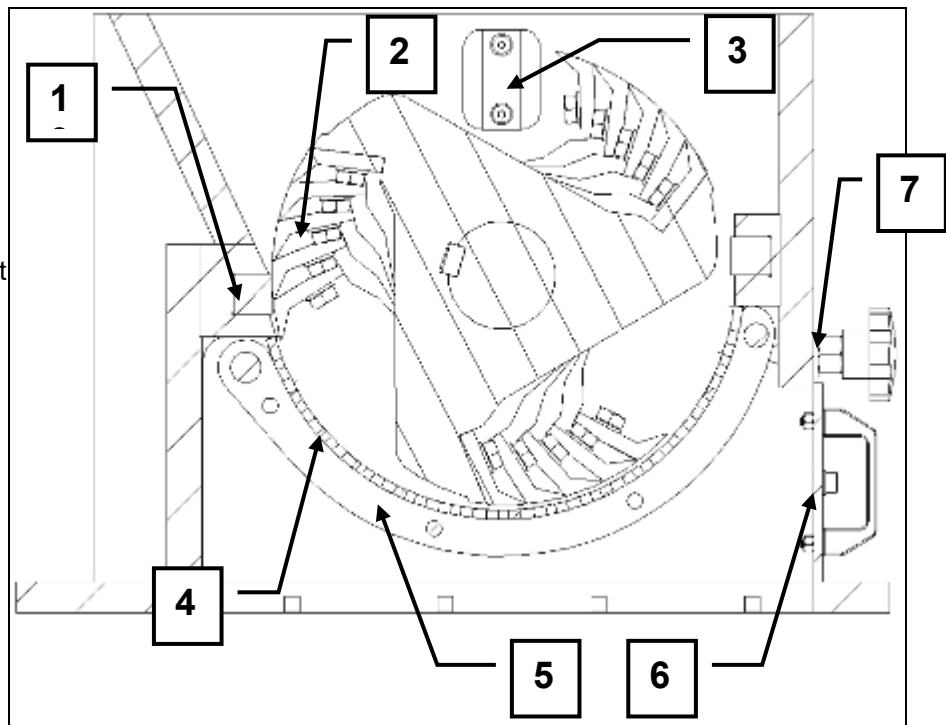

The material is ground between the knives assembled on the rotor and the stator knives which are mounted in a fixed position in the housing.

Scrapers are placed on both side walls of the cutting chamber.

The design of the rotor has a significant influence on the quality of the grinding process and its results. The rotor construction, the type of knife mounting and the number of knives have all been exactly matched to your task allocation.

The rotor is accessible after opening the hopper.

ORIGINAL INSTRUCTION

PART A: Basic machine


Slow speed Granulator A 30 Series

5.5.2 Screen and screen support

The screen lies in the screen support below the rotor. This screen support is arranged on bearings which can be pivoted and screwed into the working position with the granulator lower section.

Illustration:

- (1) Screen
- (2) Screen support
- (3) Screen support spindles

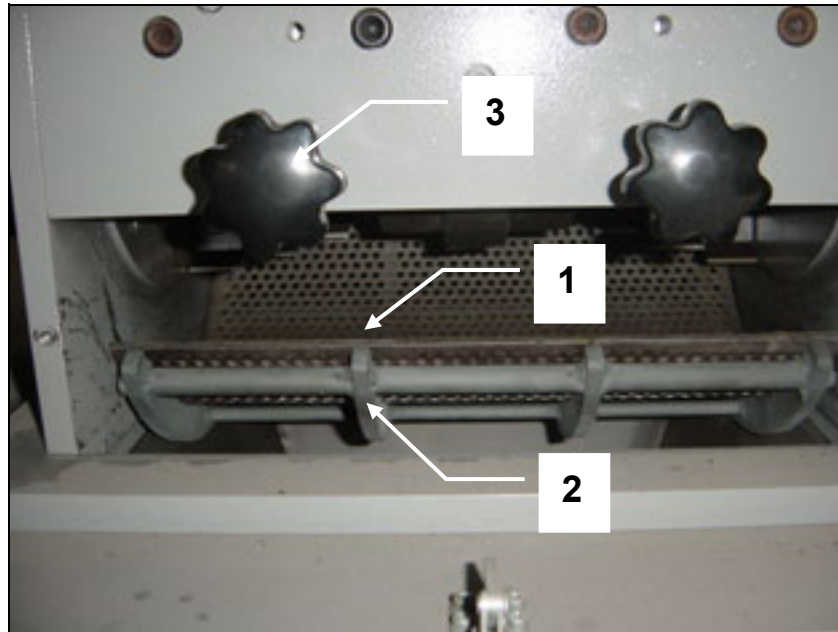

The screen is slightly larger in its radius than the cutting circle of the rotor knife. The screen perforation is selected according to the desired grain size of the grinding material.

All grinding material parts which are smaller than the screen perforation fall through the screen into the suction trough. The screen is replaceable and can be taken out after the suction trough and the screen holder are taken out.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

5.6 Discharge of grinding material

Illustration:

Suction trough



The ground material is sucked off by means of a blower (Accessories) out of the suction trough of the granulator. If the granulator is equipped with a high frame, the ground material can be collected in a box below the cutting chamber.

6 INITIAL STARTUP

6.1 General Advice

All work related to start-up may only be carried out by trained specialist personnel.

Check the machine for possible transportation damage or other damage. Should you determine damage, have this confirmed by the freight company and please report this to us in writing immediately after delivery. When starting up for the first time and after setting up ready for service, you must carry out the necessary checks according to the chapter *Machine check prior to initial* .

6.2 Requirements at the application site




The site of application for the machine must exhibit the following features:

- Enclosed space.
- The ground must exhibit sufficient load-bearing capacity (you can find the machine weight in the *Chapter Technical Data*). The unevenness of the ground surface may not exceed 5 mm.
- The machine must be freely accessible from all sides.
- There must be sufficient room available for operating and service personnel.
- Spatial requirements: see *Assembly drawing*. All hinged parts must be able to be opened completely.
- Vibration-free environment.
- The application site must be well-lit.
- The machine may not be exposed to direct radiation caused by radiators or the sun.
- Room temperature: +5° to +40°C
- Relative atmospheric humidity according to DIN 40040:
15 to 70 % (indoor)
By humidity levels higher than 70 %, apply anticorrosive agent to the metallic-finished machine parts. Insulation for the tropics is also necessary.
- The machine may not be operated within range of static discharges or strong magnetic fields as this could lead to faults in the machine control system.



ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

6.3 Unloading and installing the machine

The machine or the machine components are packed so that they arrive with you safely. To see how the machine is packed or should be packed, please see the *Packing plan*. For unloading the packaged machine or machine components you may use a suitable crane or forklift truck.

 WARNING	
	Suspended load. Falling loads can cause serious injury or death. Only use a crane or a forklift truck which is suitable for the weight and the dimensions of the load.
	Also use a suitable stopping means and pay attention to the gravity centre location. Do not step under the suspended load. Wear a safety helmet in addition to your basic protective gear.

- ↓ After unloading, remove the packaging material and all transportation safety devices.
- ↓ In the case that the granulator and its accessory components have been delivered as individual items, mount these at the site of application using the mounting screws sent with the delivery exactly in accordance with the data given in the *Assembly drawing*. Only in this way can it be guaranteed that there are sufficient delivered piping parts, tubing and cable connections and that the linking places match.

 WARNING	
	Overtipping or falling machine. Serious injury or death can result. In the case that you wish to erect the granulator over a pit, on a frame or on a platform, you must secure the machine by putting mounting screws through the holes on the mounting pads (see <i>Assembly drawing</i>). If assembling the machine on solid ground, this safety device is not absolutely necessary.

- ↓ Align the machine horizontally with the help of a suitable spirit level.
Do not use blocks to place underneath the machine, use instead metal strips in order to prevent buckling of the base frame. Make sure that an even distribution of weight is achieved on all the points of support.

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

6.3.1 Installing the machine with frame Nr 1

For a Safe installation according machine directive 2006/42/EC, if using hopper Nr 3, the machine need installed with safety guards according ISO EN 13857 (4.2.2.1.2 Table 2) with following safety distances for a safe operation.

Illustration:
Front fence
installation according
ISO13857


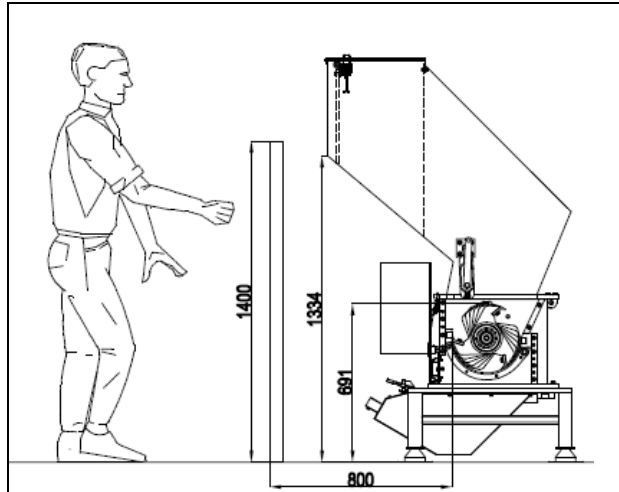



Illustration:
Back fence
installation according
ISO13857 (only hopper
NR 2)



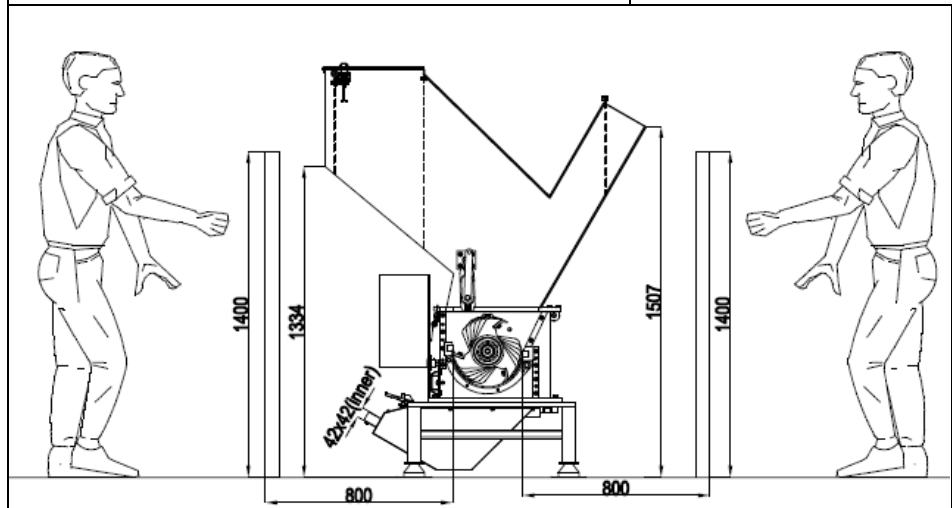

1. Move the control box out of fence; operator can control the machine in the safety place
If the operator need enter the fence to check the machine.
2. Please install a door with interlock guard with guard locking, to avoid the operator enter the fence and machine still running

⚠ DANGER	
	<p>Rotating knives. Can cause serious cutting and crushing injuries, possibly leading to death. You shall not stay between safety fence and machine during the machine is running.</p>



ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

6.4 Electrical connection

 WARNING	
	<p>Dangerous voltage. Touching live parts can lead to serious injury or death. All work which relates to the electricity of the machine may only be carried out by trained electricians. Observe the currently effective EMC regulations.</p>

Voltage, current, frequency and protection are marked on the *Type plate*. The voltage tolerance is $\pm 10\%$.

- ↓ For machines, which have been supplied none pre-wired by VIRTUS the electrical connection, is to be carried out in accordance with the enclosed *Wiring diagram* in the terminal box. When doing this, the regulations of the local electricity authority are to be adhered to. The cable cross section required is to be determined according to the rated capacity of the units.

 WARNING	
	<p>When operating specific equipment caution must be taken to prevent electrical shock. Installation, service, alterations and or modifications must only be done by qualified personal and with up most safety. Not conforming to the requirements could result in bodily injury, death or costly damage.</p>

HINT



Alterations to the wiring diagrams from VIRTUS require our approval. Failure to do this will exclude all guarantee claims.

The wiring schematics are located in the control panel in the event that the control panel is a part of the delivery.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

Connection of Emergency Stop button

The machine may only be operated with installed Emergency Stop buttons. In the case that no Emergency Stop buttons have been installed at the factory, an Emergency Stop button must be installed at the control cabinet, the second at the grinding material in feed.

Checking the rotational direction

Checking the rotational direction is part of the machine checks before initial start-up (see chapter of same name). The steps prior to this check must be carried out beforehand.

- ↓ Switch the machine on and then immediately off again for a short time (see *Switch on machine* and *Switch off machine*).
- ↓ Observe whether the discharge air fan in the drive motor is rotating in the direction of the attached direction arrow.

HINT



If running in the wrong direction, reconnect the motor connection immediately. Damage to the machine will result from operation in the wrong direction.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

6.5 Machine check prior to initial start-up

Check	See chapter
1. When granulator is open, check the knife mounting screws using a torque wrench.	<i>Replacing and checking the cutting knife mountings.</i>
2. Search the grinding chamber for foreign matter.	<i>Cleaning the machine.</i>
3. Open the suction trough on the housing lower section and check whether the screen has been inserted in accordance with the regulations.	<i>Emptying the screen</i>
4. Close granulator upper section and fasten screws tightly.	<i>Opening and closing the granulator.</i>
5. Examine in feed device (accessories) for foreign matter.	<i>Part B: Accessories.</i>
6. Check that the <i>Emergency Stop buttons</i> are unlocked.	
7. Check all safety devices for proper functioning.	<i>Checking the protective devices.</i>
8. Switch on machine for a short time and check rotational direction. The rotational direction can be seen at the discharge air fan of the drive motor (observe running direction arrow).	<i>Installing the machine.</i>
9. Allow machine to run for approx. 10 minutes without grinding material.	<i>Switch on machine.</i>
10. Connect material blower (accessories) and in feed device (accessories), check rotational direction of blower.	<i>Part B: Accessories.</i>
11. Feed grinding material uniformly. Too much grinding material can lead to overload of the machine.	<i>Manual in feed of grinding material.</i>
12. If necessary, check the temperature of the ground material.	

7 OPERATION

Have you read and understood the operation manual, in particular the safety advice in the chapter on?
You may not operate the machine until you have done so!

TIP



Should faults occur during work with the machine, please observe the advice in the chapter *Troubleshooting*.

7.1 Machine checks before switching on the machine

Check	See
1. The knives are properly set and the screws are tightened with the specified torque.	<i>Replacing and checking the cutting knife mountings.</i>
2. The screen is inserted into the screen support in accordance with the rules and the screen support is held fixedly at the end position due to the tightened mounting screws.	<i>Emptying the screen. Replacing the screen.</i>
3. The grinding chamber is free of foreign matter.	<i>Cleaning the machine.</i>
4. The suction trough below the screen support is closed.	<i>Emptying the screen. Replacing the screen.</i>
5. The hopper is closed.	
6. All safety devices including those of the installed grinding material in feed and discharge devices are checked and operative.	<i>Checking the protective devices.</i>

7.2 Switch on machine



1. Switch on the grinding material discharge device (accessories).
2. Switch on the granulator (main switch to 1).
3. Switch on the grinding material in feed device (accessories).

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

7.3 Switch off machine

- 1. Switch off the grinding material in feed device (accessories).
- 2. Wait until the remaining grinding material has been ground, and then switch off the granulator, (main switch to 0).
- 3. Switch off the grinding material discharge device (accessories).

7.4 Manual in feed of grinding material

 DANGER	
	<p>Rotating knives. Can cause serious cutting and crushing injuries, possibly leading to death. Do not reach into the in feed hopper or lean in whilst the rotor is running (pay attention to the 3 minute run down time). Only use approved grinding material.</p>

↓ Throw the grinding material into the grinding chamber through the splash guard.




If in your design of machine an additional in feed device is installed, please observe the additional information for work with and on the in feed device *Part B: Accessories*.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8 MAINTENANCE

8.1 Safety advice

Trained specialist personnel may only carry out work included within the framework of maintenance.
 Carry out the maintenance work within the specified time and document this. The machine will thank you for this by providing high reliability.

 WARNING	
	Danger caused by electrical voltage and starting the machine during maintenance work. Mortal danger.
	Therefore, as a basic rule when carrying out maintenance work: Main switch to 0, safeguard using padlock and attach a warning sign.

8.2 Maintenance plan

The tasks for maintenance work are described in detail in this chapter.

Maintenance work	Every Day	Every Week	Every Month
Check protective devices for proper functioning.	x		
Clean machine.			x
Check cutting knife mountings.	x		
Check the main bearings (bearing clearance, lubricant renewal).			x
Lubricant replacement, lubricant renewal	See Lubrication intervals:		
Check "V"-belt tension force and "V"-belt condition.		X	
Check condition of cutting knives.	x		
Check all screws of the machine for a tight fit.		X	
Check wearing parts.		X	

Yearly maintenance

The purpose of yearly maintenance of the machine is primarily to check the general condition of the machine and to arrange for the supply of any necessary replacement parts in good time. A service engineer from VIRTUS EQUIPMENT can also carry this out on request.



ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.3 Checking the protective devices

For this, see also the chapter *Protective devices*.

Check the safety devices for:

- Stipulated condition,
- Stipulated location,
- Safe mounting,
- Stipulated function.

 WARNING	
	<p>Danger due to non-functioning protective devices. Serious injury or death can result.</p> <ul style="list-style-type: none">• Eliminate all defects before you put the machine into operation!• If defects occur during operation, stop the machine immediately and eliminate the defects!• Do not change or remove any protective devices. Do not put any protective devices out of action by modifying them.

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

8.4 Opening and closing the hopper

The hopper can be opened by hand for maintenance work and for cleaning. It is connected with the granulator lower section by means of a joint.


8.4.1 Opening the hopper

Proceed as follows:

- ↓ Switch off the granulator at the main switch, safeguard main switch using a padlock.
- ↓ Open the clamps
- ↓ Pivot the hopper downwards using the hand winch

Illustration:

- (1) Clamp
- (2) Hand winch

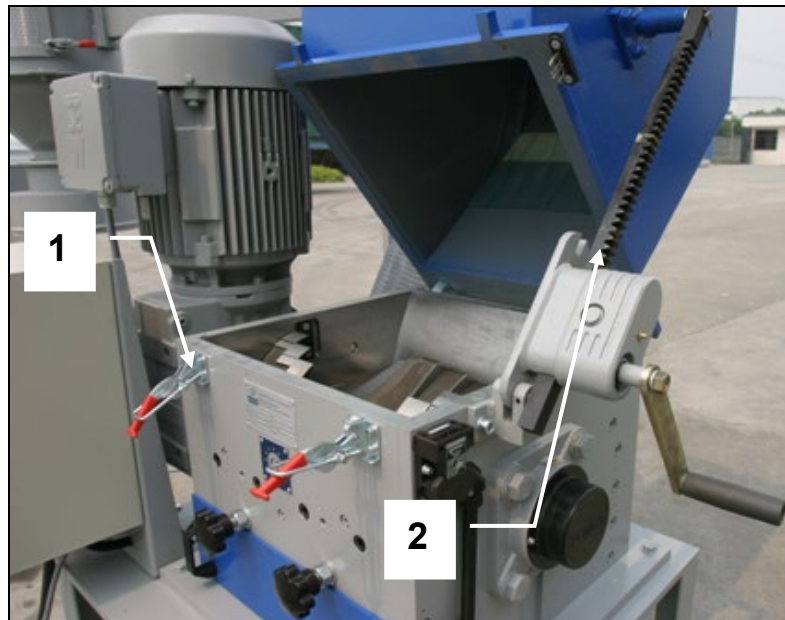



ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.4.2 Closing the hopper

Proceed as follows:



- ↓ Clean all surfaces between the hopper and the cutting chamber with a hand brush.
- ↓ Check that there are no objects in the grinding chamber.
- ↓ Close the hopper slowly to ensure that all parts fit properly.
- ↓ Tighten the clamps.
- ↓ Machine can be started again.

8.5 Cleaning the machine

 WARNING	
	Danger of cutting caused by sharp cutting knives, even when the rotor is at a standstill. Serious injury, particularly to hands and fingers, can result. Wear protective gloves.

Proceed as follows:

- ↓ Open hopper (see *Opening the hopper*).
- ↓ Remove the screen.
- ↓ Empty the screen.

 WARNING	
	Inhalation of grinding dust which is dangerous to the health. This can result in injury to the respiratory tract. Never blow out the grinding material residue, use suction instead. Wear breathing protection if necessary.

- ↓ Pre-clean the grinding chamber using a hand brush.
- ↓ Suck up the remaining grinding material residue using a suitable suction device.
- ↓ Remove clinging grinding material residue using a suitable wooden scraper.
- ↓ Put the screen into the screen support.
- ↓ Put the screen support into its working position
- ↓ Close the hopper.
- ↓ Rotate in the threaded spindle
- ↓ Machine can be started again

8.6 Replacing the main bearing

Due to the rotor stars are mounted directly on the drive shaft, the machine has only one flange bearing. The main bearing of the machine is dimensioned so that a bearing replacement is only necessary in exceptional cases. Dismounting and mounting of the bearing requires specialist knowledge and a careful working method. Therefore, in addition to the following advice, please observe the instructions given in the installation manual of the bearing manufacturer.

The bearing mounted in this machine is indicated in the spare parts list. A requirement for dismounting and mounting the bearings is a suitable pulling-off device.

8.6.1 Dismounting the main bearing

To dismount the bearings proceed as follows:

The parts which are marked with a piece number are illustrated in the drawings of the spare parts list!

- ↓ Loosen the bearing mounting screws and take them out.
- ↓ Open the set screw on the bearing.
- ↓ Remove the bearing off the rotor axis using a pulling-off device.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.6.2 Mounting the main bearing

To mount the bearings proceed as follows:

- ↓ Before mounting, clean the bearing surfaces and the shaft surfaces thoroughly and grease lightly.
- ↓ Attach the bearing housing to the rotor axis.

HINT



- During mounting, the mounting forces must always engage into the inner ring, otherwise the roller bodies will be damaged.
- The hardened bearing rings are sensitive to impact stress. For this reason, never hit directly on the rings with the hammer, use instead preferably a brass arbor or better still a striking bush (piping piece) made from a soft material. The inner diameter of the striking bush should be only slightly larger than the diameter of the bearing base.
- The bearing is then pushed onto the shaft using light blows. When doing this, the force of pressure must be evenly distributed on the circumference of the bearing ring.

- ↓ Fix mounting screws
- ↓ Carry out a test run.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.7 Lubricating the main bearings

An important requirement for high operational safety and long service life of the arrangement of bearings is the correct lubricant supply. Every VIRTUS machine is greased and checked in test runs before delivery.



HINT

Unsuitable lubricant, lubricant deficiency, excessive lubrication or impurities in the lubricant lead to overheating and thus extreme wear of the bearings.

8.7.1 Lubrication intervals:

Relubrication of Y-bearing units is only required if

- are exposed to high humidity or severe contamination
- have to carry high loads
- have to run at high speeds or at temperatures above +55 °C for longer time

relubrication is required to enable the whole Y-bearing service life.

The relubrication interval t_r can be estimated from the diagram 1 as a function of the rotational speed n (r/min), the mean diameter of the bearing d_m (table) and the operating temperature (°C). The recommended intervals correspond to a time when 90% of the bearings are still reliably lubricated, and represent L_{10} grease life. When the L_{10} grease life is equivalent to or higher than the L_{10} basic rating life of the Y-bearing or Y-bearing unit, bearing or unit can be considered as being lubricated for life and relubrication is not required.

The intervals obtained from the diagram 2 are valid for Y-bearings and Y-bearing unit


- on horizontal shafts
- in stationary machines
- for operating temperatures between +40 and +55 °C
- at low loads ($C/P \geq 15$).

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

Illustration:
Diagram 1

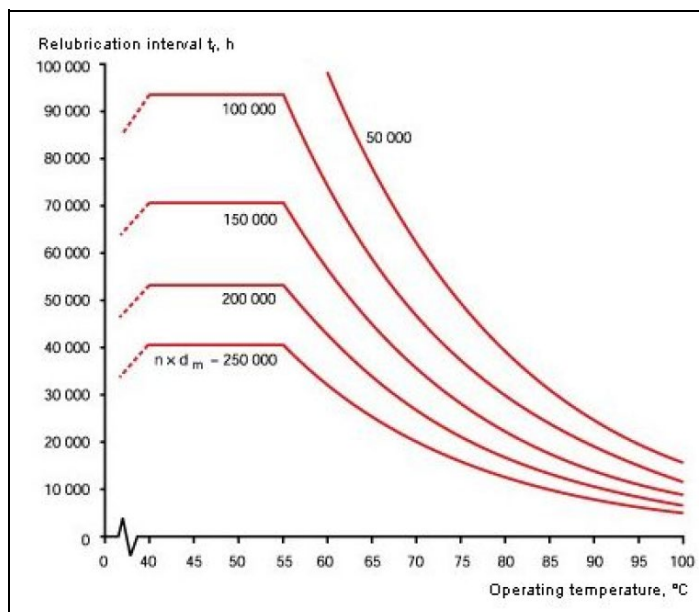

Vibrations have an influence on the grease life too. The extent cannot be quantified exactly but it is noticeable at rising operating temperatures. Also when the operating temperatures are below +40 °C for longer periods, the grease life is shortened because the oil separation is reduced.

The values for reducing the relubrication intervals are estimated values.

In cases where machines and equipment are used for a limited period of time, it is recommended that they should be relubricated at the end of the operational period, i.e. immediately before being laid up.

8.7.2 Check lubricant quality

You can judge whether the lubricant needs to be replaced by checking for the following features:

- change in consistency,
- discolouration,
- degree of soiling.

8.7.3 Replacing or refilling lubricant

HINT



When relubricating, the grease should be pressed in slowly to the running bearing until fresh grease escapes from the seal. Avoid excessive pressure as this can damage the seals.

To find out which lubricants from which manufacturers you can use, look in the List of lubricants.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

Refilling lubricant

For relubrication of standard Y-bearing units the use of SKF grease LGWA 2, which is fully compatible with the original grease, is recommended. The multipurpose SKF greases LGMT 2 and LGMT 3 are also compatible with the original grease and may also be used for relubrication.

Illustration:
Grease nipple



ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.7.4 List of lubricants

Country of manufacture / manufacturer	Roller bearing grease
ARAL	ARAL Grease HL 3
BP	BP ENERGREASE LS 3
CASTROL	CASTROL SPHEEROL AP 3
ESSO	Beacon 3
FUCHS	FUCHS Grease 1200 FUCHS Grease FWA 220
SHELL	SHELL Alvania Grease 3
MOBIL-OIL	MOBILUX 3
WISURA	WISURA Liba L 3
Zeller & Gmelin	ZET GE Grease M 50
FAG	FAG L 71
ANTAR Petroles de l'Atlantique	ROLEXA
Holland, Beverol	Beverol Multi Purpose Grease
Italy, Agip	AGIP Grease 33 FD
Swede, NYNÄS	Nynäs FI 3-42

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.8 Replacing the screen

In order to keep the throughput of the granulator and the quality of the grinding material constant, the condition of the screen must be checked regularly.

The screen may be damaged, dirty or not suitable for the grinding material:


- Screen holes too fine: overheating of the grinding material.
- Screen holes too course: parts in ground material which are too big.

Proceed as follows:

- ↓ Switch off the granulator at the main switch, safeguard main switch using a padlock.
- ↓ Open the housing flap.
- ↓ Unfasten the screen support spindles while holding the screen support.
- ↓ Lower the screen support
- ↓ Remove the screen.
- ↓ Put new screen into the screen support.
- ↓ Put the screen support into the working position and fasten the spindles.
- ↓ Fix the housing flap.
- ↓ Granulator can be started again

Illustration:

- (1) Screen
- (2) Screen support
- (3) Screen support spindles

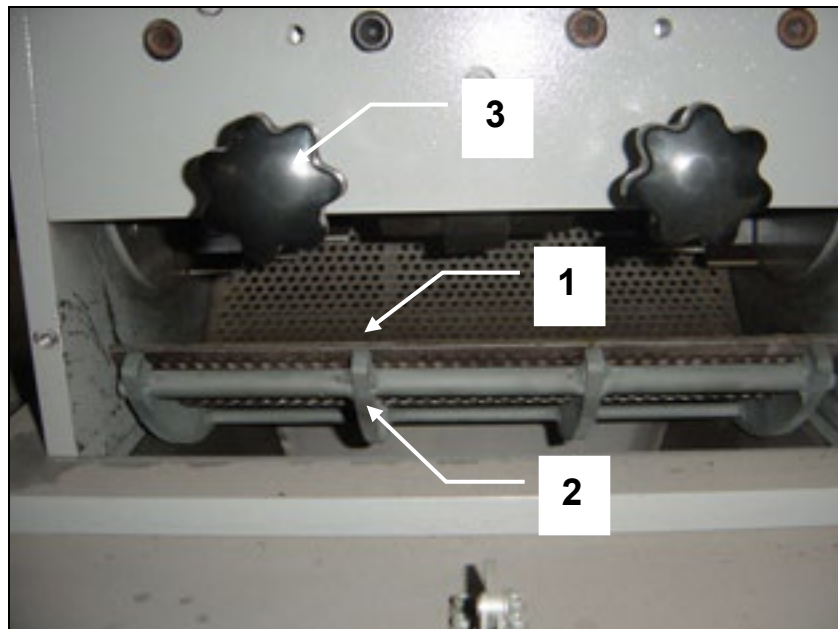

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.9 Working on the cutting knives

In the case of granulators, the correct grinding properties, correct setting and mounting of the cutting knives are important factors to ensure perfect functioning and economic operation of the machine.

8.9.1 Replacing and checking the cutting knife mountings

Due to their function, certain machine parts are subject to stress in their operating state as a result of vibrations, which can lead to loosening of the screw connections. Therefore, it is absolutely necessary to check the cutting knife mounting screws in accordance with the *Maintenance plan*.

- ↓ Tighten the mounting screws on the cutting knives using a torque wrench which is set to the required torque for the screw size.
The required torque for the knife fixing bolts is 145 Nm.



You can find out the required torque from the following table. Take note too that the tightening capacity decreases of screws which have been loosened and tightened again several times. New screws of the same material quality must therefore replace the cutting knife mounting screws after they have been loosened and tightened several times.

Torque:

Bolt type	Grade 8.8		Grade 10.9		Grade 12.9	
	Nm	lbf ft	Nm	lbf ft	Nm	lbf ft
M8	25	18.4	35	25.8	41	30.2
M10	49	36.1	69	50.9	83	61.2
M12	86	63.4	120	88.5	145	106
M16	210	154	295	217	355	261

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.9.2 Checking the condition of the cutting knives


 WARNING	
	<p>Danger of cutting caused by sharp knives, even when the rotor is at a standstill. Serious injury, particularly to hands and fingers, can result. Wear protective gloves.</p>

The cutting knives become blunt after a certain number of operation hours. Therefore they should be checked regularly.

Using blunt knives has the following consequences:


- Decreased grinding capacity.
- Increased current consumption of the drive motor.
- Inexact cut.
- Overheating of the ground material.

Rotor knives:

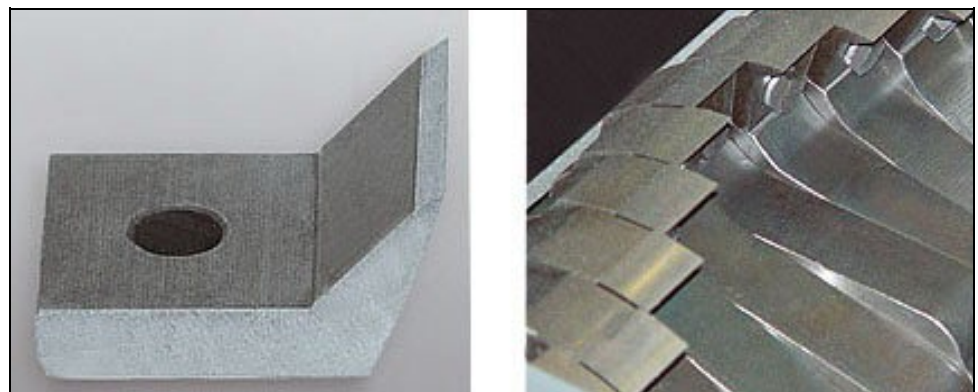

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series


8.9.3 Dismounting the cutting knives

⚠ WARNING	
	Danger of cutting caused by sharp knives, even when the rotor is at a standstill. Serious injury, particularly to hands and fingers, can result. Wear protective gloves.

Proceed as follows:

Illustration:

- (1) Rotor knife
- (2) Knife mounting screws

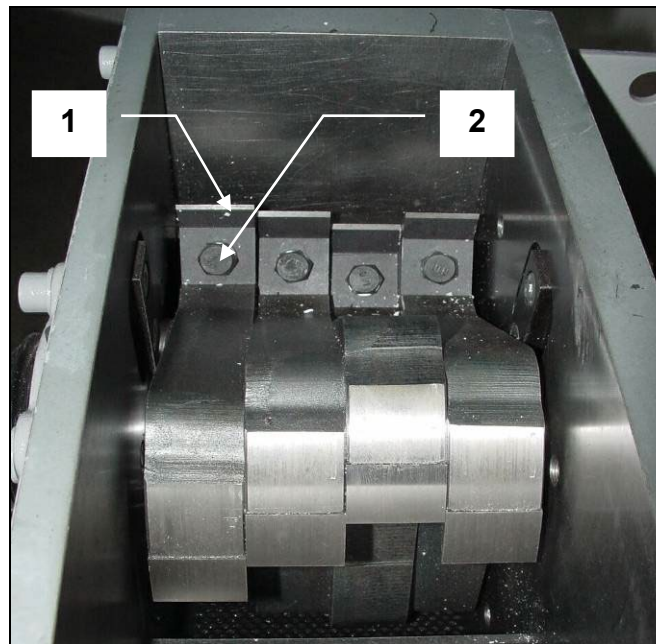


- ↓ Open the hopper (see *Opening the hopper*).
- ↓ Open the housing flap.
- ↓ Remove screen.
- ↓ Safeguard the rotor against torsion.
- ↓ Loosen the rotor knife mounting screws.
- ↓ Take out the knife mounting screws and rotor knives.
- ↓ Loosen the stator knife mounting screws.
- ↓ Take out the knife mounting screws
- ↓ Put in two screws into the thread and push out the stator knives
- ↓ Take out stator knives

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series



Illustration:

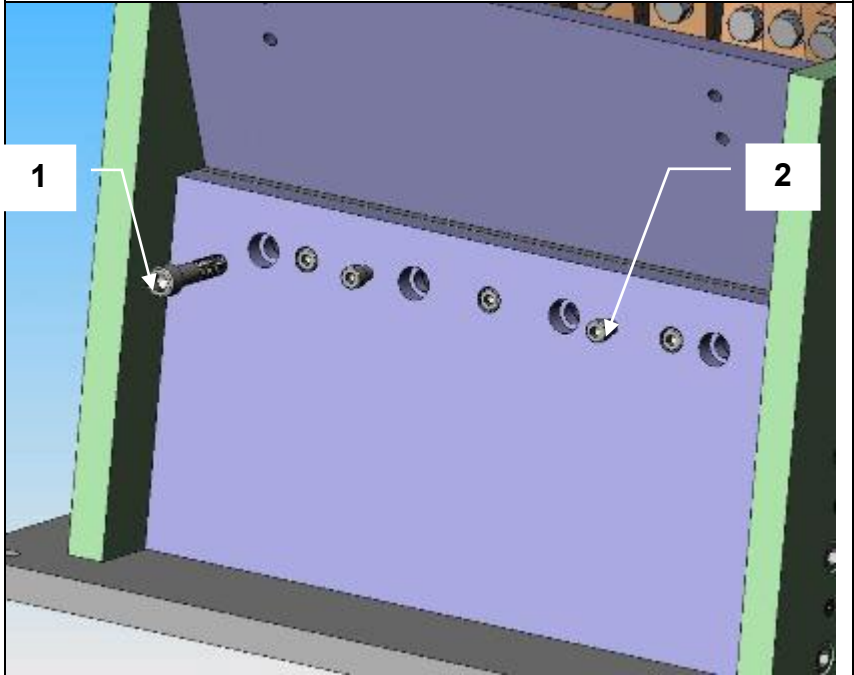- (1) Stator knife fixing bolt
- (2) Screw for push out stator knife



ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.9.4 Mounting the cutting knives

 WARNING	
	<p>Danger of cutting caused by sharp knives, even when the rotor is at a standstill. Serious injury, particularly to hands and fingers, can result. Wear protective gloves.</p>

HINT



The cutting knives, in particular the rotor knives, should only be sharpened or replaced in sets. There is a danger of balance error if a combination of rotor knives from different knife sets is used.

Proceed as follows:

- ↓ Clean the knife supporting surface and threaded holes.
- ↓ Insert sharp knives and push against the setting surface.
- ↓ Screw in the mounting screws DIN933/M8x20/12.9 and tighten using torque wrench.

The required torque for all rotor knife mounting bolts is 145 Nm (also see the table under *Replacing and checking the cutting knife mountings*).

- ↓ Insert stator knives
- ↓ Screw in the mounting screws DIN912/M12x40/12.9 (front) and DIN912/M12x55/12.9 (back) and tighten using torque wrench.
The required torque for all stator knife mounting bolts is 145 Nm (also see the table under *Replacing and checking the cutting knife mountings*).
- ↓ **Check whether the cutting gap is correct and whether the cutting knives do not collide as you turn the rotor by hand.**

TIP



Stator knives from VIRTUS have four symmetrical cutting edges.
This makes it possible to turn the knives and only to sharpen after every fourth knife change.

- ↓ Remove tools and other objects from the grinding chamber.
- ↓ Close the hopper.
- ↓ Fix screen, screen holder and suction trough
- ↓ Switch on the granulator for a short time without grinding material and listen for noises. If you hear unusual noises, determine the cause and eliminate it.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.9.5 Sharpening cutting knives



TIP

Specialist sharpening of the cutting knives is part of the service offer of VIRTUS.

 **WARNING**



**Danger of cutting caused by sharp knives, even when the rotor is at a standstill.
Serious injury, particularly to hands and fingers, can result.
Wear protective gloves.**



HINT


The cutting knives, in particular the rotor knives, should only be sharpened or replaced in sets. There is a danger of balance error if a combination of rotor knives from different knife sets is used.

Proceed as follows:


- ↓ Dismount the cutting knives (see *Dismounting the cutting knives*).
- ↓ Sharpen the cutting knives.
A specialist in accordance with the sharpening plan using particular care should uniformly sharpen the cutting knives mechanically. It is important to make sure that sharpening takes place with small grinding allowance and sufficient coolant supply. The sharpening process is finished when the cutting edge is sharply cut. Not all indentations must be ground out, otherwise the number of possibilities for sharpening is unnecessarily reduced. For the sharpening process, use soft grinding wheels (Quality 40 H or 46 K). Knives, which have grinding cracks, are not to be reused due to danger of breakage during operation.
- ↓ Whet the cutting edges of the cutting knives using a whetstone.
By taking these measures, the service life of the cutting knives can be increased.
- ↓ Set the cutting knives (see *mounting the cutting knives*).
- ↓ Mount the cutting knives (see *mounting the cutting knives*).

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

Illustration: *Resharpener plan rotor knife*

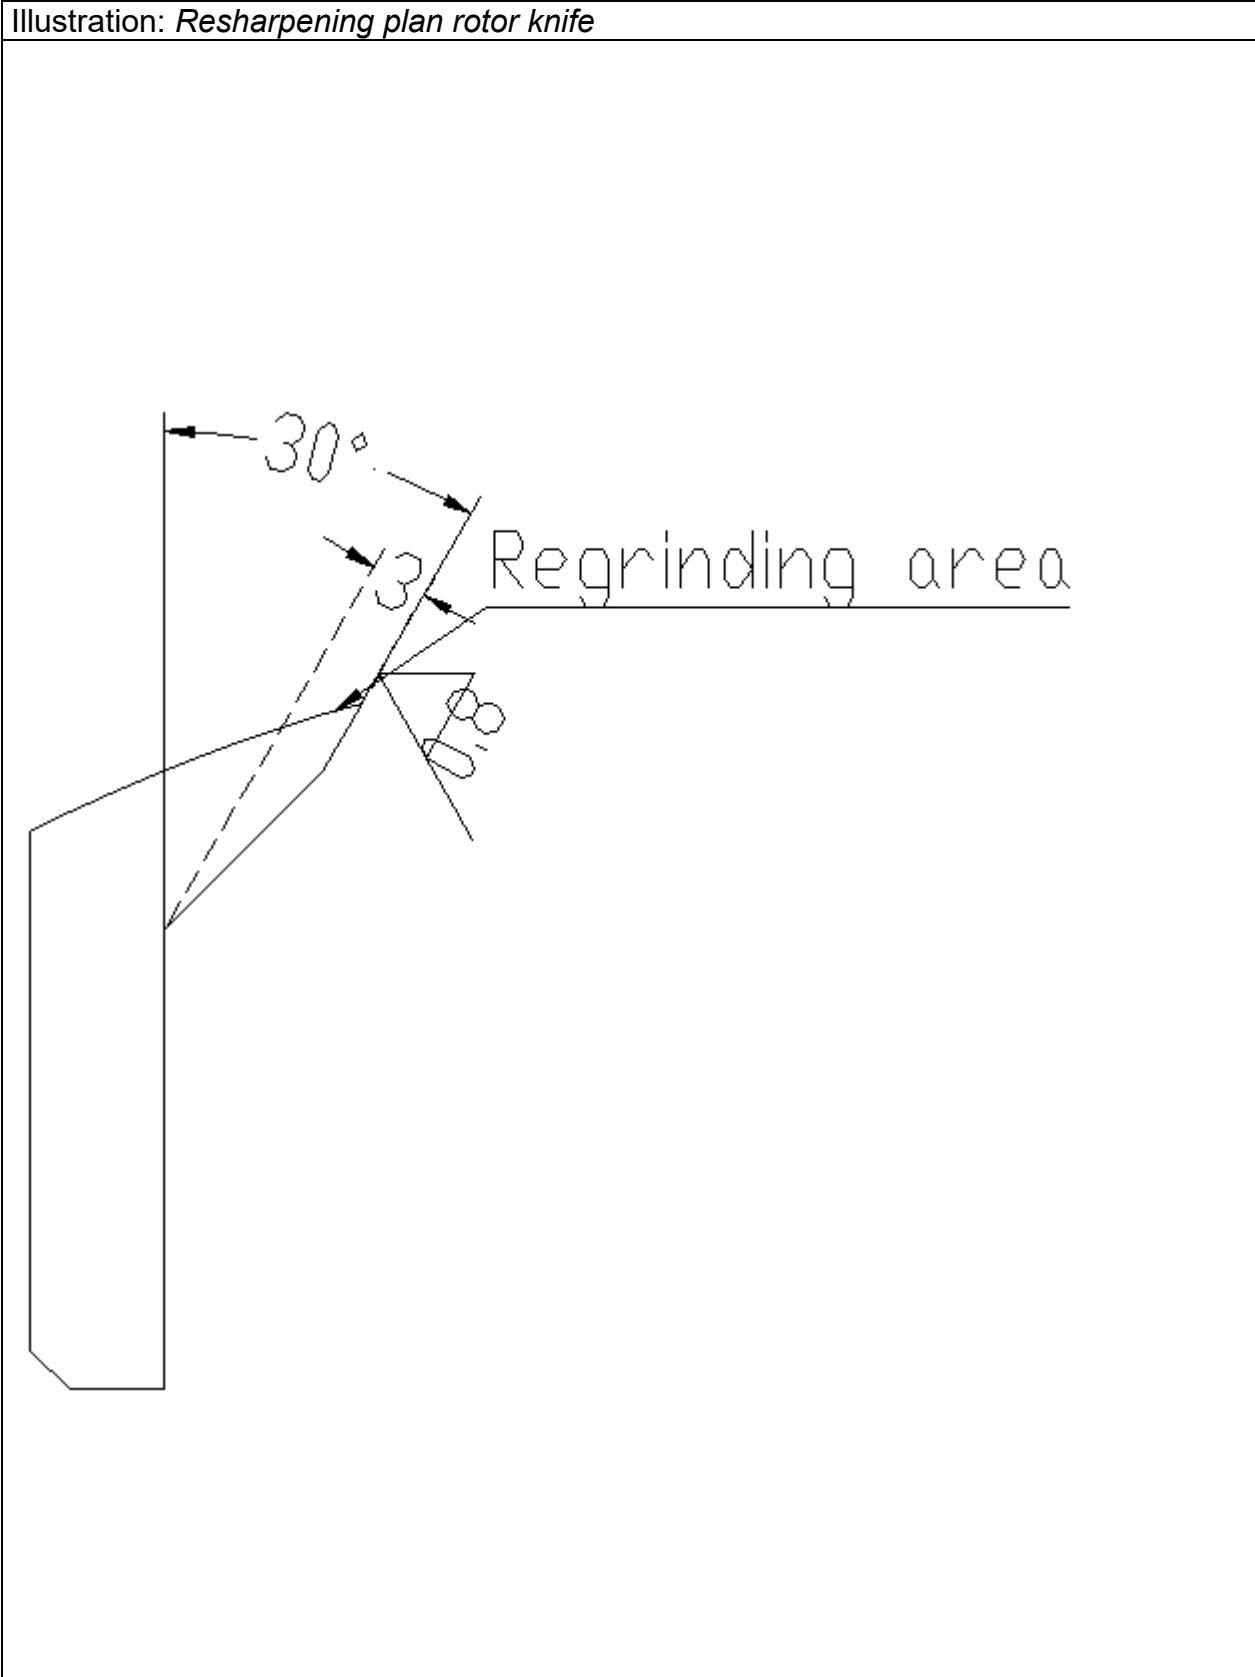

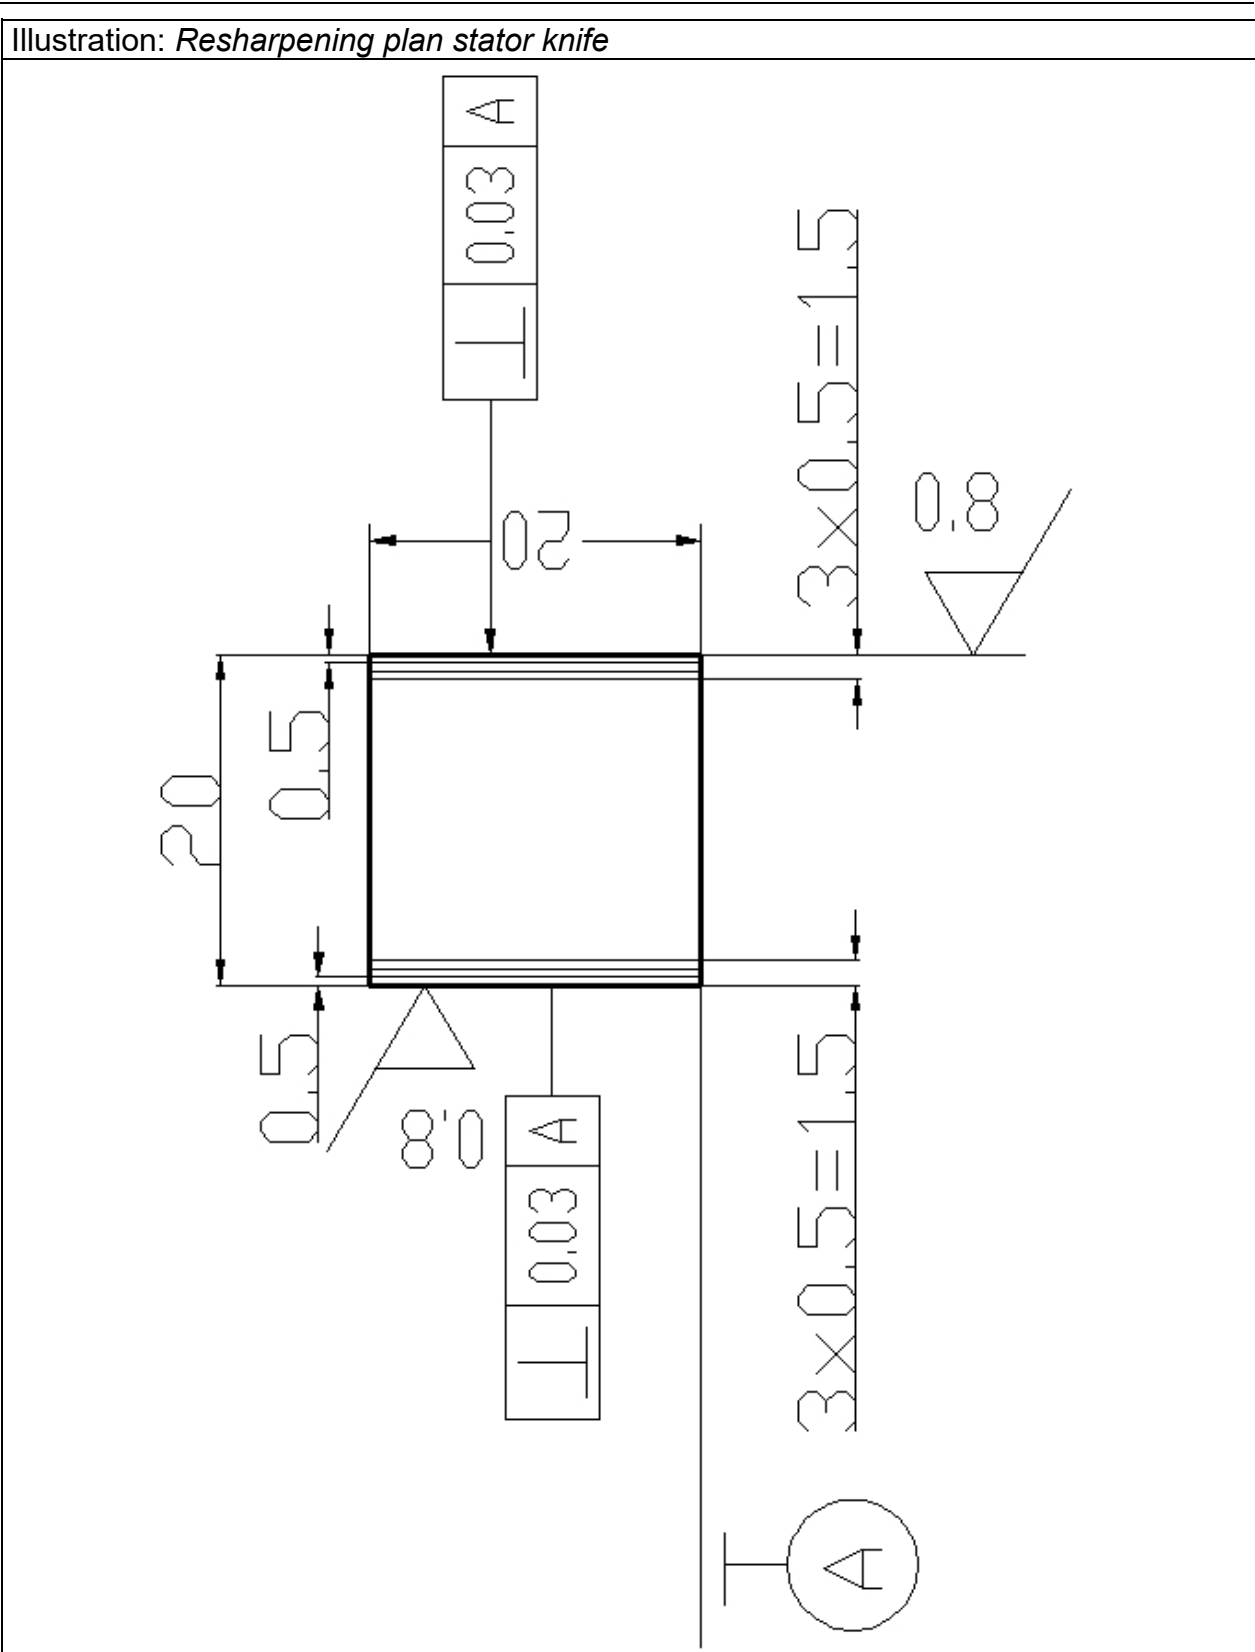

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series



ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

8.9.6 Transporting and storing the cutting knives

 WARNING	
	<p>Danger of cutting caused by sharp cutting knives. Serious injury, in particular to hands and fingers, can result. Only transport and store the cutting knives packaged. Grease the cutting knives well, so that they do not rust. Protect the cutting edges with doubled cardboard and use adhesive tape to safeguard the knives against slipping out of the sides of the sheath.</p> <p>After unpacking, you must degrease the cutting knives so that they can be gripped safely.</p>

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

9 TROUBLESHOOTING

9.1 Machine blocks or switches itself off

No.	Possible causes	Remedy required
9.1.1	Too much feed material.	Reduce grinding material in feed.
9.1.2	Screen blocked.	Clean screen, check condition, if necessary select larger screen perforation.
9.1.3	Knife condition.	Check knives and sharpen or replace if needed.
9.1.4	Cutting gap.	Check cutting gap and set according to the instructions in this operation manual.
9.1.5	Suction trough blocked.	Empty suction trough
9.1.6	Current failure.	Check limit switch for defective contact. Check electrical connection, if necessary tighten limit switch.
9.1.7	Rotational direction of rotor.	Check motor and reverse polarity if necessary.

9.2 Rotor does not grip bulky material

No.	Possible causes	Remedy required
9.2.1	Knife condition.	Check and sharpen if needed according to the instructions in this operation manual.
9.2.2	Protruding bed knife.	Chamfer bed knives; consult with service department of VIRTUS.

9.3 Overheating of the grinding material

No.	Possible causes	Remedy required
9.3.1	Screen perforation too small.	Insert a screen with larger perforation.
9.3.2	Knives blunt.	Resharpen knives.

9.4 Unusual vibrations

No.	Possible causes	Remedy required
9.4.1	Rotor out of balance.	Weigh knives, balance rotor.
9.4.2	Bearing damage.	Check bearings, replace bearings if necessary.
9.4.3	Machine feet defective (wheels).	Check wheels and renew these if necessary.

9.5 Extreme cutter wear

No.	Possible causes	Remedy required
9.5.1	Bearing damage.	Check bearings, replace bearings if necessary.
9.5.2	Knife finish.	Check knife and sharpen or replace if necessary.
9.5.3	Wrong cutting angle.	Check cutting gap and set according to the instructions in this operation manual.
9.5.4	Foreign matter.	Fit feed device with a metal detector.

9.6 Bearings too hot

No.	Possible causes	Remedy required
9.6.1	Too much grease in bearing.	Reduce amount of grease.
9.6.2	Rubbing on housing sealing ring.	Check sealing ring, oil or replace.
9.6.3	Bearing damage.	Check bearings, replace if necessary.
9.6.4	No grease in bearing.	Lubricate bearing.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

9.7 Too many fines in grinding material

No.	Possible causes	Remedy required
9.7.1	Type of material.	Fit fines separator.
9.7.2	Screen worn.	Renew screen, possibly using manganese steel.
9.7.3	Unsuitable screen perforation.	Replace screen after consulting VIRTUS service department.

9.8 Cutting gap alters during operation

No.	Possible causes	Remedy required
9.8.1	Knife mounting screws not tight.	Retighten using torque wrench in accordance with table in operation manual.
9.8.2	Screw fatigue.	Fit new screws.
9.8.3	Supporting surfaces not clean.	Clean and de-rust supporting surfaces.
9.8.4	Threads in housing worn.	Fit new bushes in housing.

9.9 Screen damage

No.	Possible causes	Remedy required
9.9.1	Screen inserted wrongly.	Fit screen correctly.
9.9.2	Screen support buckled.	Replace screen support.

9.10 Granulator does not start

No.	Possible causes	Remedy required
9.10.1	Limit switches not activated.	Check position of limit switch and correct.
9.10.2	Main and control fuses.	Replace fuse.
9.10.3	Residue material in granulator.	Empty granulator before switching on.
9.10.5	Star delta connection.	Correct wiring on motor.

9.11 Granulator blocks when under load

No.	Possible causes	Remedy required
9.11.1	Feed too much.	Feed slowly.
9.11.2	Limit switch loose or wrongly set.	Reposition and tighten limit switch.
9.11.3	Fuse defective.	Replace fuse. Fit larger fuse. Only after consulting the service department of VIRTUS GmbH.
9.11.4	Motor fuse switches off - red indicator.	Reduce feed quantity of the grinding material, correct setting, replace fuse.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

10 STORAGE, DISPOSAL, TRANSPORTATION

10.1 Storage



Clean the machine (see *Cleaning the machine*). Preserve all polished metal surfaces using a suitable rust preventing agent. Store the machine in an enclosed, dry place. Cover the machine completely with a plastic sheet.




10.2 Disposal



Protect the environment.

The disposal of machines, machine components and process materials is partially subject to legal controls. More detailed information is given at the relevant administrative authority (e.g. regional and national Water Conservation Bureaux and Environmental Protection Agencies). Only deposit the material to be disposed of at authorized drop-off points.

10.3 Transportation

 WARNING	
	<p>Suspended load. Falling loads can cause serious injury or death. Only use a crane or forklift truck, which is suitable for the weight and dimensions of the loads.</p>
	<p>Also use suitable stopping means and pay attention to the gravity centre location. Do not step under the suspended load. Wear a protective helmet in addition to your basic protective gear.</p>

11 CUSTOMER SERVICE AND SPARE PARTS ORDERS



Should problems occur during operation of the machine or if you have general questions about the machine which this operation manual cannot answer, please do not hesitate to contact us. We would be pleased to help you further in order to solve your problem as quickly as possible.

You can identify the spare parts you require using the spare parts list. Please quote the following information when making your order so that we can deliver the spare parts to you quickly:

- Company name and address.
- Contact person.
- Machine type.
- Machine number.
- Piece number of the spare part.
- Spare part reference.
- Subject number.
- Order quantity.

Virtus Equipment
9120 Centerlinks Commerce DR., Unit 4
Fort Myers, FL 33912

Phone: +1-239-219-1500

E-Mail: PARTS@VIRTUS-EQUIPMENT.com

Internet: <http://www.VIRTUS-Equipment.com>

TIP



The easiest way to order your spare parts is to copy the spare parts list and to fill in the order amount after the respective spare part.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

12 SPARE PARTS LIST A 30 /40

Pos.	Pc	Description/Standard	Partnumber/SAP	Order
100		Machine complete	10000040	
101	1	#1 Standard hopper	20650000	
		#2 Standard hopper	20650800	
		#3 Standard hopper	20651400	
102	1	Cutting chamber	20660000	
102.1	1	Cutting chamber Part 1 – drive side		
102.2	1	Cutting chamber Part 2 – bearing side		
102.3	1	Cutting chamber Part 3 – front side		
102.4	1	Cutting chamber Part 4 – back side		
102.5	1	Cutting chamber Part 5 – base frame		
103	1	Suction #1	20666000	
104	1	Clamp PC-101B	80003290	
105	2	Clamp PC-431	80003300	
106	2	Scraper	80012560	
107	4	Bolts for scraper DIN7991 M6x12 8.8	80011610	
108	4	Anti vibration pad JSD500	80050115	
109	1	Hand winch 560mm	80004020	
110	1	Low Frame	20663000	
		High Frame	20664000	
111	2	Handle	80013120	
112	20	Screw DIN 912 – M 12 x 35 8.8		
113	12	Split pin ISO 8752 – 6 x 40 – A		
114	12	Split pin ISO 8752 – 10 x 40 – A		
115	14	Screw DIN 912 – M 10 x 25 8.8	20463400	
116	1	Front door for screen	80012890	
117	2	Screw DIN 912 – M 8 x 25 8.8		
118	2	Washer DIN125 – B 8		
119	1	Frame for PE BOX(High Frame)		
120	1	PE Box(High Frame)		
		optional		
121	1	Holder for cyclon frame		
122	1	Blower 0.55 kW		
123	1	Cyclone frame part 1(horizontal)		
124	1	Cyclone frame part 2 (vertical)		
125	1	Cyclon		
126	1	Air filter ø 300 x 2000		
127	1	clamp ø 250		
128	1	clamp ø 100		
129	1	Flaring ø 100 – 300		
200		Screen		
201	1	Screen support assembly	20662200	
202	1	Screen Ø 6	20672200	

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

203	2	Screen support spindle	20662000	
300		Bearing		
301	1	Bearing UCFS310	80003130	
302	1	Bearing Cover(plastic)	80012780	
303	4	Screw DIN 912 – M 20 x 45 8.8		
304	4	Washer DIN127 – B 20		
400		Drive		
401	1	Motor 7.5 kW 400V 50HZ	80020161	
402	4	Screw DIN 933 – M 16 x 40 8.8		
403	4	Washer DIN 127 – B 16		
500	1	Rotor assembly	20671600	
501	1	Round nut GB812 M60×2	80012970	
502	1	Clamping Washer GB858 ϕ 60	80012990	
503	1	Sleeve GSL3040-02-02-02	20660800	
504	1	Motor Key	80040294	
505	1	Rotor Key	20660900	
506	33	Rotor Knife	80001010	
507	33	Bolt DIN912 M12×30 12.9	80011180	
508	33	Washer DIN127-B 12	80010860	
509	1	Shaft		
600		Stator knife		
601	2	Stator knife	80001210	
602	4	Bolt DIN912 M12×40 12.9 (front)	80011210	
603	4	Bolt DIN912 M12×55 12.9 (back)	80011260	
604	1	Holder for front stator knife		
605	1	Holder for back stator knife		
606	6	Screw DIN 912 – M 8 x 25 8.8		
700		Electrical parts		
701	3	Safety switch AZ15zvrk-1476-1	80005560	
702	1	Control panel	10002040	

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

13 SPARE PARTS LIST A 30 /60

Pos.	Pc	Description/Standard	Partnumber/SAP	Order
100		Machine complete	10000040	
101	1	#1 Standard hopper	20650000	
		#2 Standard hopper	20650800	
		#3 Standard hopper	20651400	
102	1	Cutting chamber	20660000	
102.1	1	Cutting chamber Part 1 – drive side		
102.2	1	Cutting chamber Part 2 – bearing side		
102.3	1	Cutting chamber Part 3 – front side		
102.4	1	Cutting chamber Part 4 – back side		
102.5	1	Cutting chamber Part 5 – base frame		
103	1	Suction #1	20666000	
104	1	Clamp PC-101B	80003290	
105	3	Clamp PC-431	80003300	
106	2	Scraper	80012560	
107	4	Bolts for scraper DIN7991 M6x12 8.8	80011610	
108	4	Anti vibration pad JSD500	80050115	
109	1	Hand winch 560 mm	80004020	
110	1	Low Frame	20663000	
		High Frame	20664000	
111	2	Handle	80013120	
112	20	Screw DIN 912 – M 12 x 35 8.8		
113	12	Split pin ISO 8752 – 6 x 40 – A		
114	12	Split pin ISO 8752 – 10 x 40 – A		
115	14	Screw DIN 912 – M 10 x 25 8.8	20463400	
116	1	Front door for screen	80012890	
117	2	Screw DIN 912 – M 8 x 25 8.8		
118	2	Washer DIN125 – B 8		
119	1	Frame for PE BOX(High Frame)		
120	1	PE Box(High Frame)		
		optional		
121	1	Holder for cyclon frame		
122	1	Blower 0.55 kW		
123	1	Cyclone frame part 1(horizontal)		
124	1	Cyclone frame part 2 (vertical)		
125	1	Cyclon		
126	1	Air filter ø 300 x 2000		
127	1	clamp ø 250		
128	1	clamp ø 100		
129	1	Flaring ø 100 – 300		
200		Screen		
201	1	Screen support assembly	20662200	
202	1	Screen Ø 6	20672200	

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

203	3	Screen support spindle	20662000	
300		Bearing		
301	1	Bearing UCFS310	80003130	
302	1	Bearing Cover (plastic)	80012780	
303	4	Screw DIN 912 – M 20 x 45 8.8		
304	4	Washer DIN127 – B 20		
400		Drive		
401	1	Motor 11 kW 400V 50HZ	80020161	
402	4	Screw DIN 933 – M 16 x 40 8.8		
403	4	Washer DIN 127 – B 16		
500	1	Rotor assembly	20671600	
501	1	Round nut GB 812 M 60×2	80012970	
502	1	Clamping Washer GB 858 ϕ 60	80012990	
503	1	Sleeve GSL3040-02-02-02	20660800	
504	1	Motor Key	80040294	
505	1	Rotor Key	20660900	
506	48	Rotor Knife	80001010	
507	48	Bolt DIN912 M12×30 12.9	80011180	
508	48	Washer DIN127-B 12	80010860	
509	1	Shaft		
600		Stator knife		
601	4	Stator knife	80001210	
602	6	Bolt DIN912 M12×40 12.9 (front)	80011210	
603	6	Bolt DIN912 M12×55 12.9 (back)	80011260	
604	1	Holder for front stator knife		
605	1	Holder for back stator knife		
606	14	Screw DIN 912 – M 8 x 25 8.8		
700		Electrical parts		
701	3	Safety switch AZ15zvrk-1476-1	80005560	
702	1	Control panel	10002040	

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

14 SPARE PARTS LIST A 30 /80

Pos.	Pc	Description/Standard	Partnumber/SAP	Order
100		Machine complete	10000040	
101	1	#1 Standard hopper	20650000	
		#2 Standard hopper	20650800	
		#3 Standard hopper	20651400	
102	1	Cutting chamber	20660000	
102.1	1	Cutting chamber Part 1 – drive side		
102.2	1	Cutting chamber Part 2 – bearing side		
102.3	1	Cutting chamber Part 3 – front side		
102.4	1	Cutting chamber Part 4 – back side		
102.5	1	Cutting chamber Part 5 – base frame		
103	1	Suction #1	20666000	
104	2	Clamp PC-101B	80003290	
105	4	Clamp PC-431	80003300	
106	2	Scraper	80012560	
107	4	Bolts for scraper DIN7991 M6x12 8.8	80011610	
108	4	Anti vibration pad JSD500	80050115	
109	1	Hand winch 560mm	80004020	
110	1	Low Frame	20663000	
		High Frame	20664000	
111	2	Handle	80013120	
112	20	Screw DIN 912 – M 12 x 35 8.8		
113	12	Split pin ISO 8752 – 6 x 40 – A		
114	12	Split pin ISO 8752 – 10 x 40 – A		
115	14	Screw DIN 912 – M 10 x 25 8.8	20463400	
116	1	Front door for screen	80012890	
117	4	Screw DIN 912 – M 8 x 25 8.8		
118	4	Washer DIN125 – B 8		
119	1	Frame for PE BOX(High Frame)		
120	1	PE Box(High Frame)		
		optional		
121	1	Holder for cyclon frame		
122	1	Blower 0.55 kW		
123	1	Cyclone frame part 1(horizontal)		
124	1	Cyclone frame part 2 (vertical)		
125	1	Cyclon		
126	1	Air filter ø 300 x 2000		
127	1	clamp ø 250		
128	1	clamp ø 100		

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series


129	1	Flaring \varnothing 100 – 300		
200		Screen		
201	1	Screen support assembly	20662200	
202	1	Screen \varnothing 6	20672200	
203	3	Screen support spindle	20662000	
300		Bearing		
301	1	Bearing UCFS310	80003130	
302	1	Bearing Cover(plastic)	80012780	
303	4	Screw DIN 912 – M 20 x 45 8.8		
304	4	Washer DIN127 – B 20		
400		Drive		
401	1	Motor 18.5 kW 400V 50HZ	80020161	
402	4	Screw DIN 933 – M 16 x 40 8.8		
403	8	Washer DIN 127 – B 16		
404	1	Motor flange		
405	4	Screw DIN 933 – M 16 x 50 8.8		
500	1	Rotor assembly	20671600	
501	1	Round nut GB812 M60 \times 2	80012970	
502	1	Clamping Washer GB858 ϕ 60	80012990	
503	1	Sleeve GSL3040-02-02-02	20660800	
504	1	Motor Key	80040294	
505	1	Rotor Key	20660900	
506	33	Rotor Knife	80001010	
507	33	Bolt DIN912 M12 \times 30 12.9	80011180	
508	33	Washer DIN127-B 12	80010860	
509	1	Shaft		
600		Stator knife		
601	4	Stator knife	80001210	
602	8	Bolt DIN912 M12 \times 40 12.9 (front)	80011210	
603	8	Bolt DIN912 M12 \times 55 12.9 (back)	80011260	
604	2	Holder for front stator knife		
605	2	Holder for back stator knife		
606	24	Screw DIN 912 – M 8 x 25 8.8		
700		Electrical parts		
701	3	Safety switch AZ15zvrk-1476-1	80005560	

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

702	1	Control panel	10002040	


ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

Illustration: cutting chamber assembly

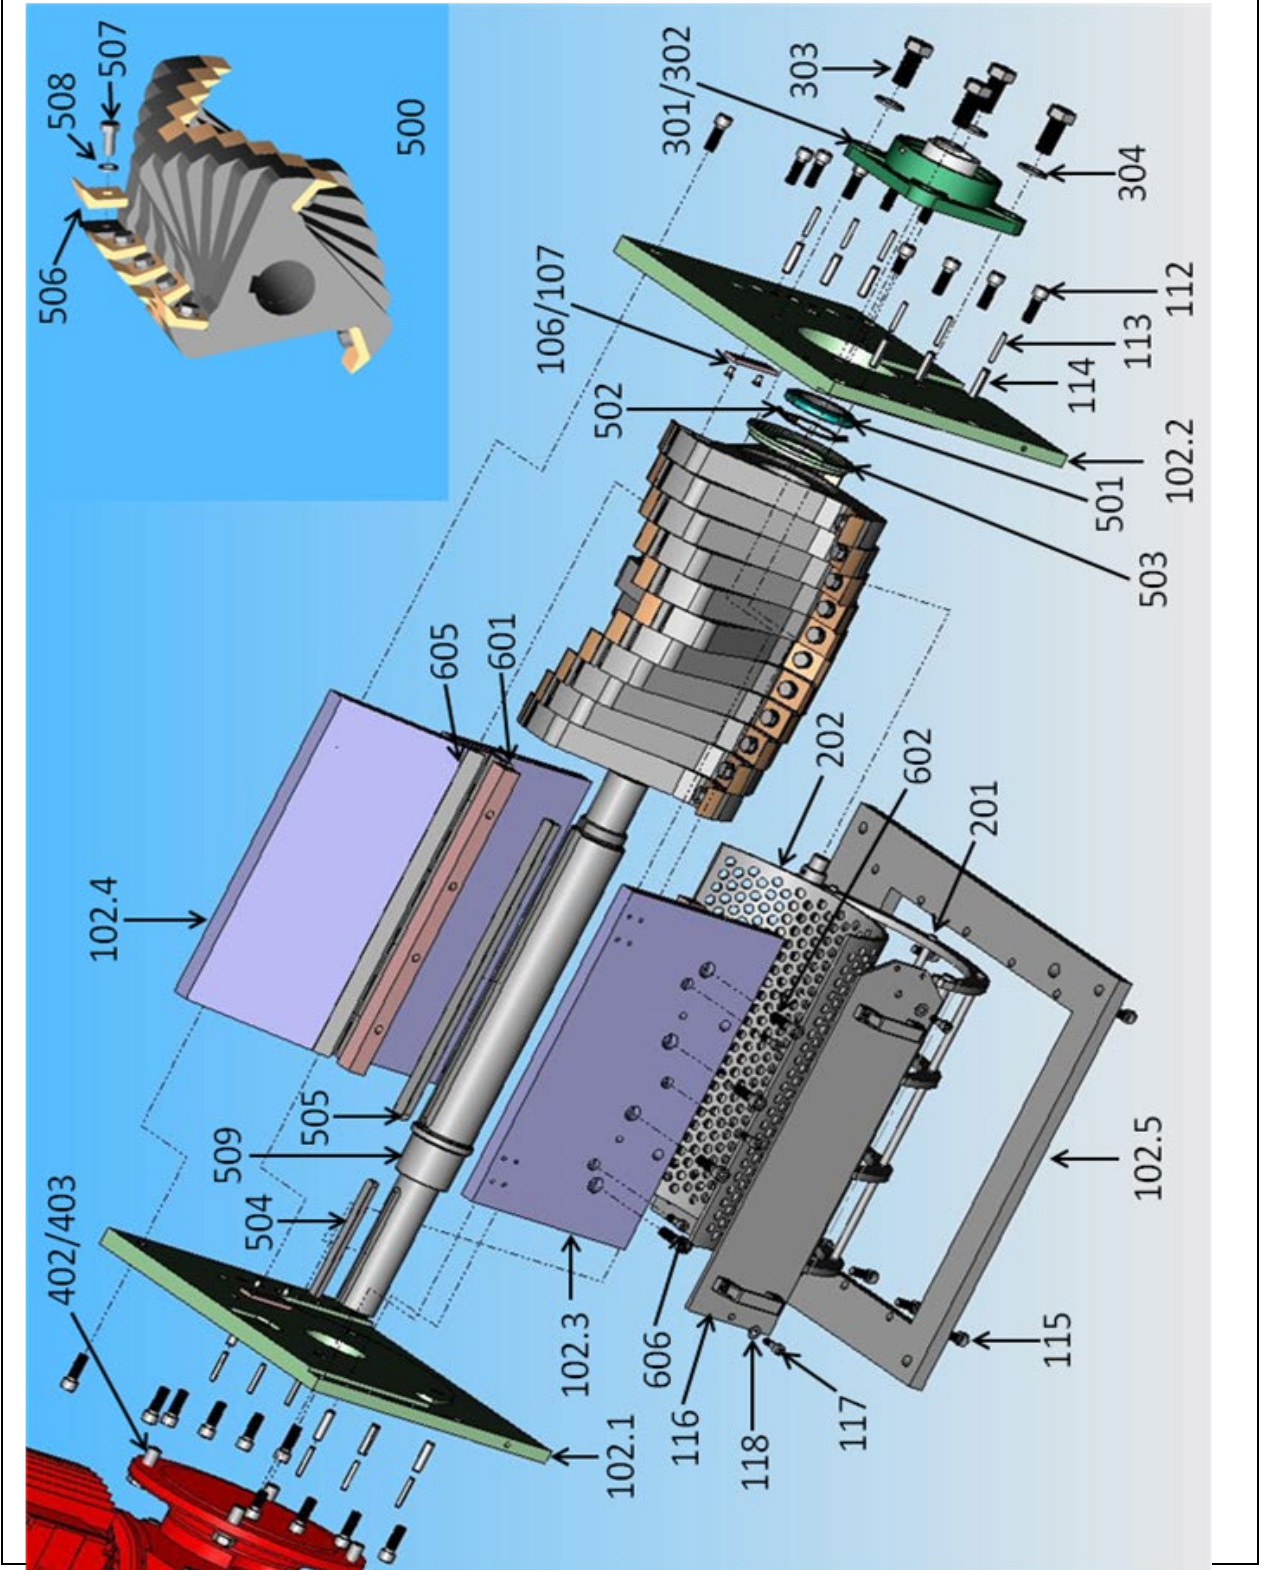

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

Illustration: Machine complete

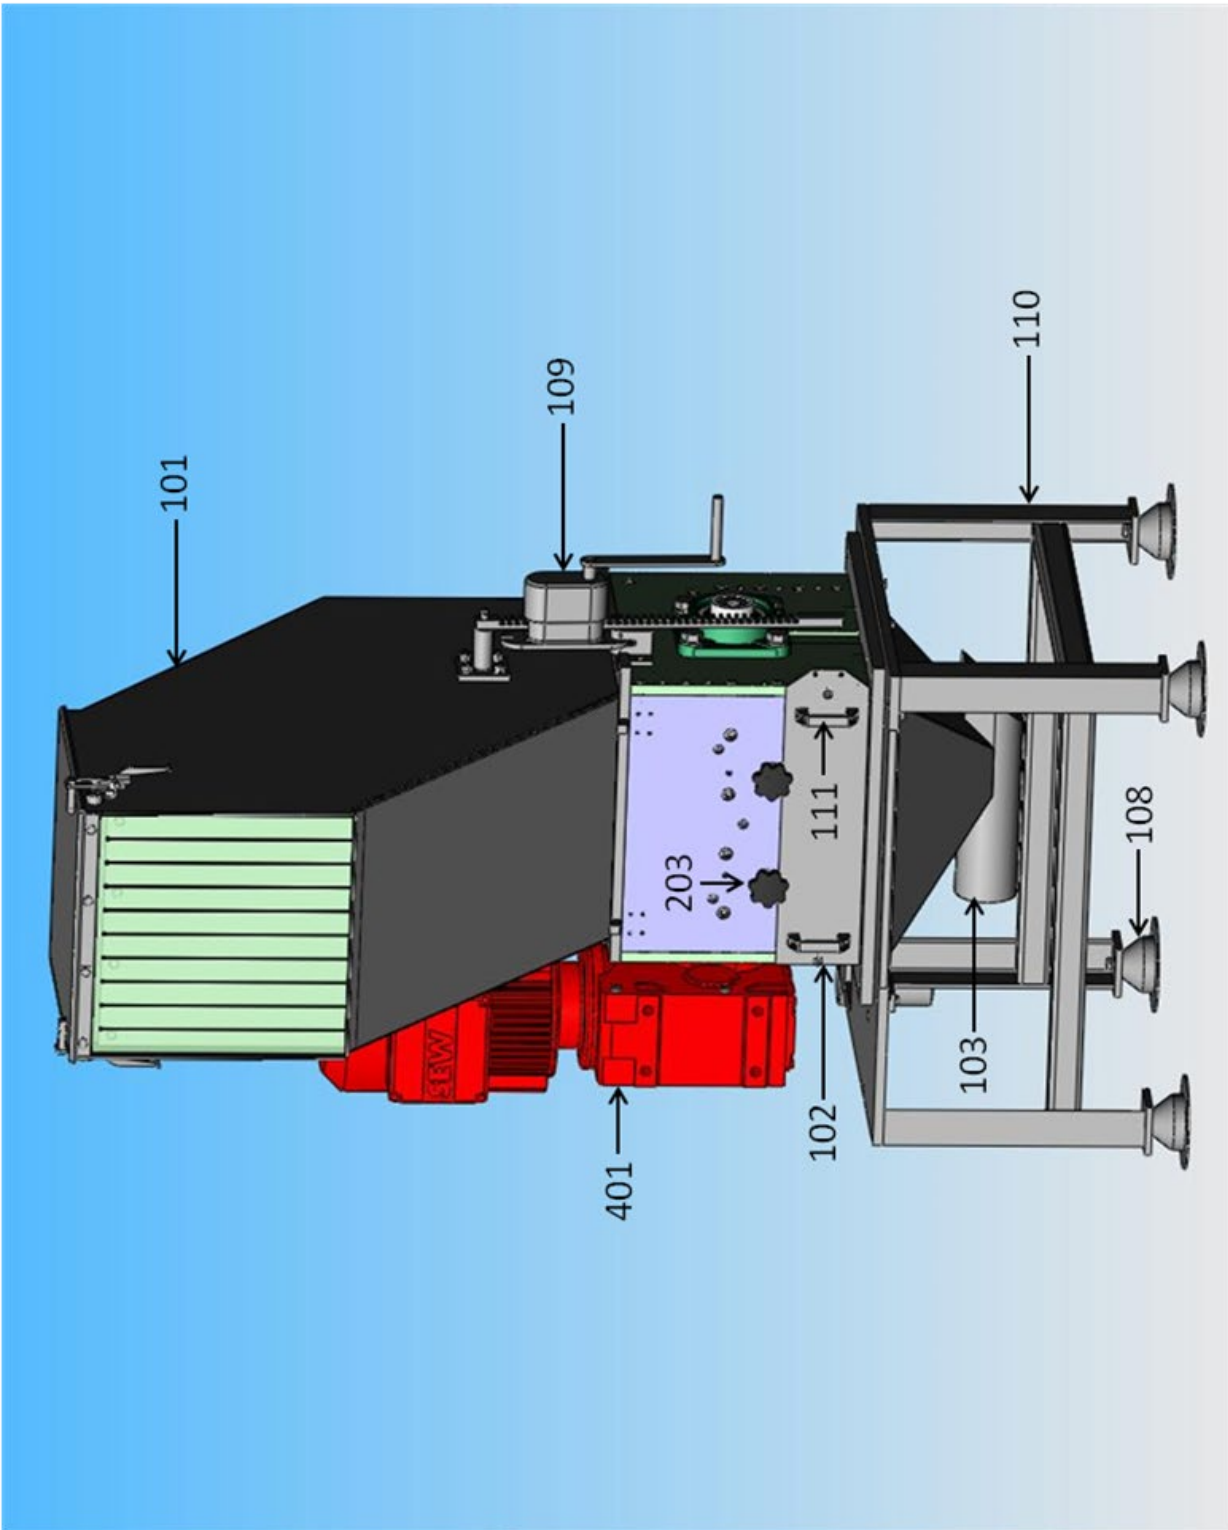

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

15 CLARIFICATION FOR PERSONAL TRAINING

This is to certify that I have attended an in company training for service and operation of the granulator and understand all safety regulations. Further to this I have read and understand the owners' manual.

City	Date	Printed name	Signature

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16 STANDARD MACHINE LAYOUTS

16.1 A 30 /400

16.1.1 Hopper Nr 1, Frame Nr 1, Suction bin Nr 1

TECHNICAL DATA
 1.Motor:7.5KW , Speed:150rpm.
 2.Max.Size of granulating:300x400.

Name	GSL300/400 1-1-1			Customer Confirm	Dwg No.	Sheet	of
Design	Customer			Date			
Appr.	Sales			First			
Rev.	Date			Angle			

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.1.2 Hopper Nr 2, Frame Nr 1, Suction bin Nr 1

TECHNICAL DATA
 1. Motor: 7.5KW, Speed: 150rpm.
 2. Max. Size of granulating: 300x400.

Name	GSL300/400 2-1-1			Customer Confirm	Dwg No.	Sheet	of
Design	Customer			Date			
Appr.	Sales			First			
Rev.	Date			Angle			

Zema Machinery & Recycling Technology (Shanghai) Co., Ltd.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.1.3 Hopper Nr 1, Frame Nr 2, Suction bin Nr 2

TECHNICAL DATA
 1. Motor: 7.5KW, Speed: 150rpm.
 2. Max. Size of granulating: 300x400.

Name	GSL300/400 1-2-2			Customer Confirm	Date	Sheet	of
Design	Customer	Sales	Date	First Angle	Zema Machinery & Recycling Technology (Shanghai) Co., Ltd.		
Appr.					ZEMA		
Rev.					ZEMA		

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.1.4 Hopper Nr 2, Frame Nr 2, Suction bin Nr 2

TECHNICAL DATA
1.Motor:7.5KW , Speed:150rpm.
2.Max.Size of granulating:300x400.

Name	GSL300/400 2-2-2			Customer Confirm	Date	Sheet	of
Design	Customer						
Appr.	Sales						
Rev.	Date			First Angle			

ZEMA
ZEMA/MA

Zema Machinery&Recycling Technology(Shanghai)Co.,Ltd.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.2 A 30 /600

16.2.1 Hopper Nr 1, Frame Nr 1, Suction bin Nr 1

TECHNICAL DATA
1.Motor:1KW , Speed:150rpm.
2.Max.Size of granulating:300x600.

Name	GSL300/600 1-1-1		Customer Confirm	Dwg No.	Sheet	of
Design	Customer	Date				
Appr.	Sales	Date				
Rev.			First Angle			

Zema Machinery Recycling Technology(Shanghai)Co.,Ltd.
 ZEMASMA

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.2.2 Hopper Nr 2, Frame Nr 1, Suction bin Nr 1

TECHNICAL DATA
 1. Motor: 11KW , Speed: 150rpm.
 2. Max. Size of granulating: 300x600.

Name	GSL300/600 2-1-1	Customer Confirm	Date	Dwg No.	Sheet	of
Design		Customer				
Appr.		Sales				
Rev.		Date				
		First Angle				

Zerna Machinery(Shanghai) Co., Ltd.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.2.3 Hopper Nr 1, Frame Nr 2, Suction bin Nr 2

TECHNICAL DATA
 1. Motor: 11KW , Speed: 150rpm.
 2. Max. Size of granulating: 300x600.

Name	GSL300/600	Customer	1-2-2	Dwg No.	Sheet	of
Design		Customer		Confirm		
Appr.		Sales		Date		
Rev.		Date		First Angle		

Zerma Machine&Recycling Technology(Shanghai)Co.,Ltd.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.2.4 Hopper Nr 2, Frame Nr 2, Suction bin Nr 2

TECHNICAL DATA
 1. Motor: 11KW , Speed: 150rpm.
 2. Max. Size of granulating: 300x600.

Name		GSL300/600 2-2-2		Customer Confirm		Dwg No.	Sheet of	
Design	Customer			Date		Zerma Machine&Recycling Technology(Shanghai)Co.,Ltd		
Appr.	Sales			Date		Zerma Machine&Recycling Technology(Shanghai)Co.,Ltd		
Rev.	Date			Date		Zerma Machine&Recycling Technology(Shanghai)Co.,Ltd		

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.3 A 30 /800

16.3.1 Hopper Nr 1, Frame Nr 1, Suction bin Nr 1

TECHNICAL DATA
 1. Motor: 18.5KW , Speed: 150rpm.
 2. Max. Size of granulating: 300x800.

Name	GSL300/800 1-1-1	Customer Confirm	Date	Sheet	of
Design		Customer			
Appr.		Sales			
Rev.		Date			
		First Angle			

Zema Machinery & Recycling Technology (Shanghai) Co., Ltd.
 ZEMAR001A

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.3.2 Hopper Nr 2, Frame Nr 1, Suction bin Nr 1

TECHNICAL DATA
1.Motor:18.5KW , Speed:150rpm.
2.Max.Size of granulating:300x800.

Name	GSL300/800 2-1-1			Customer Confirm	Date	Dwg No.	Sheet	of
Design	Customer	Sales	Date	First Angle				
Appr.								
Rev.								

Zerma Machinery & Recycling Technology (Shanghai) Co., Ltd.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.3.3 Hopper Nr 1, Frame Nr 2, Suction bin Nr 2

TECHNICAL DATA
1. Motor: 18.5KW , Speed: 150rpm.
2. Max. Size of granulating: 300x800.

Name	GSL300/800 1-2-2		Customer Confirm	Dwg No.	Sheet	of
Design	Customer	Date				
Appr.	Sales	Date				
Rev.			First Angle			

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

16.3.4 Hopper Nr 1, Frame Nr 2, Suction bin Nr 2

TECHNICAL DATA
1. Motor: 18.5KW , Speed: 150rpm.
2. Max. Size of granulating: 300x800.



Name	GSL300/800 2-2-2		Customer Confirm	Dwg No.	Sheet	of
Design	Customer	Date				
Appr.	Sales	Date				
Rev.			First	Angle		

Zeno Machinery S.p.A.
 Technology (S.p.A.)/C.Ltd.

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

17 ELECTRICAL CONNECTION


17.1 A 30 /400 Standard wiring diagram Version 1

1	2	3	4	5	6	7	8										
<p style="text-align: center;">  Zerma Machinery & Recycling Technology(Shanghai)Co.,Ltd. 5 Xinjie Rd XinQiao Township Ind.Park Songjiang Shanghai,China Tel. 0086-21-57645573 Fax 0086-21-57646766 </p>																	
<p>Order number</p>				<p>Code</p>													
<p>Type</p>				<p>GSL300-400 (7.5KW)</p>													
<p>Power supply</p>				<p>Control voltage</p>													
<p>Created on</p>				<p>2012-2-9</p>													
<p>Number of pages</p>				<p>9</p>													
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 33%;"></td> <td style="width: 33%;"></td> <td style="width: 33%;"></td> </tr> <tr> <td style="text-align: center;">Version NO.</td> <td style="text-align: center;">Date</td> <td style="text-align: center;">Name</td> </tr> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">2012-2-9</td> <td style="text-align: center;">xuhongmei</td> </tr> </table>											Version NO.	Date	Name	1	2012-2-9	xuhongmei	
Version NO.	Date	Name															
1	2012-2-9	xuhongmei															
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;"></td> <td style="width: 50%;"></td> </tr> <tr> <td style="text-align: center;">=</td> <td style="text-align: center;">+</td> </tr> <tr> <td colspan="2" style="text-align: center;">GSL300-400 (7.5KW)</td> </tr> <tr> <td style="text-align: right;">Page</td> <td style="text-align: right;">of</td> </tr> <tr> <td style="text-align: right;">0</td> <td style="text-align: right;">9</td> </tr> </table>										=	+	GSL300-400 (7.5KW)		Page	of	0	9
=	+																
GSL300-400 (7.5KW)																	
Page	of																
0	9																
<p style="text-align: right;">  Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd <small>Tel: 0086-21-57645573 Fax: 0086-21-57646766</small> </p>																	

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

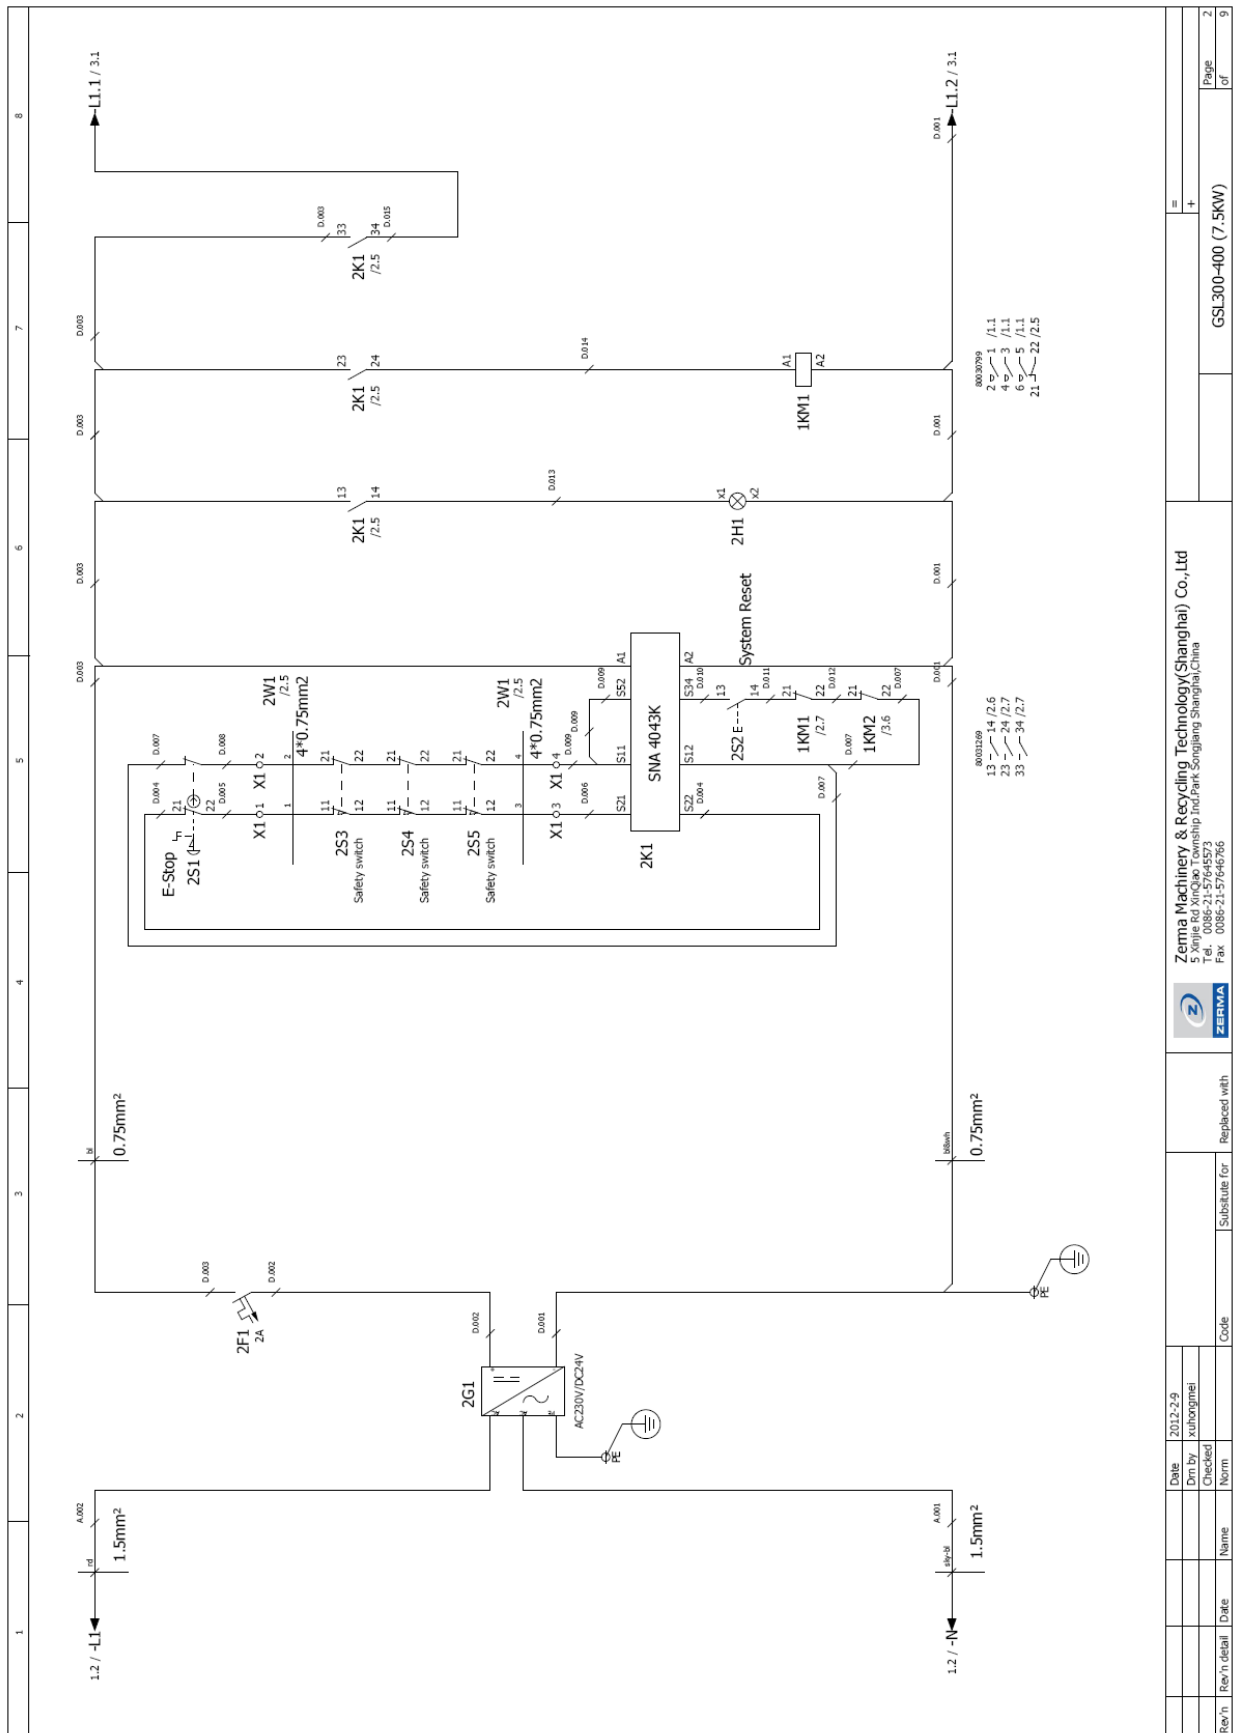

Rev'n	Rev'n detail	Date	Date	Name	Code	Substitute for	Replaced with
		2012-2-9		xuhongmei			
		Checked					
		Norm					
							GSL300-400 (7.5KW)
							Page 2
							of 9


Zema Machinery & Recycling Technology(Shanghai) Co.,Ltd
 5 Xiejie Rd Xincobe Township Ind.Park Songjiang Shanghai,China
 Tel: 0086-21-7945573
 Fax: 0086-21-7946866




ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

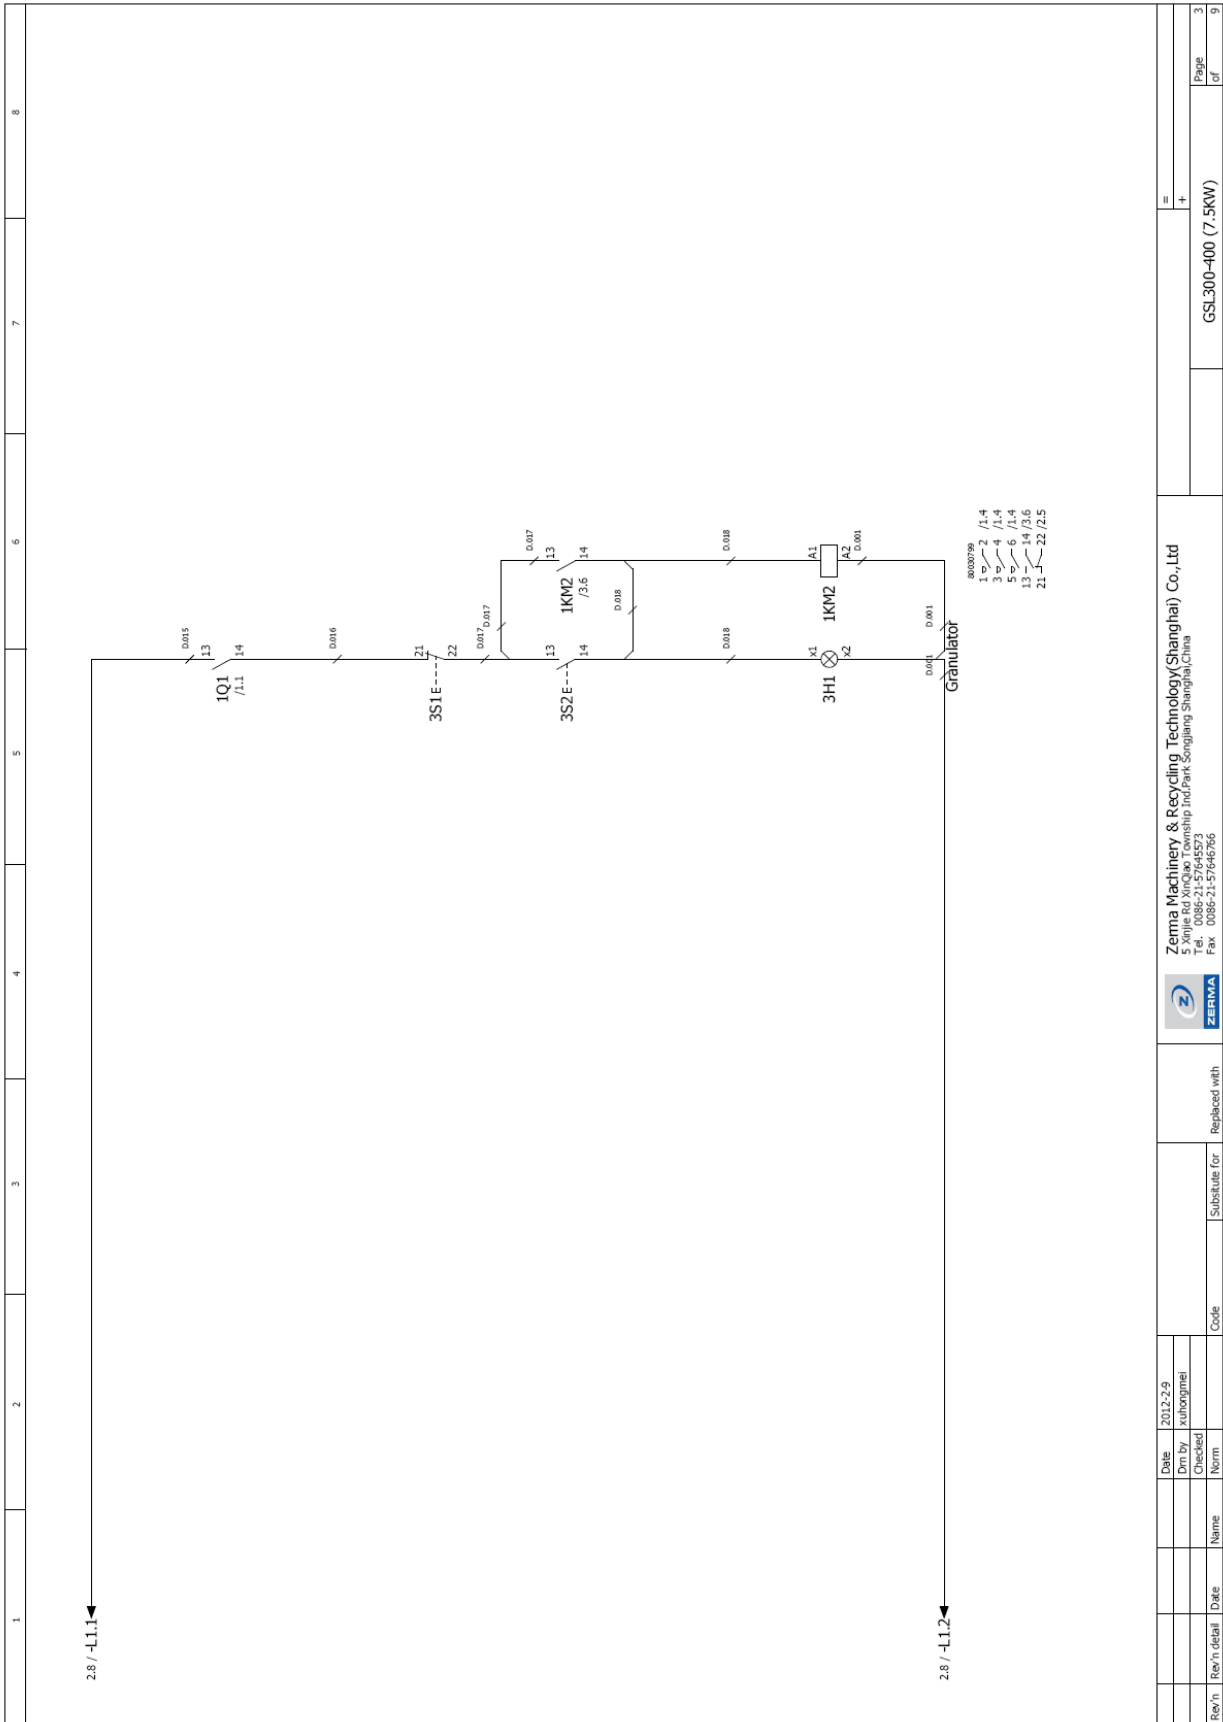


Rev'n	Rev'n detail	Date	Name	Checked	Norm	Code	Substitute for	Replaced with	 ZERMA Zerma Machinery & Recycling Technology(Shanghai) Co., Ltd 7 Xingye Road Xinqiang Community Ind/Park Songjiang Shanghai, China Tel: 0086-21-57645452 Fax: 0086-21-57646266	GSL300-400 (7.5KW)	Page of
		2012-2-9	Subongmei							3	

ORIGINAL INSTRUCTION

PART A: Basic machine


Slow speed Granulator A 30 Series

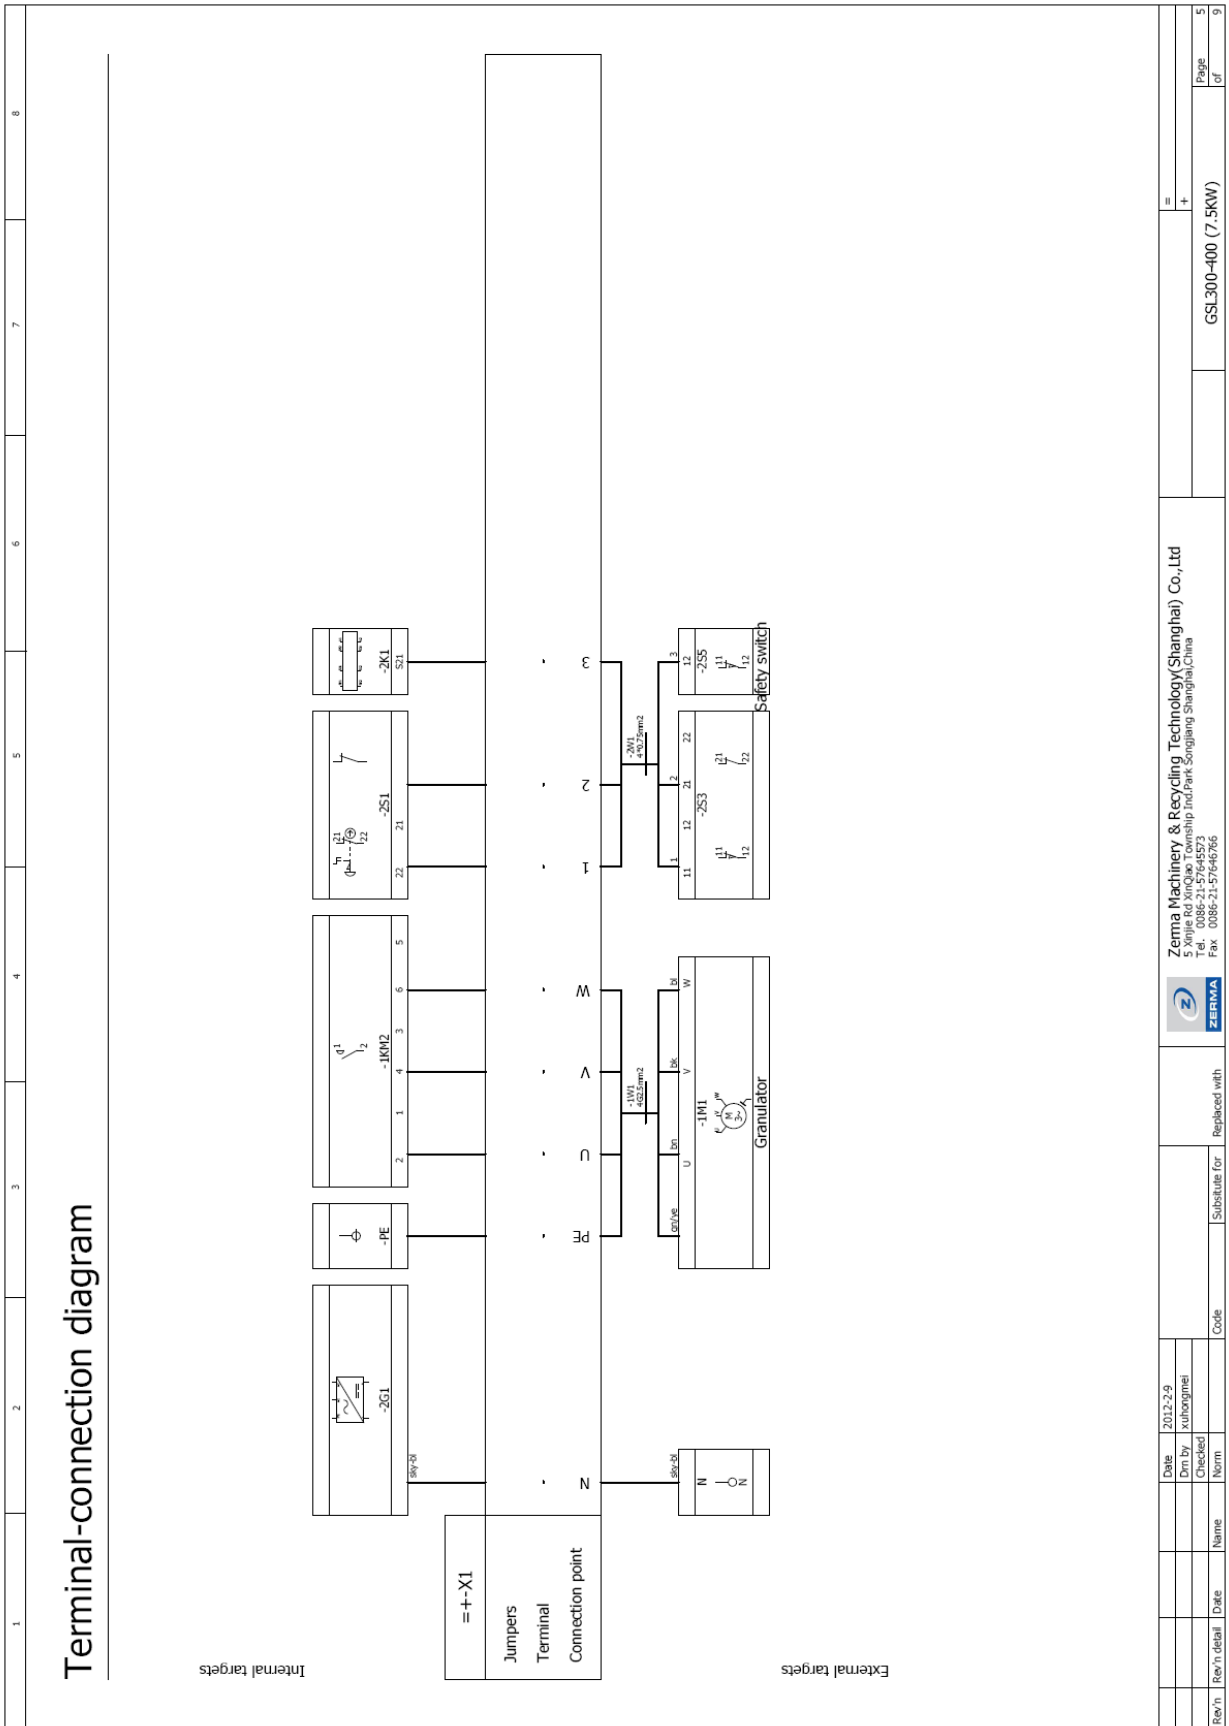

ORIGINAL INSTRUCTION


PART A: Basic machine

Slow speed Granulator A 30 Series

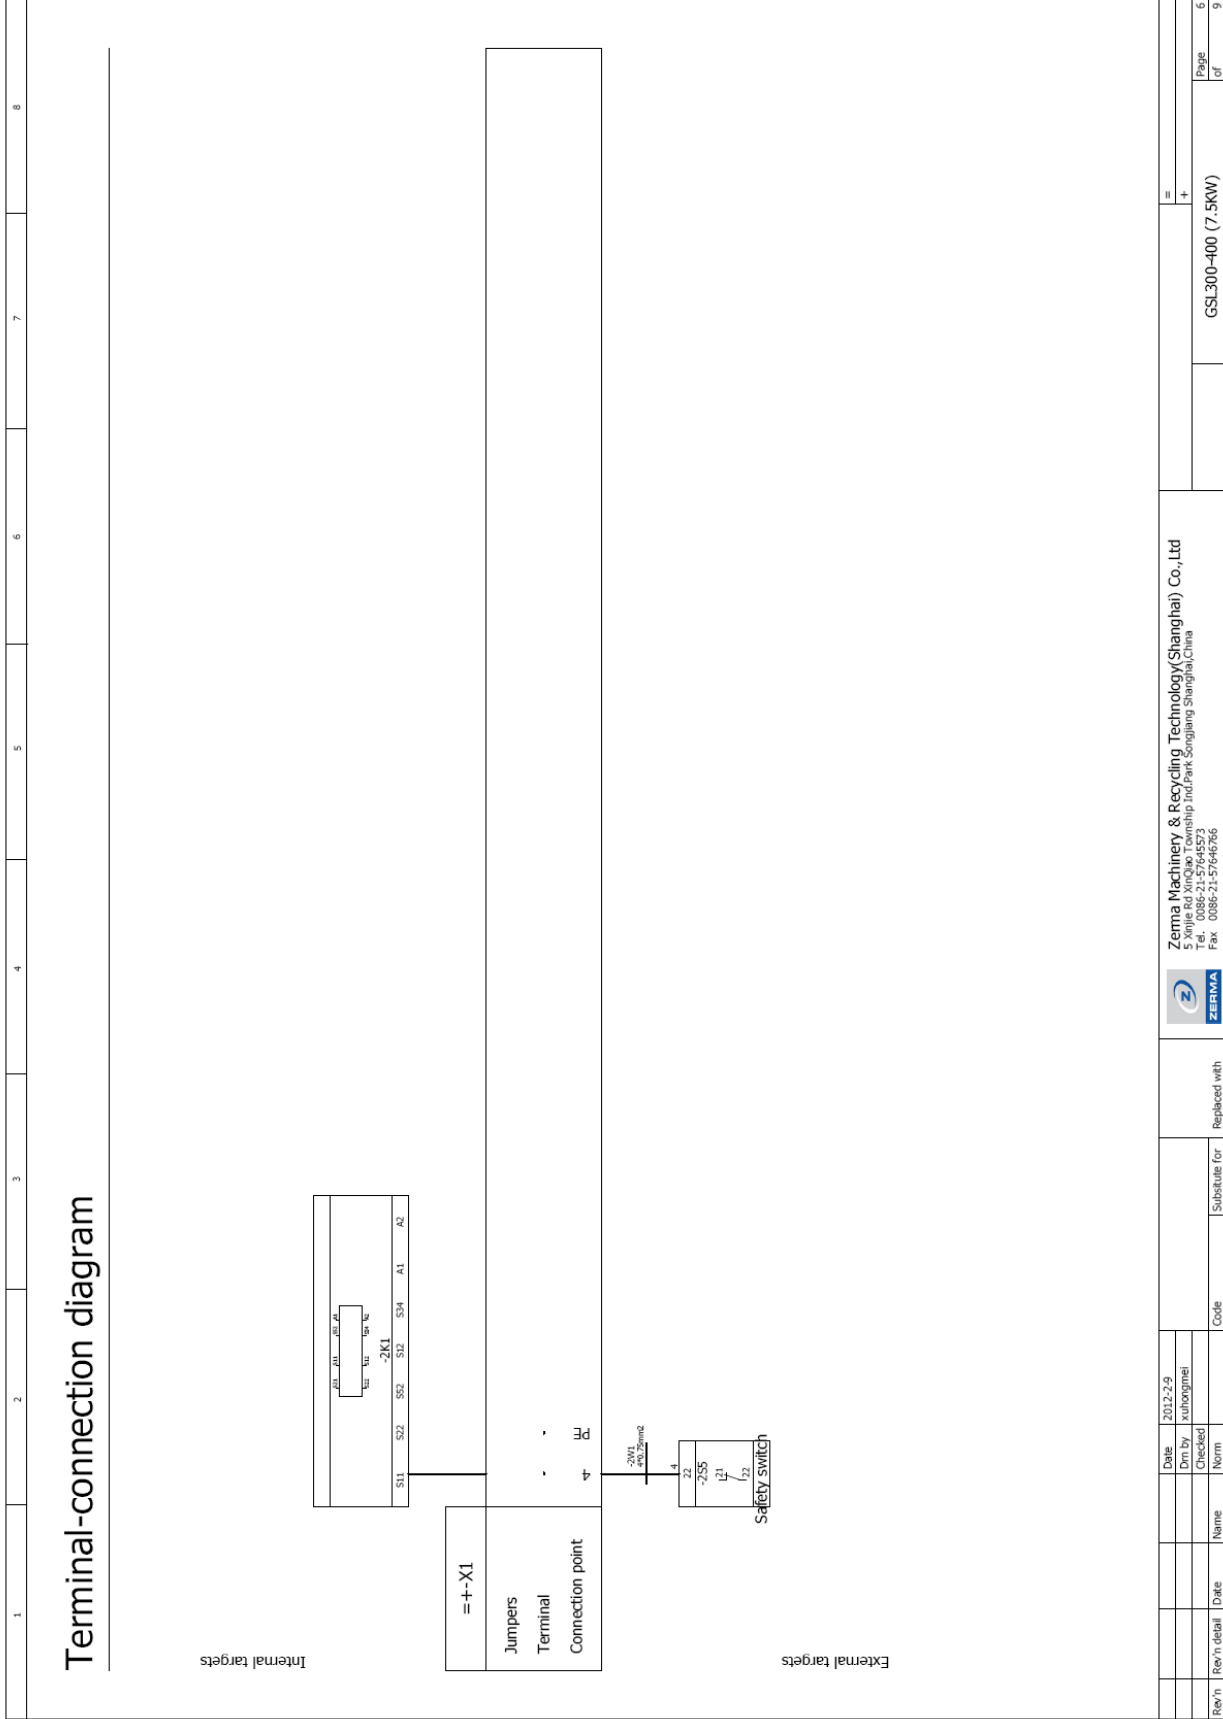



ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

1	2	3	4	5	6	7	8
Summarized parts list							
Material number	Quantity	Component Name	Description	Reference name	Manufacturer		
80007270	1	Control box	AE1034-500 (W*H*D 300*400*210)		RITTAL		
80031186	1	PE busbar	3x17/5 piece		Leipole		
80031372	1	Mould case circuit breaker DC2A	PL9-C2-DC	2F1	Moeller		
80031257	1	Power supply 48W DC24V 2A	CP SNT 48W 24V 2A	2G1	Weidmuller		
80005940	5	Fixing adapter	M22-A	2H1;2S1;3H1;3S1;3S2	Moeller		
80030309	1	Lable	M22-XST	2H1	Moeller		
80030308	1	Lable mount	M22S-ST-X	2H1	Moeller		
80031028	1	Indicator&pushbutton(white)	M22-DL-W	2H1	Moeller		
80005470	3	Contact element NO	M22-K10	2H1;3H1;3S2	Moeller		
80008130	2	Bulb&lamp socket (white/yellow)	M22-LED-W	2H1;3H1	Moeller		
80031027	1	Double actuator	M22-BDL-GR-XI/X0	3H1	Moeller		
80005450	4	Contact element NC	M22-K01	2S1;3H1;3S1	Moeller		
80031269	1	Safety monitoring DC24V	SNA 4043K(DC24V)R1.188.1680.0	2K1	Wieland		
80030799	2	Power contactor	DILM17-10C(RDC24)	1KM1;1KM2	Moeller		
80030725	2	Auxiliary contact module	DILM32C-XH111	1KM1;1KM2	Moeller		
80031044	1	Motor-protective circuit breaker	PKZMC-16	1Q1	Moeller		
80005110	1	Auxiliary contact	NH111-PKZ0	1Q1	Moeller		
80031019	1	Emergency stop actuator	M22-PV	2S1	Moeller		
80030438	3	Safety switch	AZ16-02ZVRK	2S3...2S5	Schmersal		

Rev'n	Rev'n detail	Date	Name	Date	Checked	Norm	Code	Substitute for	Replaced with
		2012-2-9							
		Drawn by	Zhangjimeil						
 Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd 5 Xingye Rd Xinqiao Township Ind.Park Songjiang Shanghai,China Tel: 0086-21-57646262 Fax: 0086-21-57646266									
								GSL300-400 (7.5KW)	
								=	+
								Page	7
								of	3

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series


17.2 A 30 /400 Standard wiring diagram Version 2

1	2	3	4	5	6	7	8																						
 Zerma Machinery & Recycling Technology(Shanghai)Co.,Ltd. 5 Xinjie Rd XinQiao Township Ind.Park Songjiang Shanghai,China Tel. 0086-21-57645573 Fax 0086-21-57646766																													
Order number				Code				Type																					
								GSL300-400 (7.5KW)																					
Power supply				Control voltage																									
Created on				2015-5-29																									
Number of pages				9																									
								<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">Version NO.</td> <td style="width: 20%;">1</td> <td style="width: 20%;">Date</td> <td style="width: 20%;">2015-5-29</td> <td style="width: 20%;">xuhongmei</td> <td style="width: 20%;">Name</td> </tr> <tr> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> </tr> </table>				Version NO.	1	Date	2015-5-29	xuhongmei	Name												
Version NO.	1	Date	2015-5-29	xuhongmei	Name																								
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">Rev'n</td> <td style="width: 20%;">Rev'n detail</td> <td style="width: 20%;">Date</td> <td style="width: 20%;">Name</td> <td style="width: 20%;">Checked</td> <td style="width: 20%;">Norm</td> <td style="width: 20%;">Date</td> <td style="width: 20%;">Dm by</td> <td style="width: 20%;">2015-5-29</td> <td style="width: 20%;">xuhongmei</td> </tr> <tr> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> </tr> </table>								Rev'n	Rev'n detail	Date	Name	Checked	Norm	Date	Dm by	2015-5-29	xuhongmei												
Rev'n	Rev'n detail	Date	Name	Checked	Norm	Date	Dm by	2015-5-29	xuhongmei																				
 Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd 5 Xinjie Rd XinQiao Township Ind.Park Songjiang Shanghai,China Tel. 0086-21-57645573 Fax 0086-21-57646766																													
Replaced with: GSL300-400 (7.5KW)																													
Substrate for:																													
Code																													
= +																													
Page 0 of 9																													

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

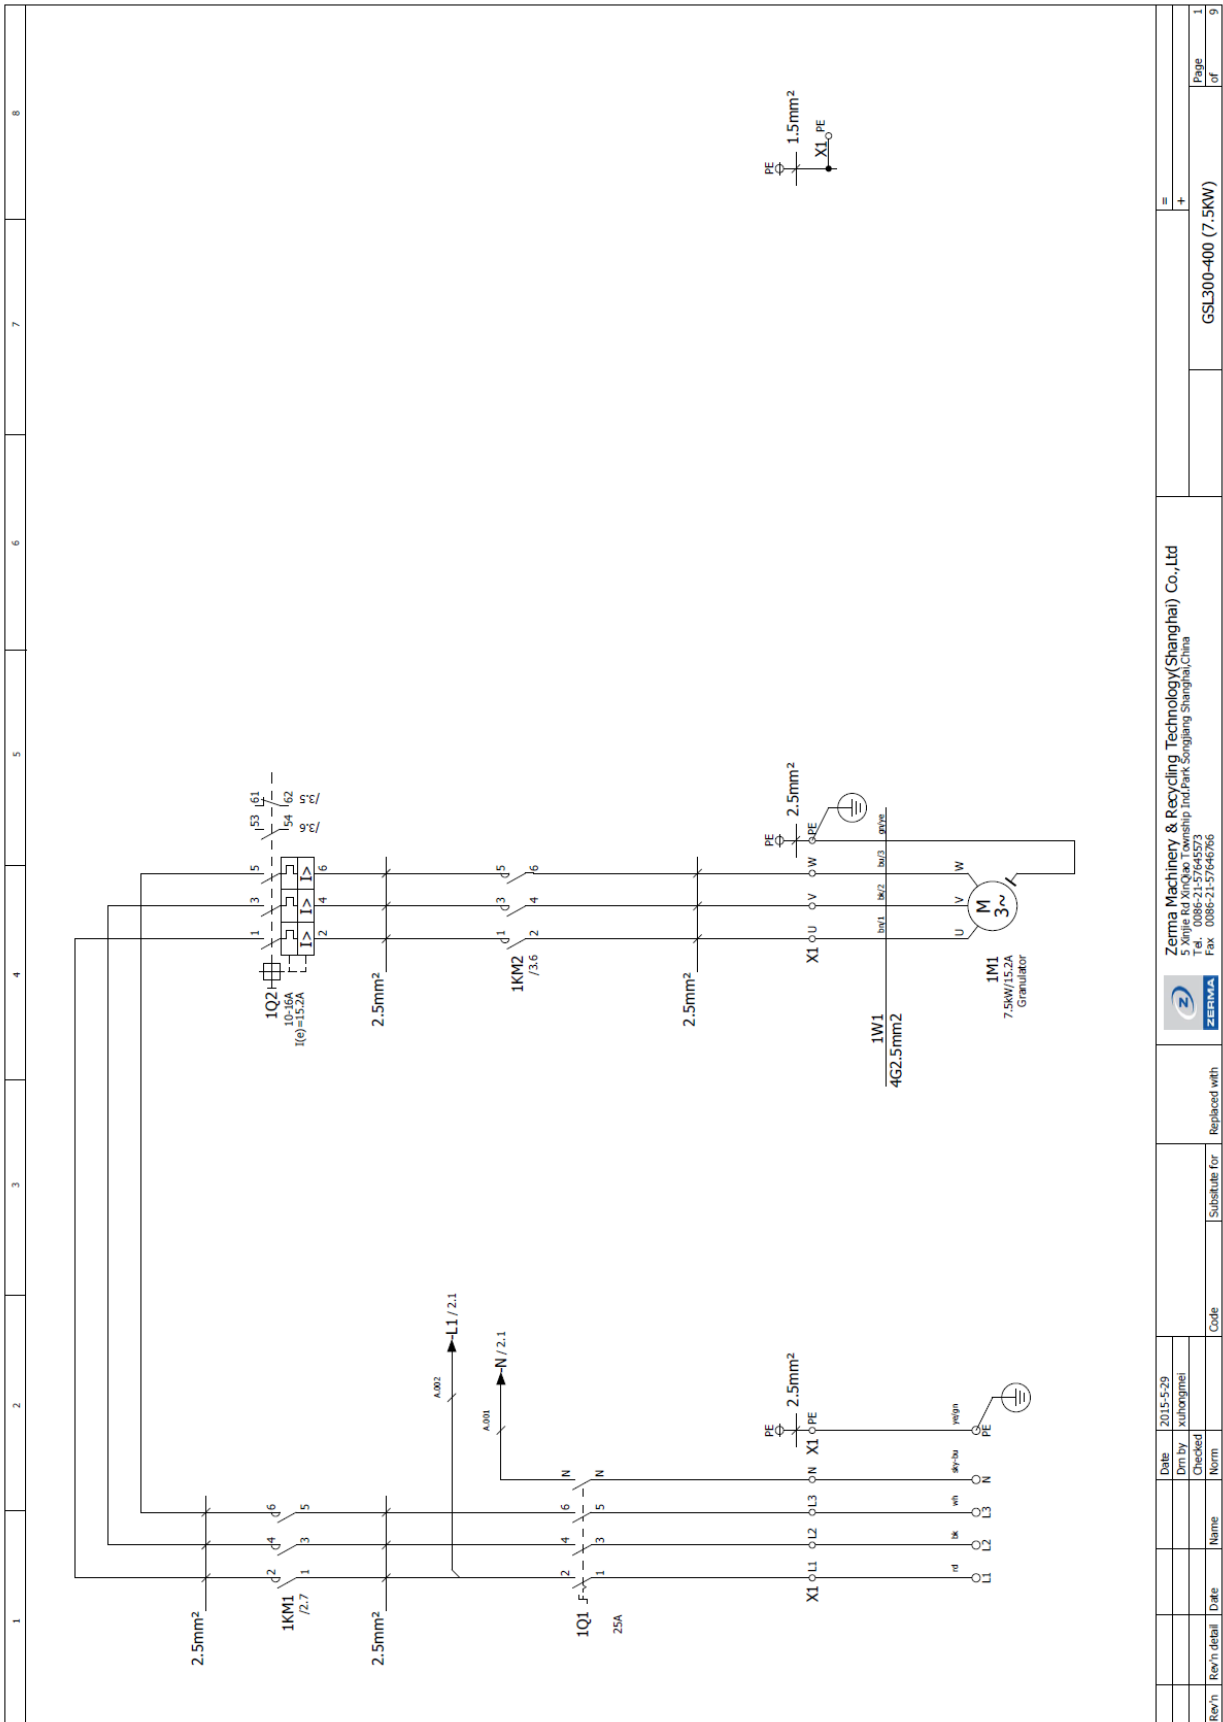


Rev'n	Rev'n detail	Date	Name	Norm	Checked	Dim by	Date	Code	Substitute for	Replaced with	ZEMMA ZEMMA Machinery & Recycling Technology(Shanghai) Co., Ltd 7, Xinyuan Road, Songjiang District, Shanghai, China Tel: 0086-21-57645573 Fax: 0086-21-57646766		GSL300-400 (7.5KW)	Page of
		2015-5-29				kuohongmei							1	
													9	

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

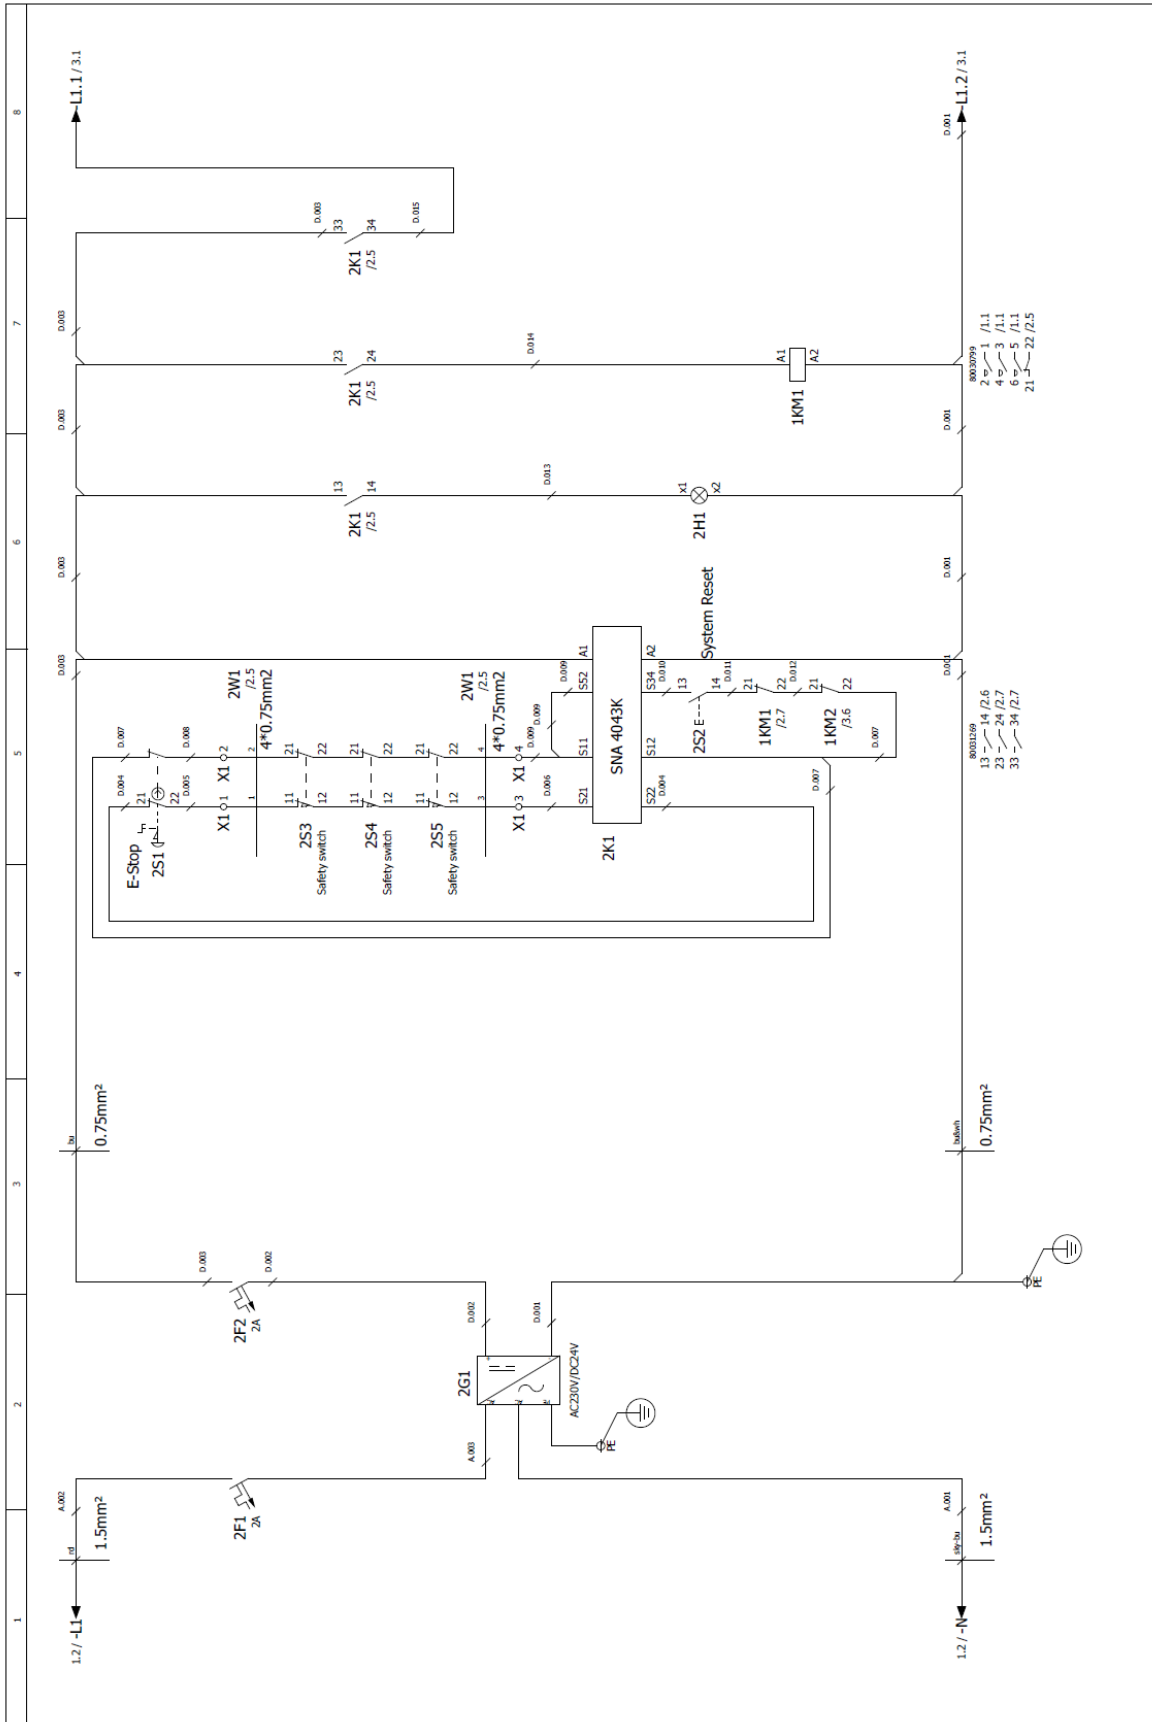


Rev'n	Rev'n detail	Date	Name	Code	Substitute for	Replaced with
		2015-5-29				
		Drawn by	Subongmei			
		Checked				
		Norm				
<p>Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd 5 Xiejie Rd Xinciao Township Ind.Park Songjiang Shanghai,China Fax 0086-21-57646266</p>						
GSL300-400 (7.5KW)						Page 2 of 9

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

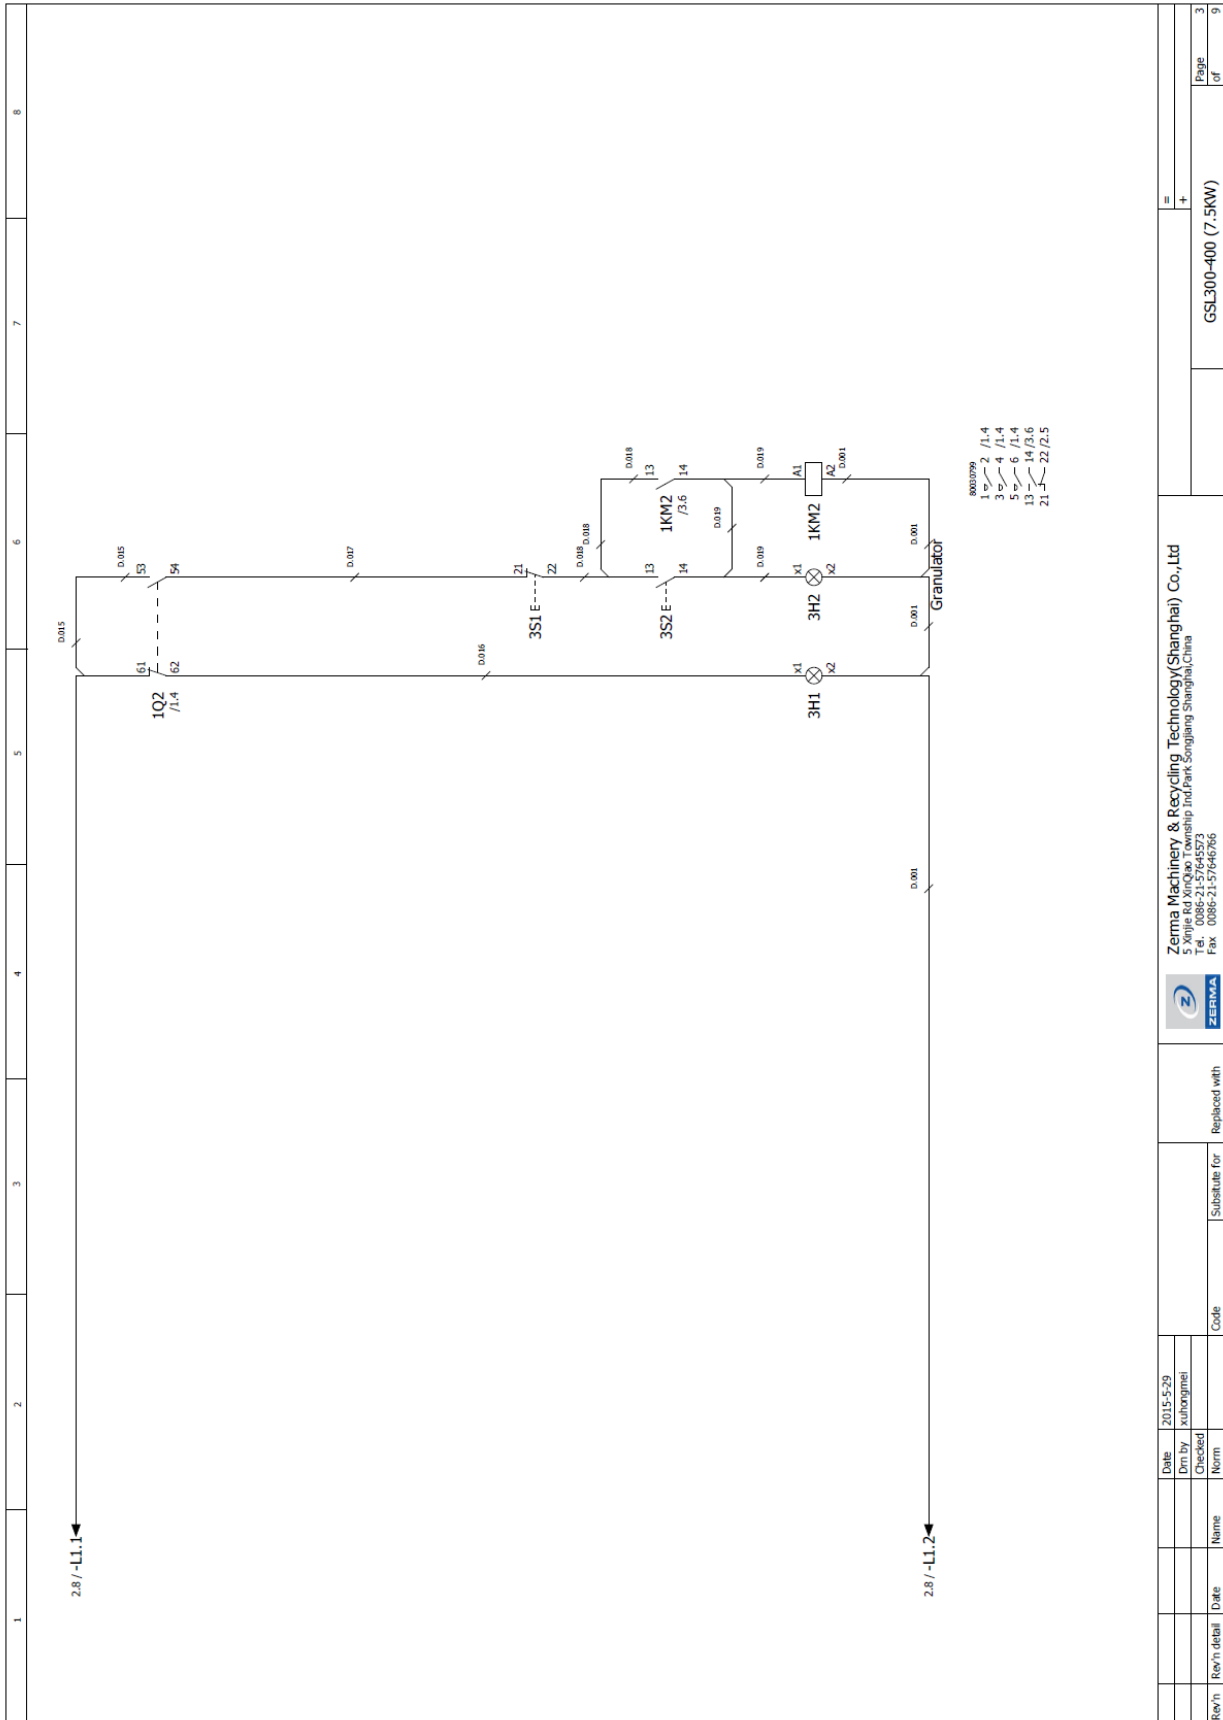


Rev'n	Rev'n detail	Date	Name	Checked	Norm	Date	2015-5-29	Zhuoyangjueli	Code	Substitute for	Replaced with	ZERMA	Zerma Machinery & Recycling Technology(Shanghai) Co., Ltd 5 Xingye Rd Xincube Township IndPark Songjiang Shanghai,China Tel: 0086-21-57646296 Fax: 0086-21-57646296	GSL300-400 (7.5KW)	Page of	3
-------	--------------	------	------	---------	------	------	-----------	---------------	------	----------------	---------------	-------	--	--------------------	---------	---

ORIGINAL INSTRUCTION

PART A: Basic machine


Slow speed Granulator A 30 Series

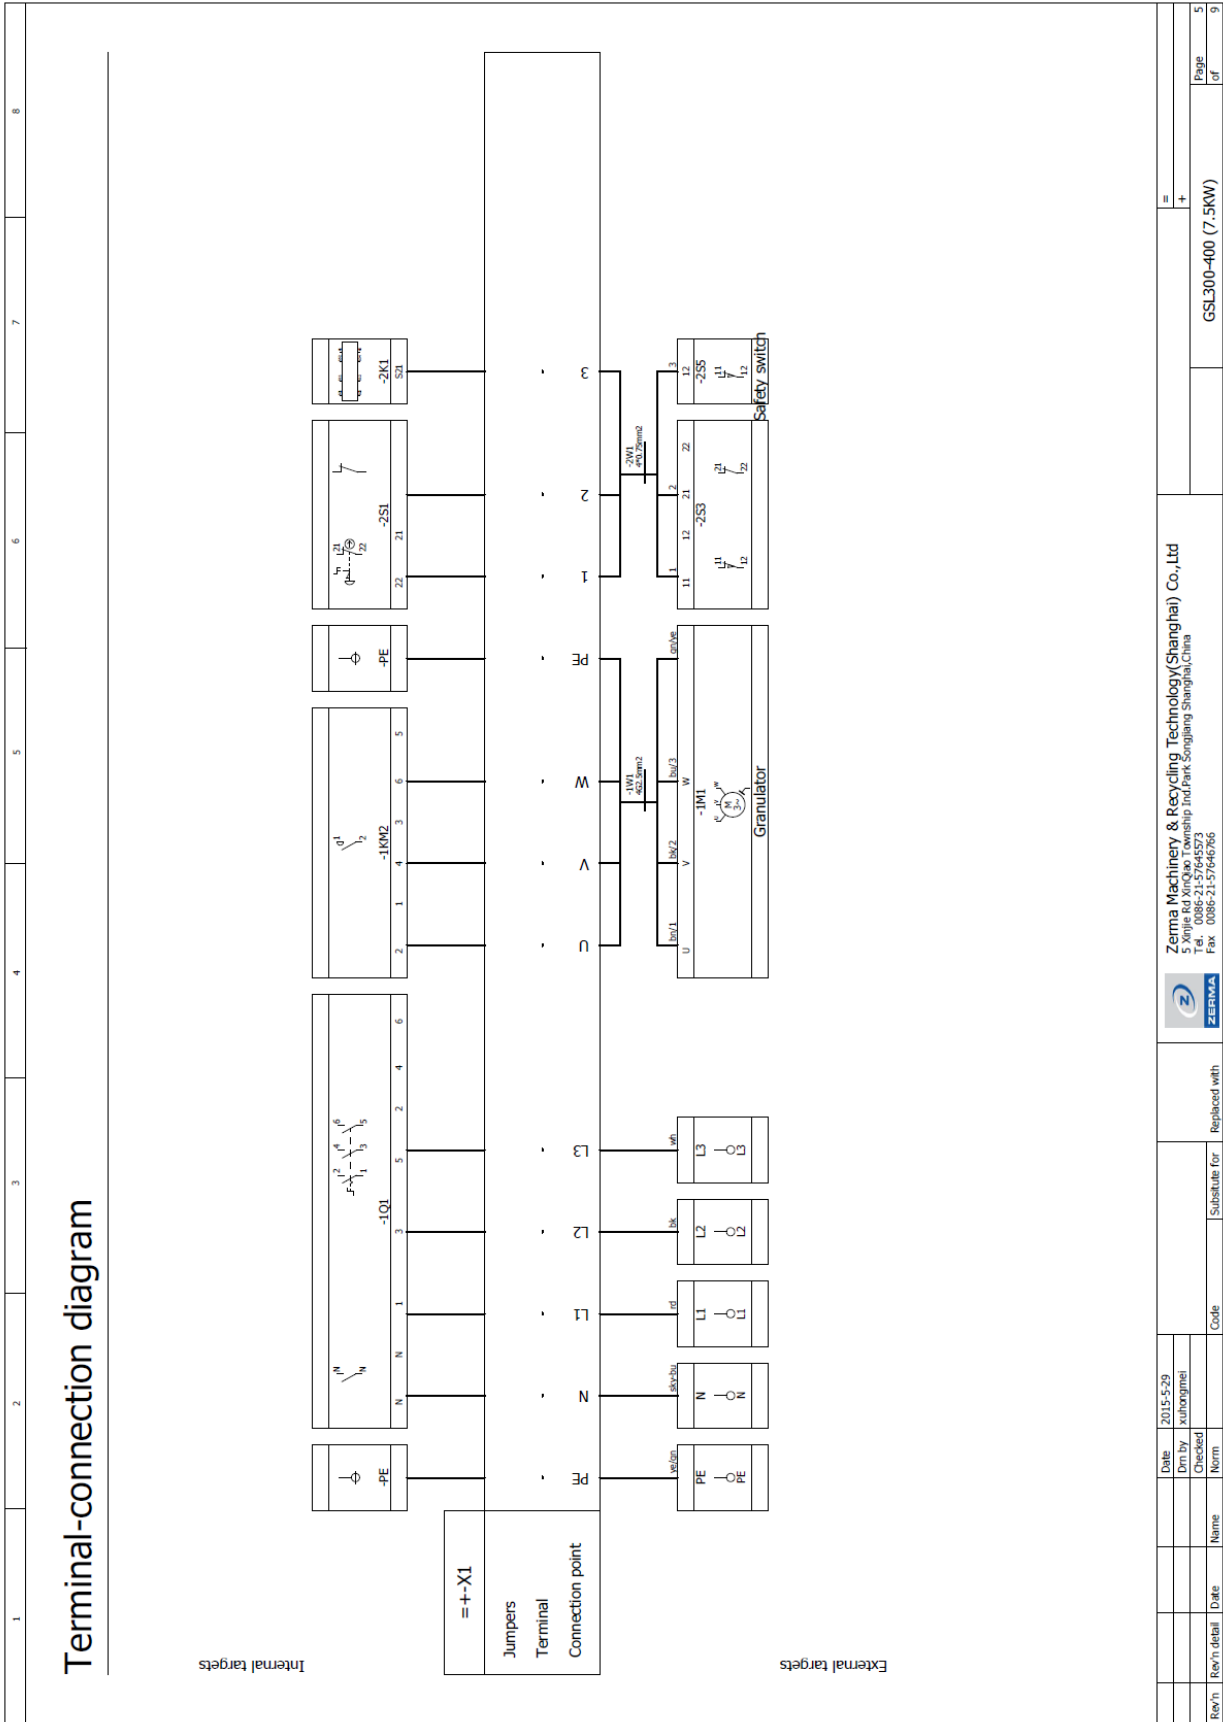

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

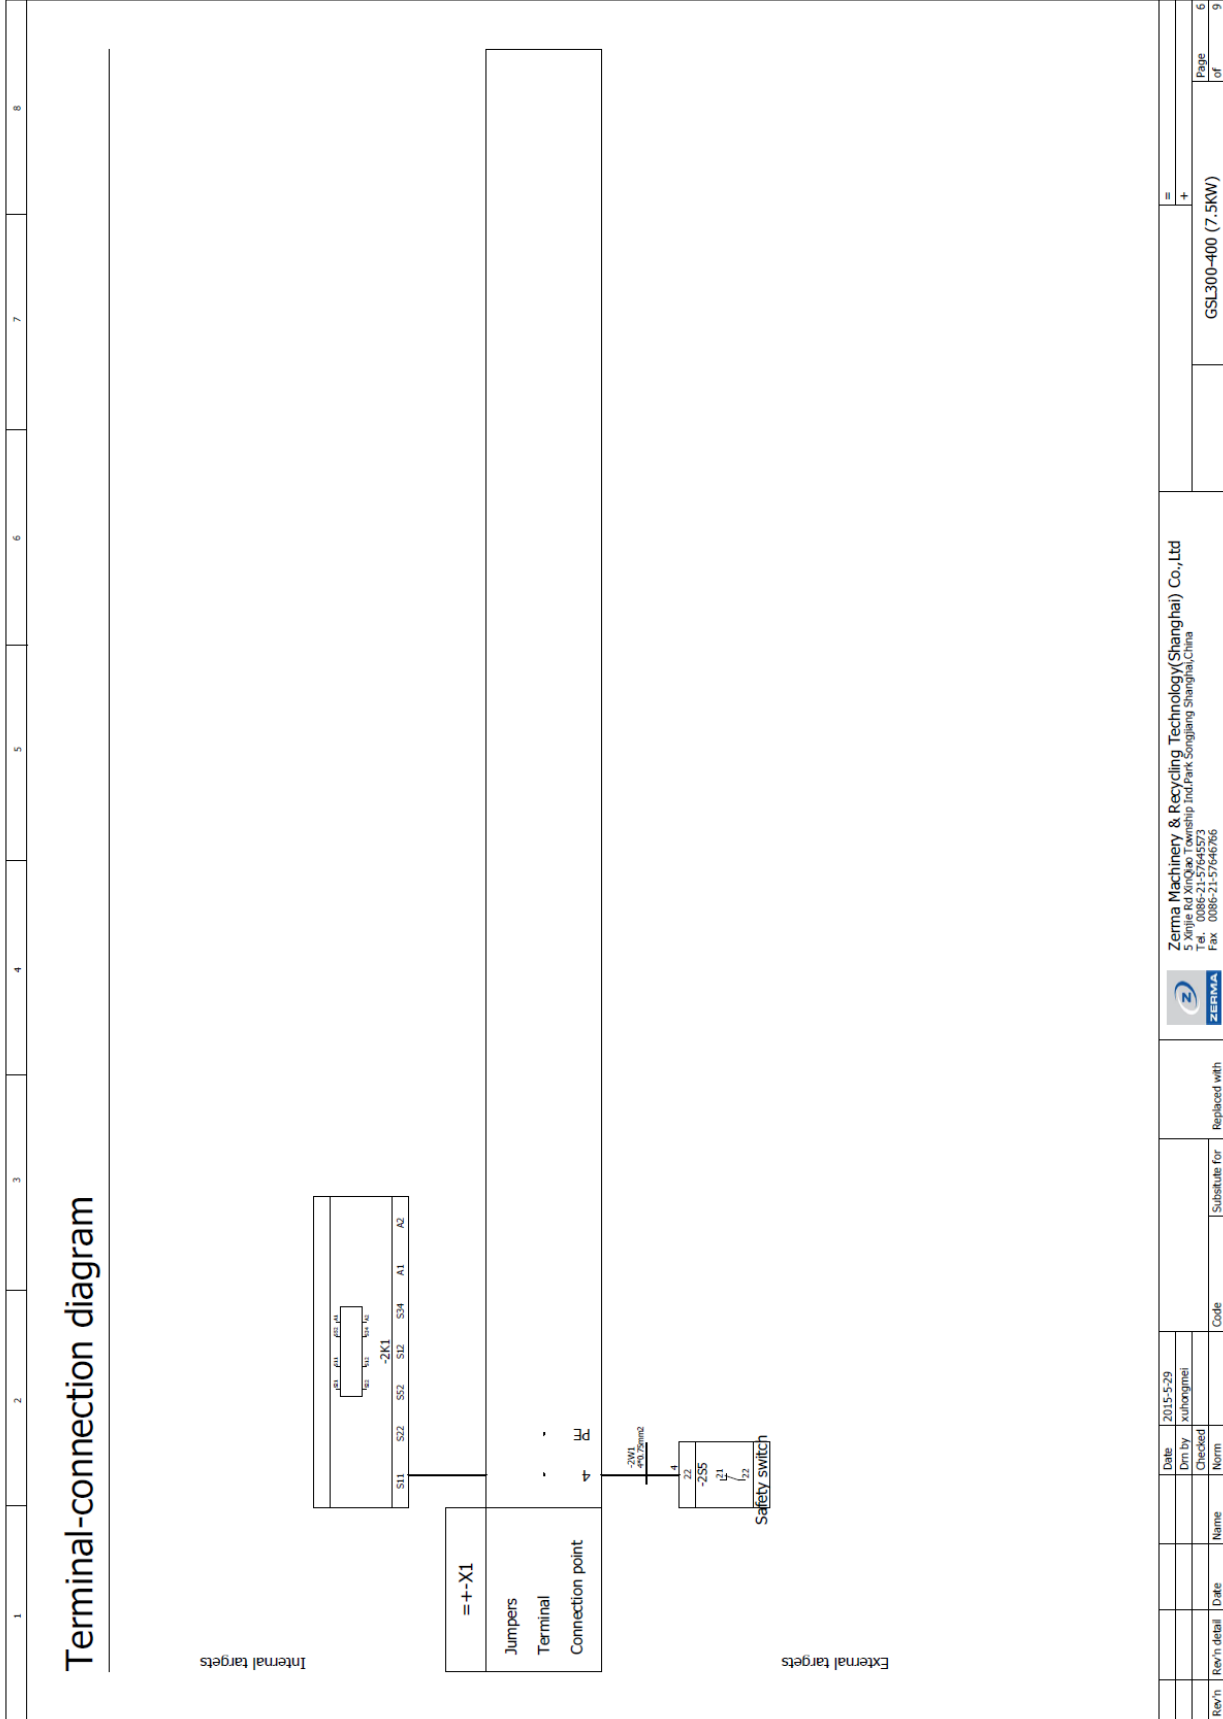

1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---

Rev'n	Rev'n detail	Date	Name	Norm	Code	Substitute for	Replaced with	Z	ZERMA	Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd 5 Xujie Rd Xincube Township Ind.Park Songjiang Shanghai,China Tel: 0086-21-57646286 Fax: 0086-21-57646286	GSL300-400 (7.5KW)	+	=	Page of
		2015-5-29	Zurongmei											6
														9

ORIGINAL INSTRUCTION


PART A: Basic machine

Slow speed Granulator A 30 Series

1 2 3 4 5 6 7 8


Summarized parts list

Material number	Quantity	Component Name	Description	Reference name	Manufacturer
80007270	1	Control box	AEI034.500 (W*H*D 300*400*210)		RITTAL
80031186	1	PE busbar	3×17/5 piece		Leipole
80030403	1	Mould case circuit breaker 2A	PL9-C2	2F1	Moeller
80031372	1	Mould case circuit breaker DC2A	PL9-C2-DC	2F2	Moeller
80031257	1	Power supply 48W DC24V 2A	CP SNT 48W 24V 2A	2G1	Wadmulder
80005940	4	Fixing adapter	M22-A	2H1;2S1;3H1;3H2	Moeller
80030309	1	Lable	M22-XST	2H1	Moeller
80030308	1	Lable mount	M22S-ST-X	2H1	Moeller
80031323	1	Indicator&pushbutton(blue)	M22-DL-B	2H1	Moeller
80005470	2	Contact element NO	M22-K10	2H1;3H2	Moeller
80008130	3	Bulb&lamp socket (white/yellow)	M22-LED-W	2H1;3H1;3H2	Moeller
80005410	1	Lable	A22-XA	3H1	Moeller
80005420	1	Lable mount	A22-RAS-X	3H1	Moeller
80031017	1	Indicator&pushbutton(red)	M22-DL-R	3H1	Moeller
80005450	3	Contact element NC	M22-K01	2S1;3H1	Moeller
80031018	1	Indicator&pushbutton(green)	M22-DL-G	3H2	Moeller
80031269	1	Safety monitoring DC24V	SNA 4043K(DC24V)R1.188.1680.0	2K1	Wieland
80030799	2	Power contactor	DILM17-10C(RDC24)	1KM1;1KM2	Moeller
80030725	2	Auxiliary contact module	DILM32C-XH111	1KM1;1KM2	Moeller

Rev'n	Rev'n detail	Date	2015-5-29	Checked Norm	Substitute for	Replaced with	 Zemna Machinery & Recycling Technology(Shanghai) Co.,Ltd 5 Jinjie Rd Xincuo Township Ind Park Songjiang Shanghai,China Tel: +86-21-57646766 Fax: +86-21-57646766	GSL300-400 (7.5KW)	Page	2
		Drawn by	Subsignature	Code					of	9

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series


17.3 A 30 /600 Standard wiring diagram Version 1

1	2	3	4	5	6	7	8
 <p>Zerma Machinery & Recycling Technology(Shanghai)Co.,Ltd. 5 Xinjie Rd XinQiao Township Ind.Park Songjiang Shanghai,China Tel. 0086-21-57645573 Fax 0086-21-57646766</p>							
Order number		Code		Type		GSL (11KW)	
Power supply		Control voltage		Created on		2012-7-5	
Number of pages		9		Version NO.		1	
				Date		2012-7-5	
				Name		xuhongmei	
Rev'n		Rev'n detail		Date		Name	
Date		2012-7-5		Checked		xuhongmei	
Dm by				Norm			
Substitute for		Code		Replaced with		GSL (11KW)	
ZERMA							
Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd		5 Xinjie Rd XinQiao Township Ind.Park Songjiang Shanghai,China		Tel. 0086-21-57645573		Fax. 0086-21-57646766	
Page		0		of		9	

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

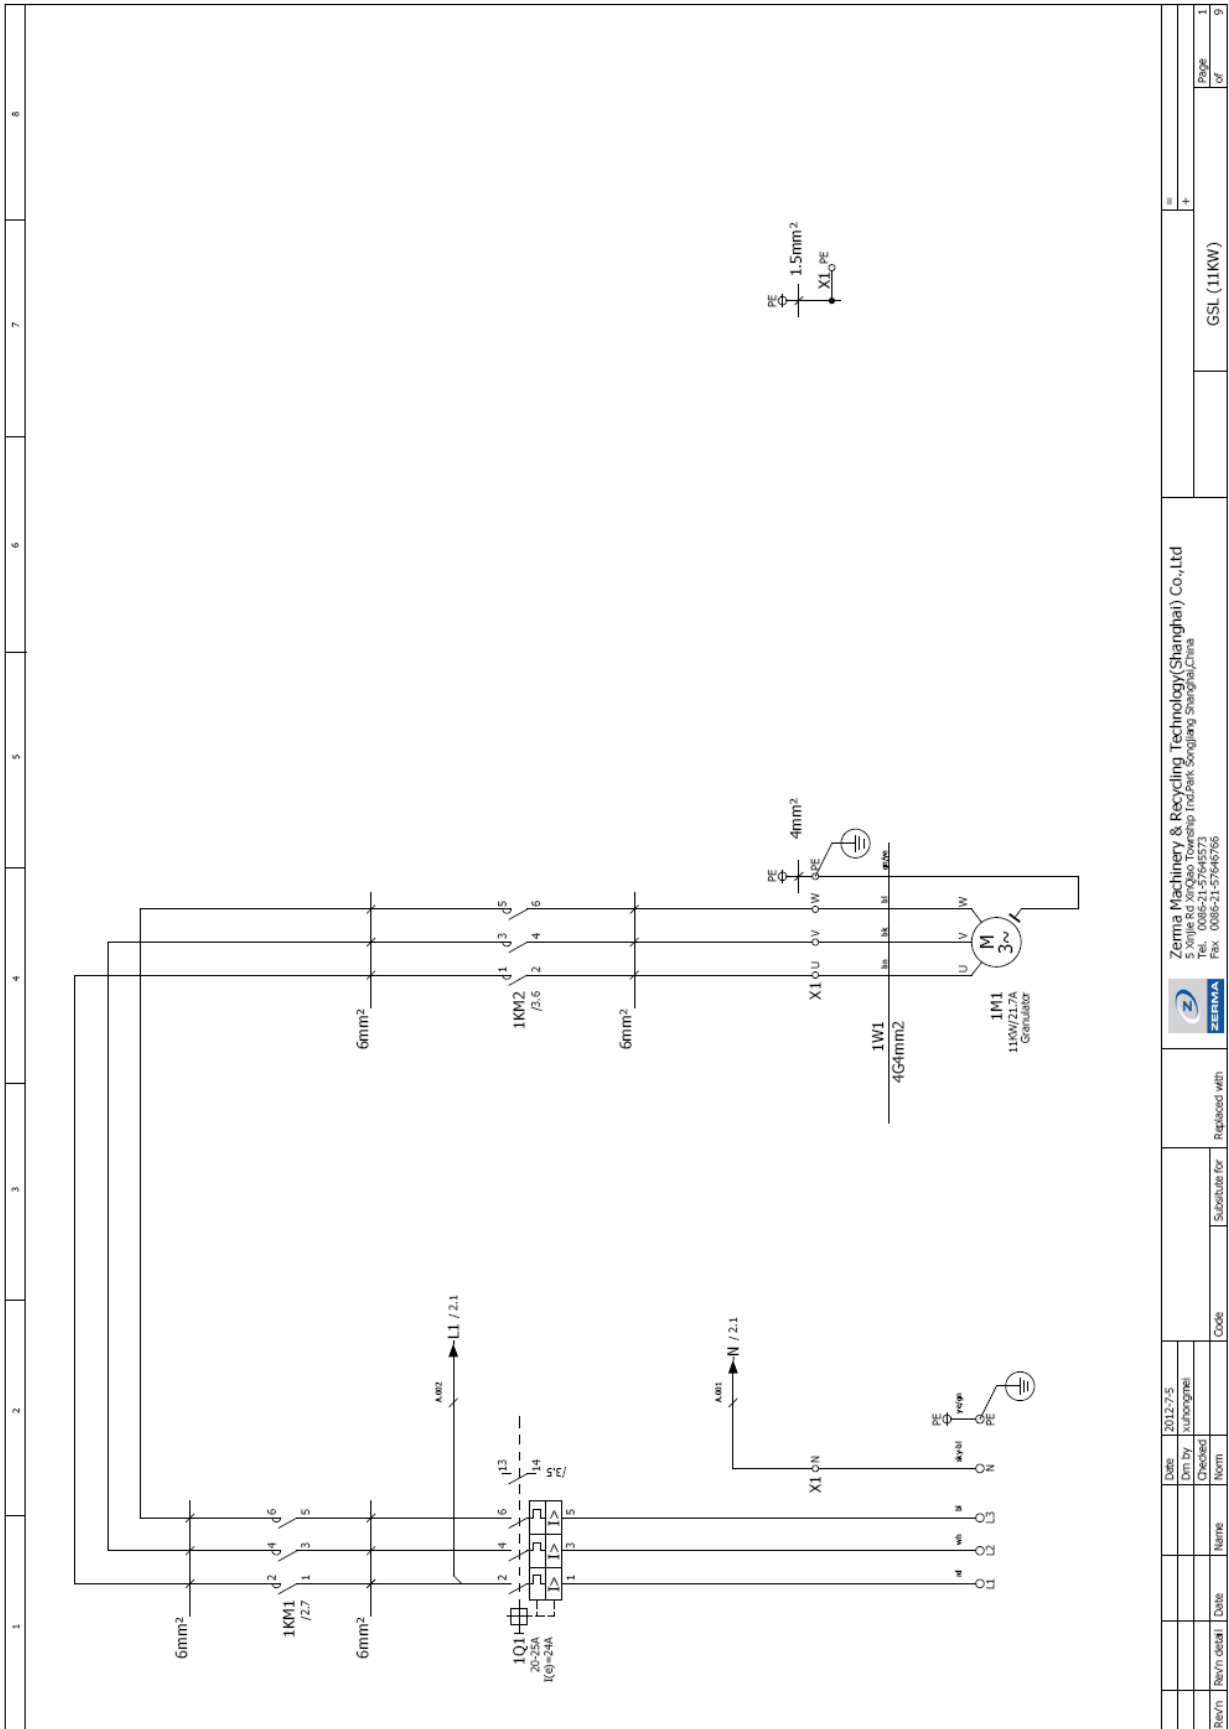


Rev'n	Rev'n detail	Date	Name	Checked	Norm	Code	Substitute for	Replaced with
		2012-7-5	xunhongmei					

ZEMMA		Zemina Machinery & Recycling Technology(Shanghai) Co.,Ltd 5 Xinjie Rd Xinqiao Township Ind.Park Songjiang Shanghai,China Tel: 0086-21-57648573 Fax: 0086-21-57646766	
GSL (11KW)			
		= +	
		Page 1 of 9	

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

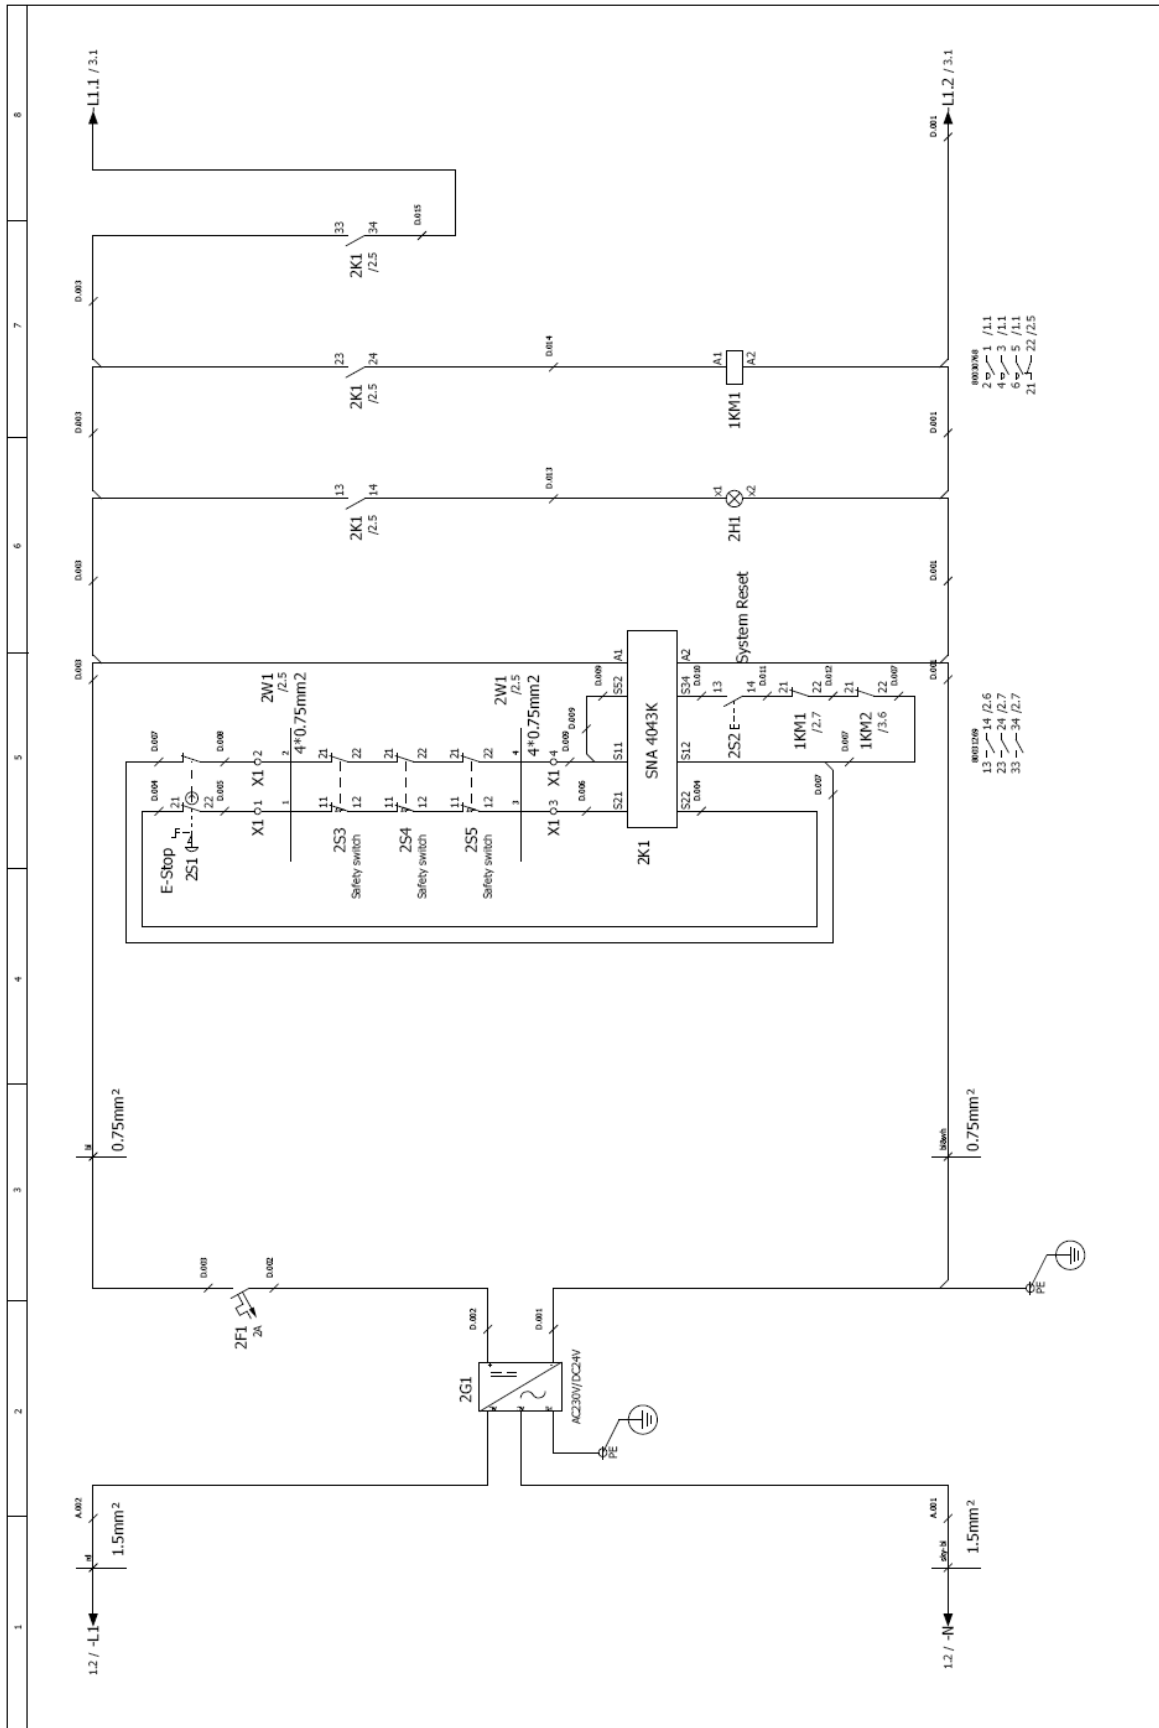

Rev'n	Rev'n detail	Date	Name	Checked	Norm	Code	Substitute for	Replaced with
		2012-7-5		kurugime				


Z		ZERMA	
Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd			
5 Xinjie Rd Xinqiao Township IndPark Songjiang Shanghai,China			
Tel: 0086-21-57645727			
Fax: 0086-21-57645726			

=		+	
GSL (11KW)		Page	2
		of	9

ORIGINAL INSTRUCTION

PART A: Basic machine


Slow speed Granulator A 30 Series

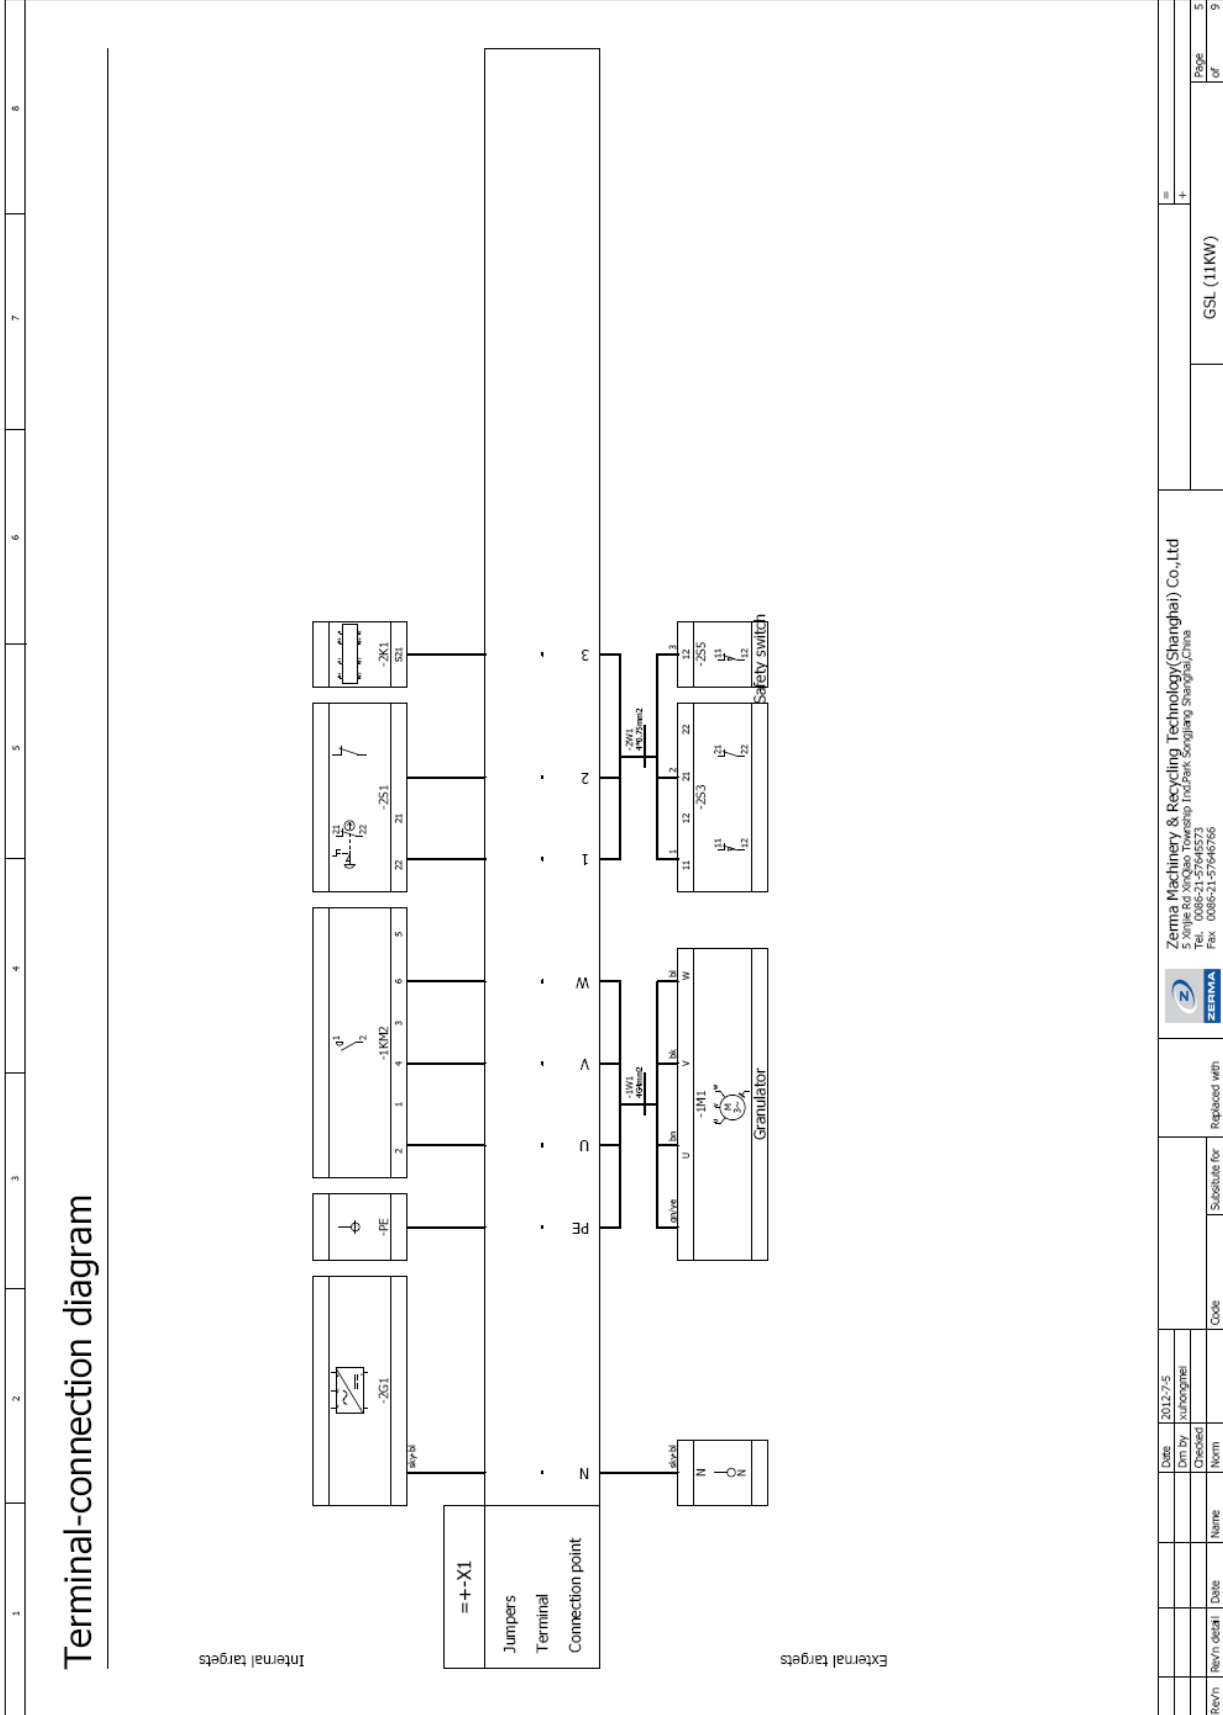

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

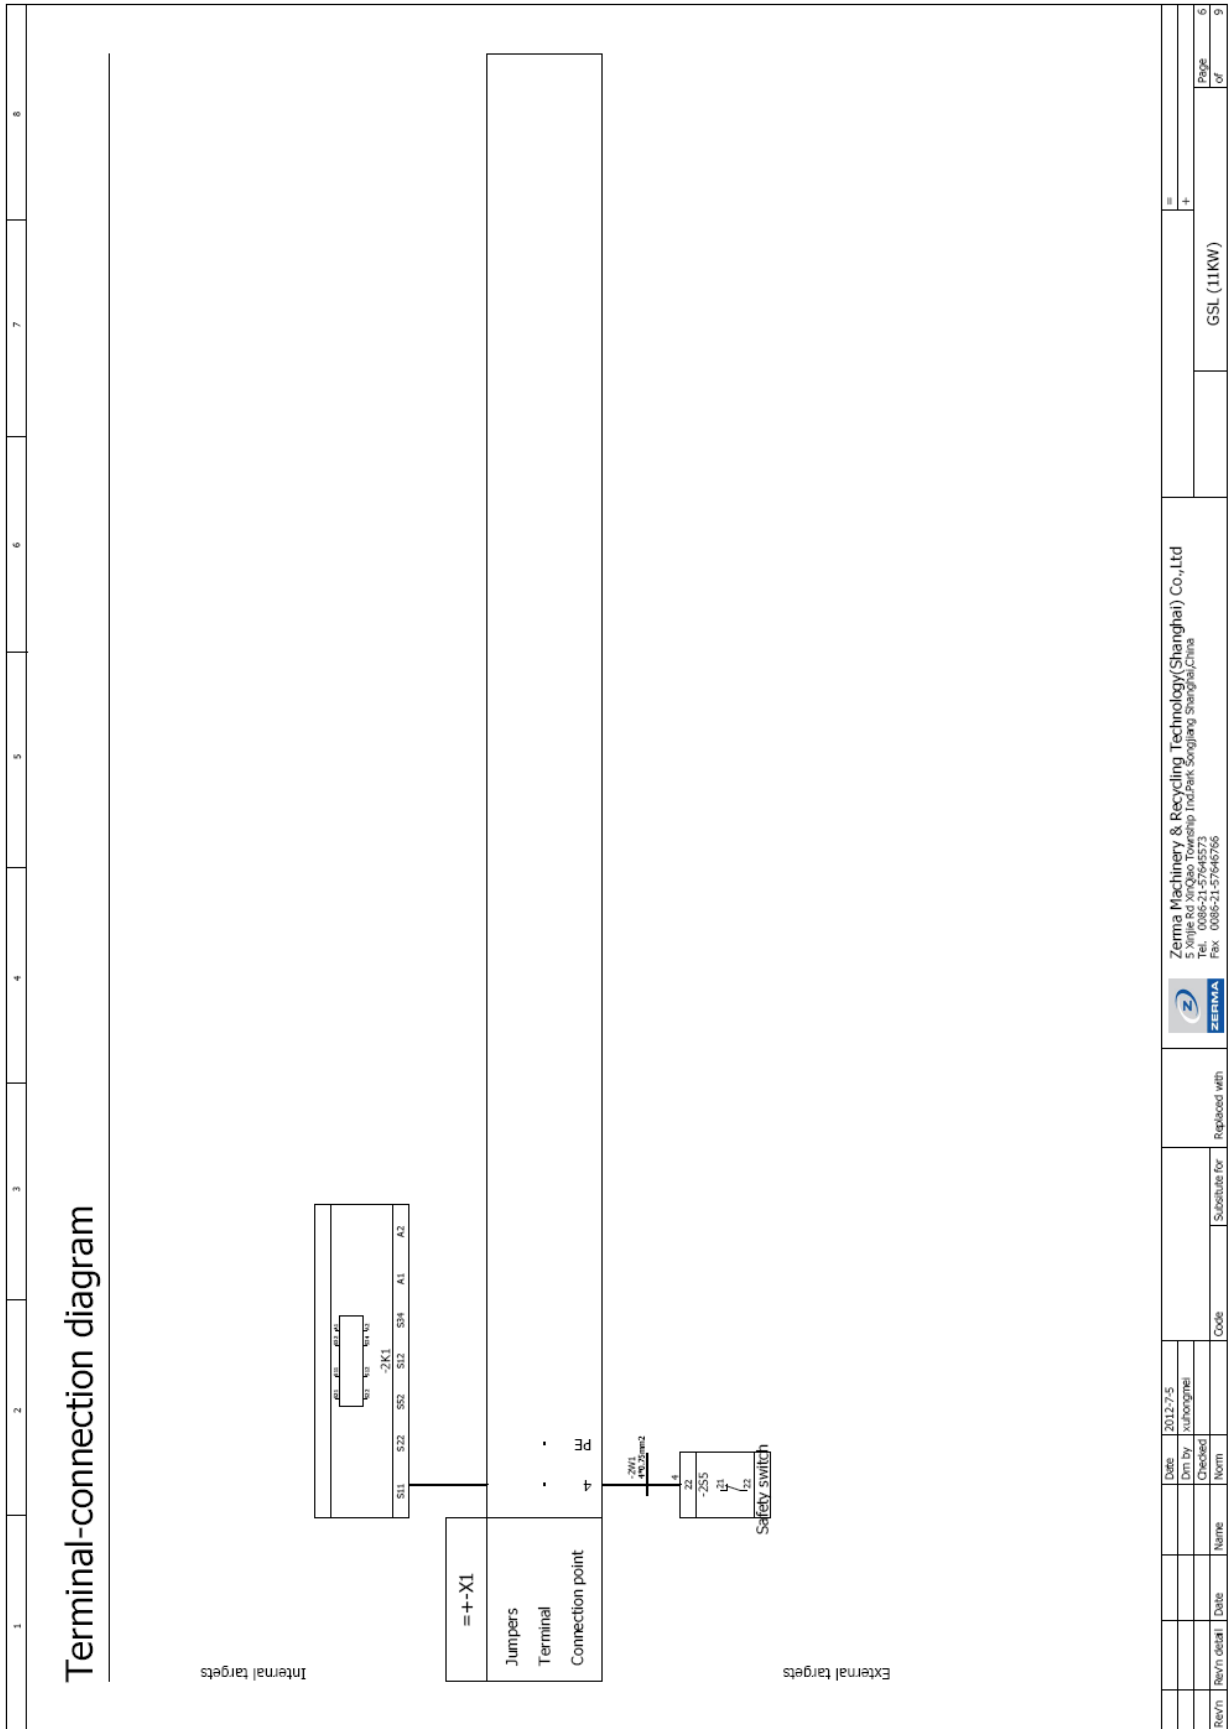

Rev'n	Rev'n detail	Date	Name	Code	Substitute for	Replaced with	ZEMMA		Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd 5 Xinjie Rd Xinqiao Township Ind.Park Songjiang Shanghai,China Tel. 0086-21-57648573 Fax. 0086-21-57646766	GSL (11KW)	Page of
		2012-7-5	xunzongmei								6
		Checked	Norm								9

ORIGINAL INSTRUCTION

PART A: Basic machine



Slow speed Granulator A 30 Series

1	2	3	4	5	6	7	8
Summarized parts list							
Material number	Quantity	Component Name	Description	Reference name	Manufacturer		
80007270	1	Control box	AE1034.500 (W*H*D 300*400*210)		RITTAL		
80031186	1	PE busbar	3×17/5 piece		Leipole		
80031372	1	Mould case circuit breaker DC2A	PL9-C2-DC	2F1	Moeller		
80031257	1	Power supply 48W DC24V 2A	CP SNT 48W 24V 2A	2G1	Weidmuller		
80005940	5	Fixing adapter	M22-A	2H1;2S1;3H1;3S1;3S2	Moeller		
80030309	1	Lable	M22-XST	2H1	Moeller		
80030308	1	Lable mount	M22S-ST-X	2H1	Moeller		
80031028	1	Indicator&pushbutton(white)	M22-DL-W	2H1	Moeller		
80005470	3	Contact element NO	M22-K10	2H1;3H1;3S2	Moeller		
80008130	2	Bulb&lamp socket (white/yellow)	M22-LED-W	2H1;3H1	Moeller		
80031027	1	Double actuator	M22-DDL-GR-X1/X0	3H1	Moeller		
80005450	4	Contact element NC	M22-K01	2S1;3H1;3S1	Moeller		
80031269	1	Safety monitoring DC24V	SMA 4043K(DC24V)R1.188.1680.0	2K1	Wieland		
80030768	2	Power contactor	DILM25-10C(RDC24)	1KM1;1KM2	Moeller		
80030725	2	Auxiliary contact module	DILM32C-XH111	1KM1;1KM2	Moeller		
80031045	1	Motor-protective circuit breaker	PKZMC-25	1Q1	Moeller		
80005110	1	Auxiliary contact	NH11-PKZ0	1Q1	Moeller		
80005680	1	Feeder terminal	BK25/3-PKZ0	1Q1	Moeller		
80030331	1	Three phase coming link	B3.1/3-PKZ0	1Q1	Moeller		

Rev'n	Rev'n detail	Date	Name	Checked	Norm	Code	Substitute for	Replaced with	 ZEMMA		Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd 5 Xingye Rd Xinqiao Township IndPark Songjiang Shanghai,China Tel: 0086-21-57646728 Fax: 0086-21-57646726		GSL (11KW)	=	+	Page	of	
		2012-7-5															7	9

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series


17.4 A 30 /600 Standard wiring diagram Version 2

1	2	3	4	5	6	7	8															
 <p>Zerma Machinery & Recycling Technology(Shanghai)Co.,Ltd. 5 Xinjie Rd XinQiao Township Ind.Park Songjiang Shanghai,China Tel. 0086-21-57645573 Fax 0086-21-57646766</p>																						
Order number				GSL300-400/600 (11KW)																		
Code																						
Type				GSL300-400/600 (11KW)																		
Power supply																						
Control voltage																						
Created on				2015-5-29																		
Number of pages				9																		
				<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"></td> <td style="width: 20%;"></td> <td style="width: 20%;"></td> <td style="width: 20%;"></td> <td style="width: 20%;"></td> </tr> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">2015-5-29</td> <td style="text-align: center;">xuhongmei</td> <td style="text-align: center;">Date</td> <td style="text-align: center;">Name</td> </tr> <tr> <td style="text-align: center;">Version NO.</td> <td style="text-align: center;">Date</td> <td style="text-align: center;">xuhongmei</td> <td style="text-align: center;">Date</td> <td style="text-align: center;">Name</td> </tr> </table>									1	2015-5-29	xuhongmei	Date	Name	Version NO.	Date	xuhongmei	Date	Name
1	2015-5-29	xuhongmei	Date	Name																		
Version NO.	Date	xuhongmei	Date	Name																		
 <p>Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd 5 Xinjie Rd XinQiao Township Ind.Park Songjiang Shanghai,China Tel. 0086-21-57645573 Fax 0086-21-57646766</p>																						
Rev'n				Replaced with																		
Date				Code																		
2015-5-29																						
Dwn by				Substitute for																		
xuhongmei																						
Checked				Replaced with																		
Norm				Code																		
				GSL300-400/600 (11KW)																		
				=																		
				+																		
				Page																		
				0																		
				of																		
				9																		

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

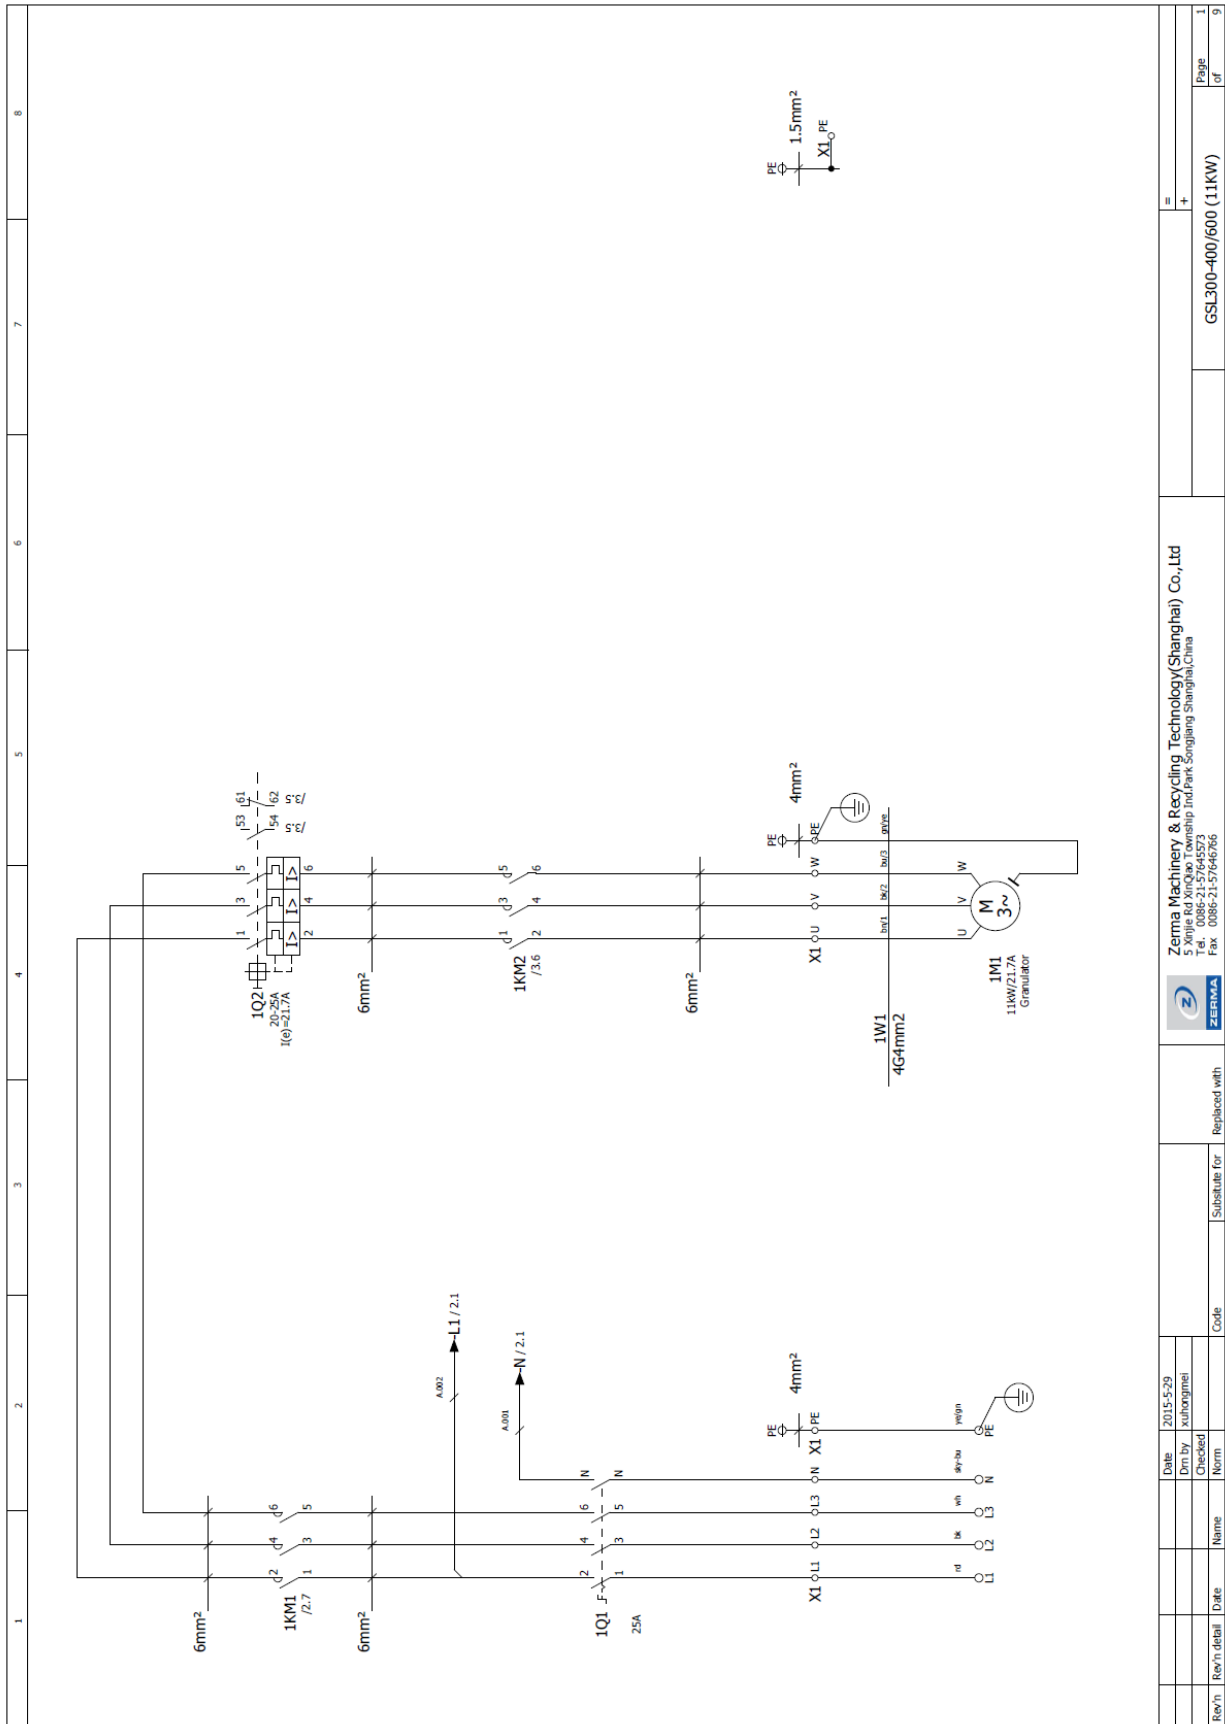


Revised	Revised	Date	2015-5-29	Code		Substitute for	Replaced with	ZERMA	Zerma Machinery & Recycling Technology(Shanghai) Co., Ltd 5 Xingye Rd Xincunqiao Township, Ind Park, Songjiang Shanghai, China Tel: 0086-21-57646756 Fax: 0086-21-57646766	GSL300-400/600 (11KW)	Page of	1 9
---------	---------	------	-----------	------	--	----------------	---------------	-------	--	-----------------------	---------	-----

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

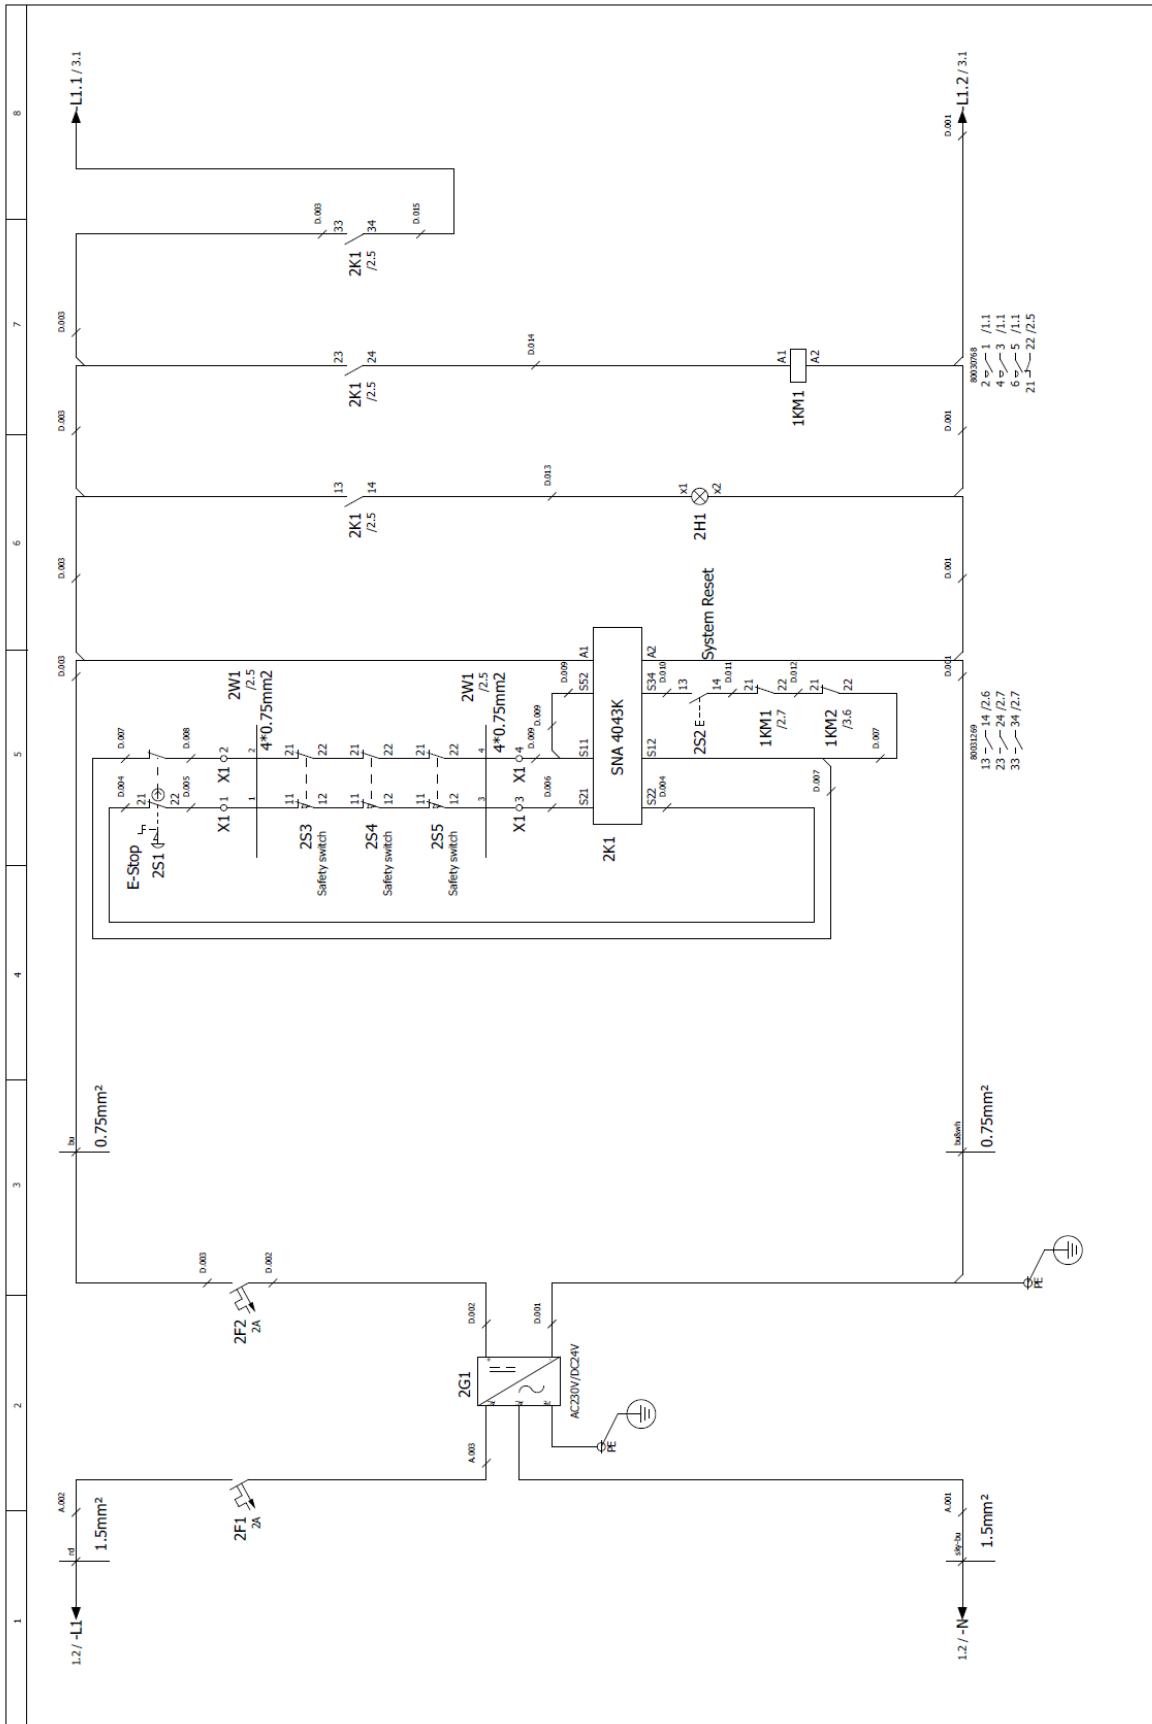

Rev'n	Rev'n detail	Date	Name	Norm	Checked	Code	Substitute for	Replaced with
		2015-5-29						
		Dim by	Zurongmei					


Zema Machinery & Recycling Technology(Shanghai) Co.,Ltd	
5 Xujie Rd Xincube Township Ind Park Songjiang Shanghai,China	
Tel: 0086-21-57646266 Fax: 0086-21-57646266	

GSL300-400/600 (11KW)	
Page	2
of	9

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

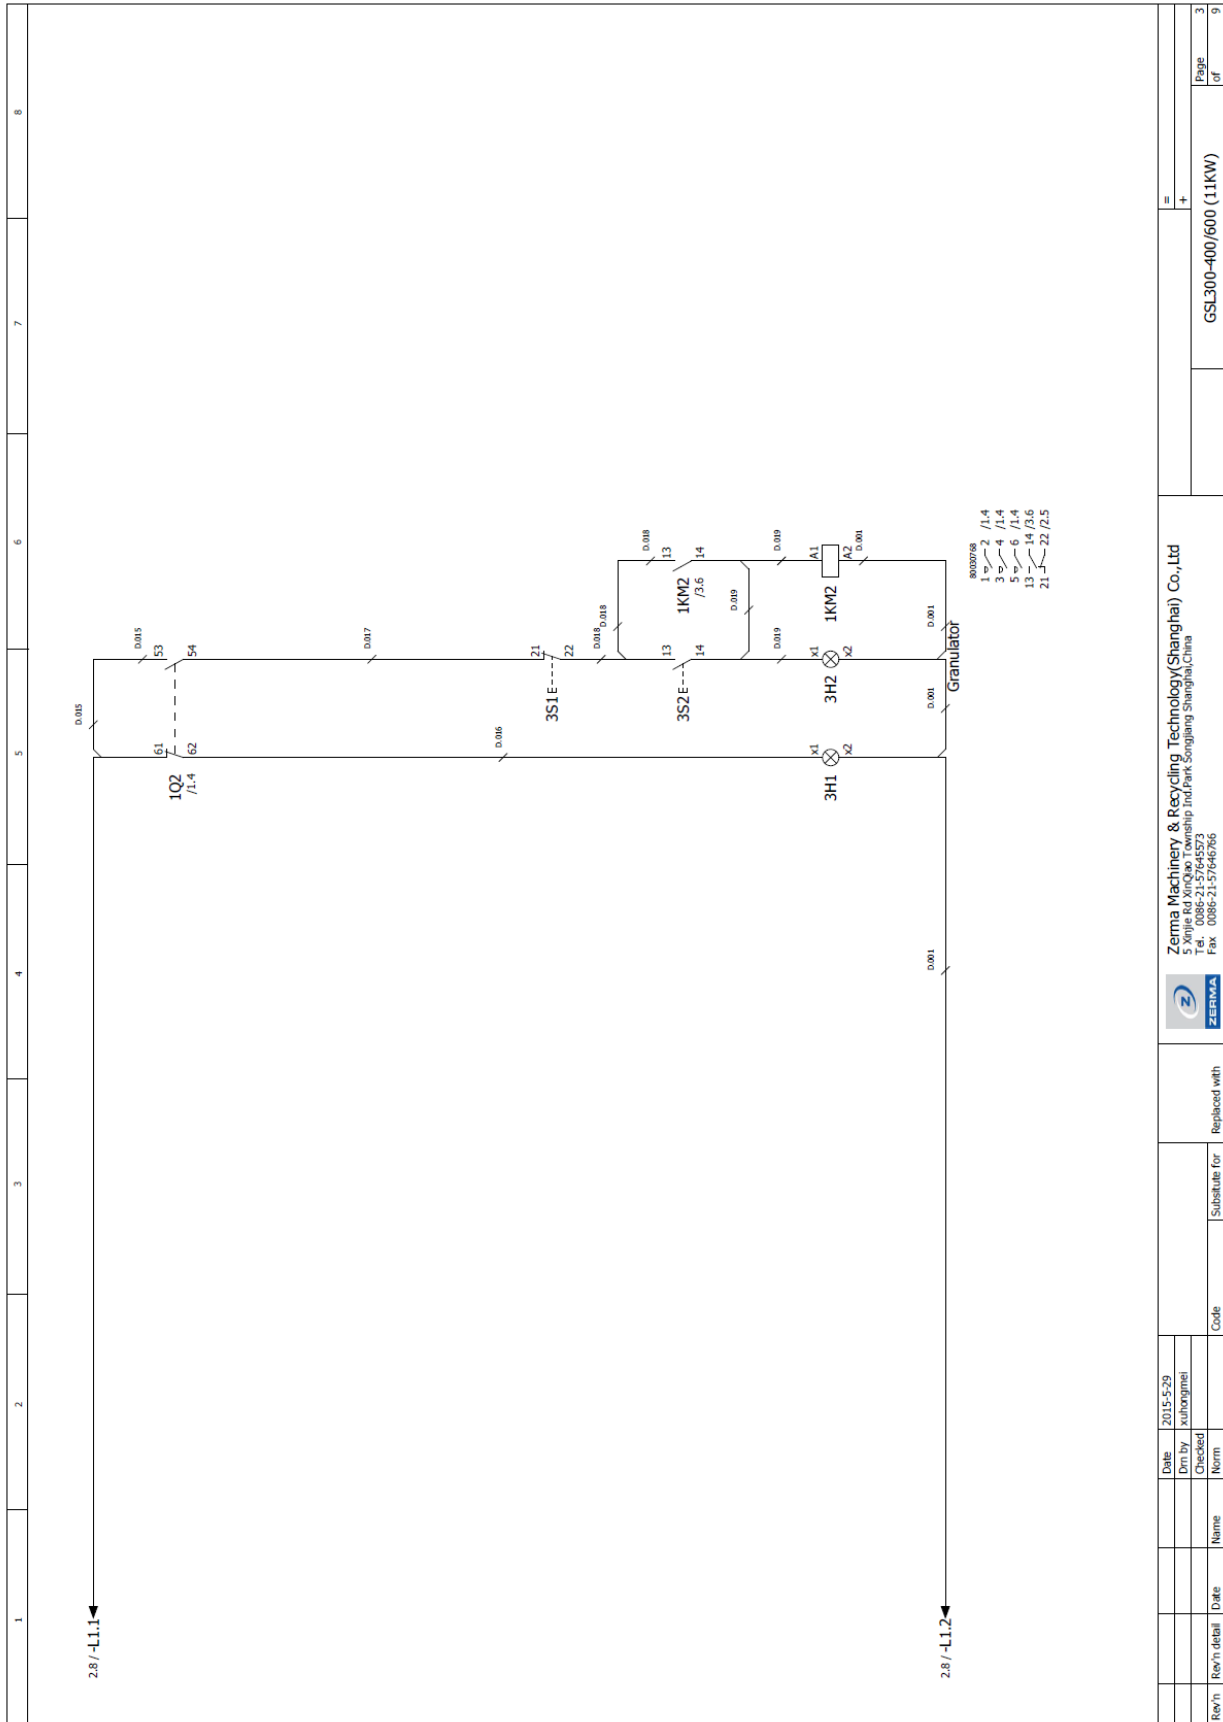

Rev'n	Rev'n detail	Date	Name	Checked	Norm	Date	2015-5-29	2015-5-29	Substitute for	Replaced with	Code	GSL300-400/600 (11KW)	Page of	3 of 9
-------	--------------	------	------	---------	------	------	-----------	-----------	----------------	---------------	------	-----------------------	---------	--------

ZERMA
Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd
5 Xujie Rd Xincun TownShip Ind.Park Songjiang Shanghai,China
Fax 0086-21-57646266

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

1 2 3 4 5 6 7 8

Terminal diagram

Function text		Strip =+-X1						Page / column
Cable name	Cable type	Target designation	Connection point	Terminal	Jumper	Target designation	Connection point	
-1W1	4G4mm2	PE		PE	•	-PE		
-2W1	4*0.75mm2	N		N	•	-1Q1	/1.2	
		L1		L1	•	-1Q1	/1.2	
		L2		L2	•	-1Q1	/1.1	
		L3		L3	•	-1Q1	/1.1	
		-1M1		U	•	-1R02	/1.1	
		-1M1	bu/1	V	•	-1R02	/1.4	
		-1M1	bu/3	W	•	-1R02	/1.4	
		-1M1	gn/pe	PE	•	-PE	/1.5	
		-2S3	1	11	•	-2S1	/2.5	
		-2S3	2	21	•	-2S1	/2.5	
		-2S5	3	12	•	-2K1	/2.5	
		-2S5	4	22	•	-2K1	/2.5	
				PE	•		/1.8	

Rev'n	Rev'n detail	Date	Name	Checked	Norm	Code	Substitute for	Replaced with
		2015-5-29						
		2015-5-29						
		2015-5-29						

ZERMA

Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd
 5 Xingye Rd Xincun Township, Ind Park Songjiang Shanghai, China
 Tel: 0086-21-57646796
 Fax: 0086-21-57646796


GSL300-400/600 (11KW)

Page 4 of 9

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

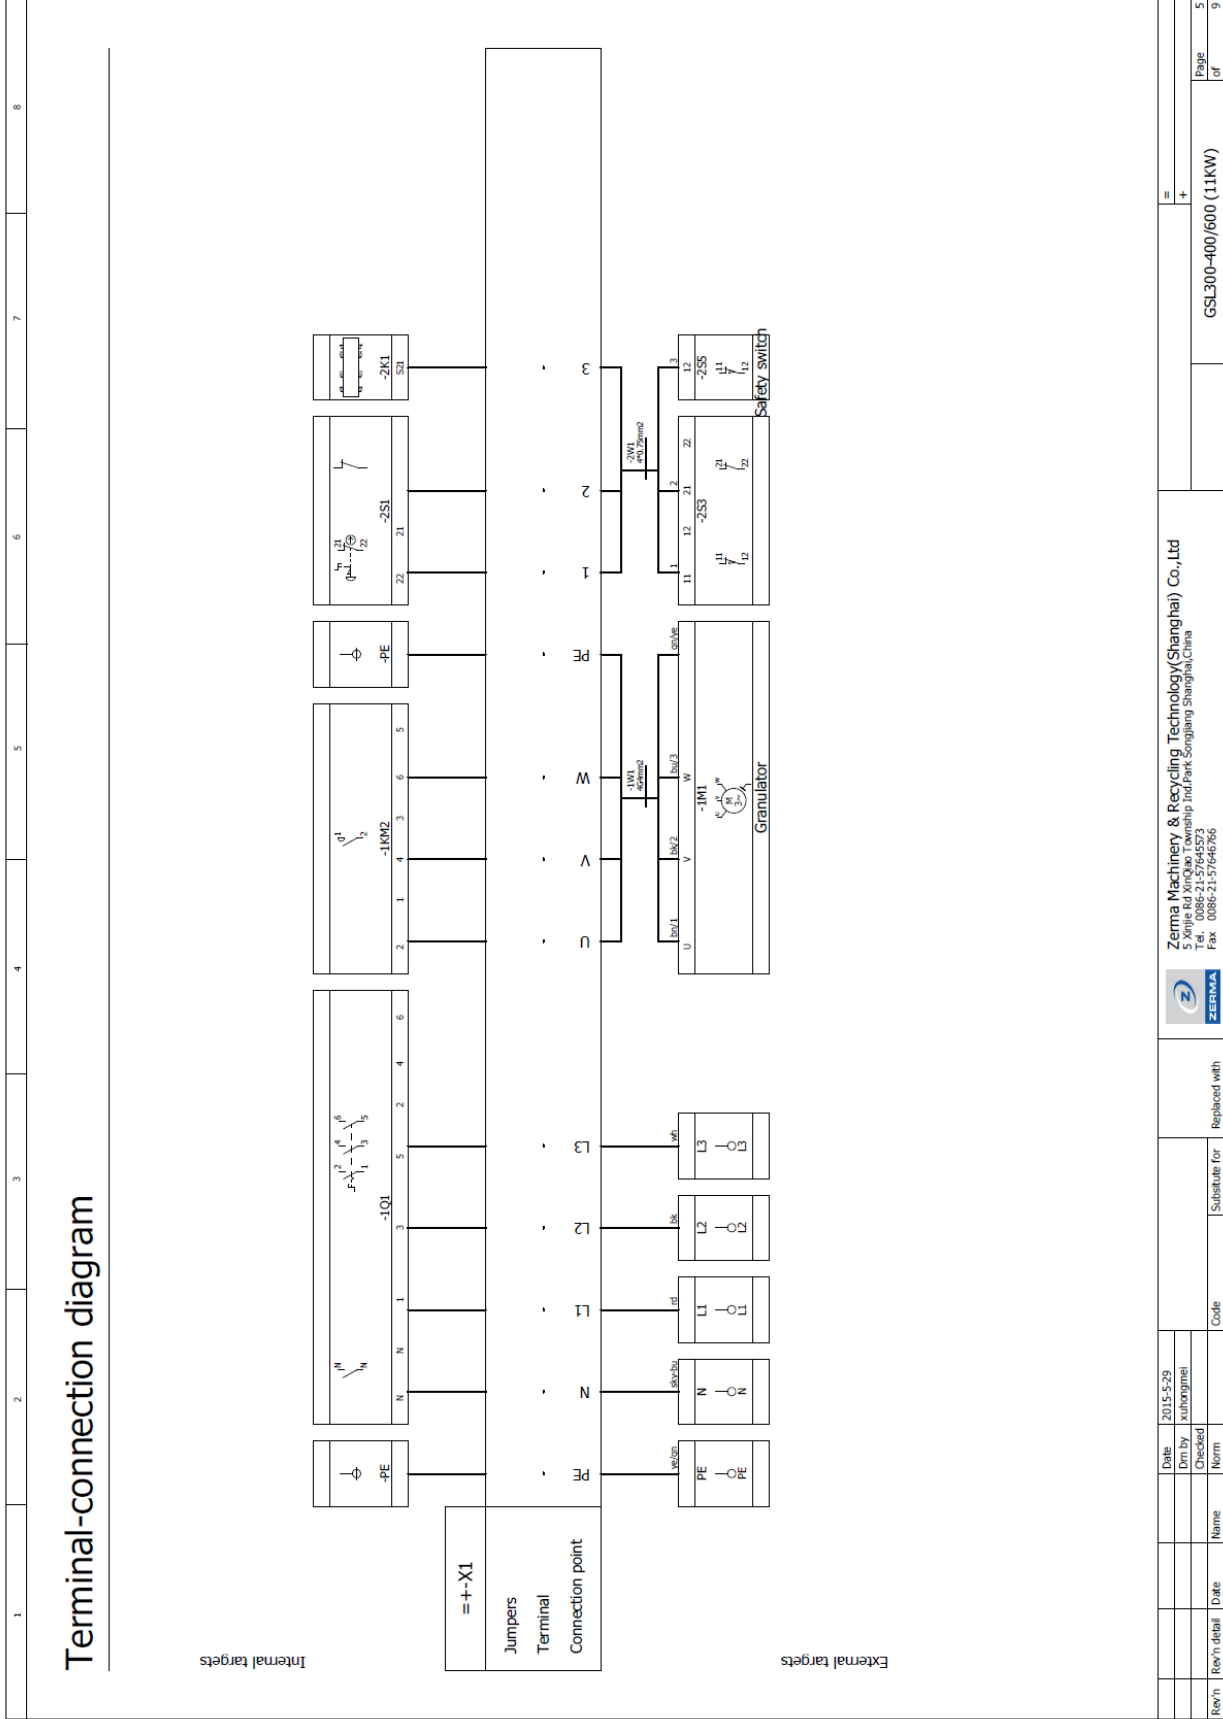


ORIGINAL INSTRUCTION

PART A: Basic machine



Slow speed Granulator A 30 Series

1	2	3	4	5	6	7	8
Summarized parts list							
Material number	Quantity	Component Name	Description	Reference name	Manufacturer		
80007270	1	Control box	AEI034-500 (W*H*D 300*400*210)		RITTAL		
80031186	1	PE busbar	3×17/5 piece		Leipole		
80030403	1	Mould case circuit breaker 2A	PL9-C2	2F1	Moeller		
80031372	1	Mould case circuit breaker DC2A	PL9-C2-DC	2F2	Moeller		
80031257	1	Power supply 48W DC24V 2A	CP SNT 48W 24V 2A	2G1	Waldmuller		
80005940	4	Fixing adapter	M22-A	2H1;2S1;3H1;3H2	Moeller		
80030309	1	Lable	M22-XST	2H1	Moeller		
80030308	1	Lable mount	M22S-ST-X	2H1	Moeller		
80031323	1	Indicator&pushbutton(blue)	M22-DL-B	2H1	Moeller		
80005470	2	Contact element NO	M22-K10	2H1;3H2	Moeller		
80008130	3	Bulb&lamp socket (white/yellow)	M22-LED-W	2H1;3H1;3H2	Moeller		
80005410	1	Lable	A22-XA	3H1	Moeller		
80005420	1	Lable mount	A22-PAS-X	3H1	Moeller		
80031017	1	Indicator&pushbutton(red)	M22-DL-R	3H1	Moeller		
80005450	3	Contact element NC	M22-K01	2S1;3H1	Moeller		
80031018	1	Indicator&pushbutton(green)	M22-DL-G	3H2	Moeller		
80031269	1	Safety monitoring DC24V	SNA 4043K(DC24V)R1.188.1680.0	2K1	Wieland		
80030768	2	Power contactor	DILM25-10C(RDC24)	1KM1;1KM2	Moeller		
80030725	2	Auxiliary contact module	DILM32C-XH11	1KM1;1KM2	Moeller		

Rev'n	Rev'n detail	Date	Name	Date	Checked	Norm	Substitute for	Code	Replaced with	 Zerma Machinery & Recycling Technology(Shanghai) Co., Ltd 5 Xingye Rd Xinqiao Township Ind Park Songjiang Shanghai, China Tel: 0086-21-57646262 Fax: 0086-21-57646266		GSL300-400/600 (11KW)	=	+	Page of
		2015-5-29													7
															9

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series


17.5 A 30 /800 Standard wiring diagram

1	2	3	4	5	6	7	8
 <p>Zerma Machinery & Recycling Technology(Shanghai)Co.,Ltd. 5 Xinjie Rd XinQiao Township Ind.Park Songjiang Shanghai,China Tel. 0086-21-57645573 Fax 0086-21-57646766</p>							
Order number							
Code							
Type				GSL(18.5KW)			
Power supply				400V			
Control voltage				220V			
Created on				2012-7-5			
Number of pages				10			
				Version NO.		Date	
				1		2012-7-5	
				xuhongmei		Name	
 <p>Zerma Machinery & Recycling Technology(Shanghai) Co.,Ltd 5 Xijie Rd XinQiao Township Ind.Park Songjiang Shanghai,China Tel. 0086-21-57645573 Fax 0086-21-57646766</p>							
Rev'n	Rev'n detail	Date	Date	Name	Norm.	Checked	2012-7-5
							xuhongmei
				Code		2012-7-5	
				Substitutor		Replaced with	
				GSL(18.5KW)		Page 0 of 10	

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

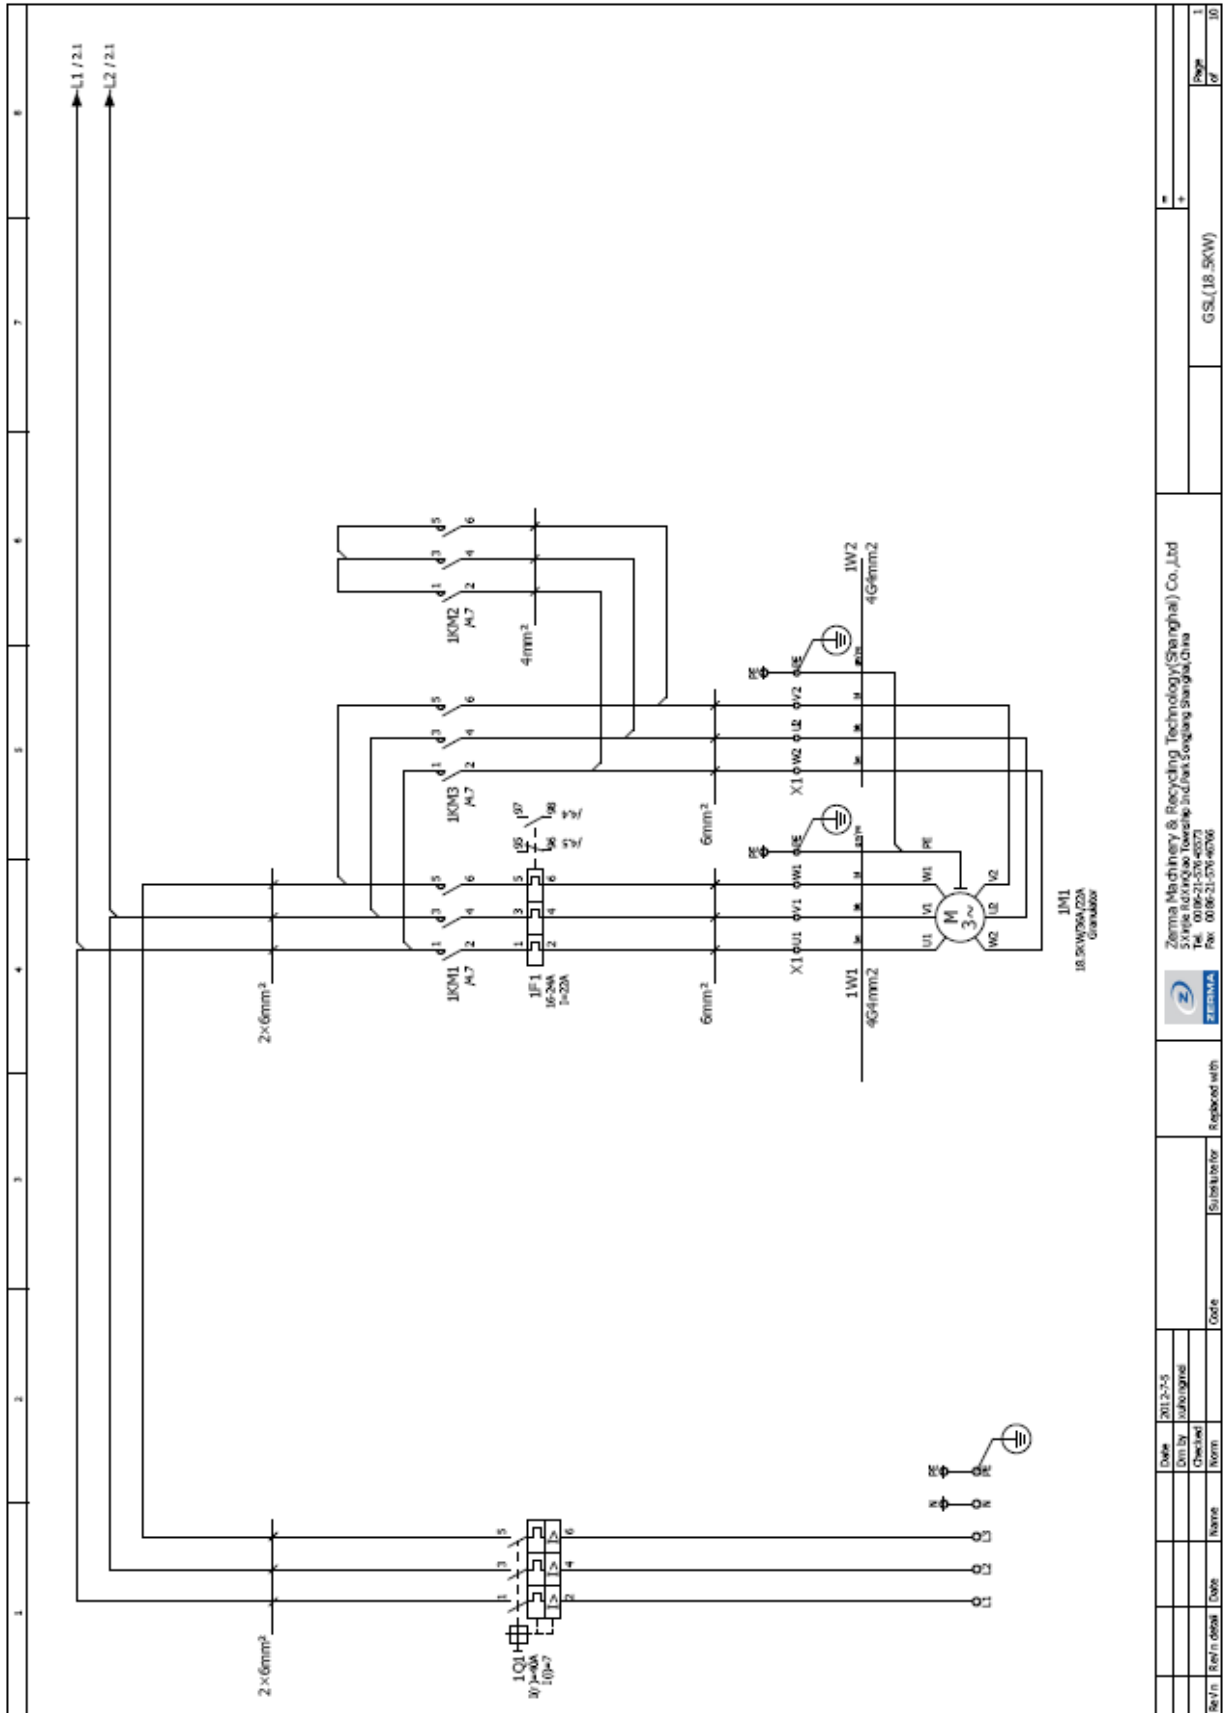


Rev. /	Rev. /	Code	Substitutor	Replaced with	ZEMMA	Zemina Machinery & Recycling Technology(Shanghai) Co.,Ltd Zemina Machinery & Recycling Technology(Shanghai) Co.,Ltd Tel: 0086-21-57040500 Fax: 0086-21-57040506	GSL(18.2KW)	Page	1
								of	10

ORIGINAL INSTRUCTION

PART A: Basic machine

Slow speed Granulator A 30 Series

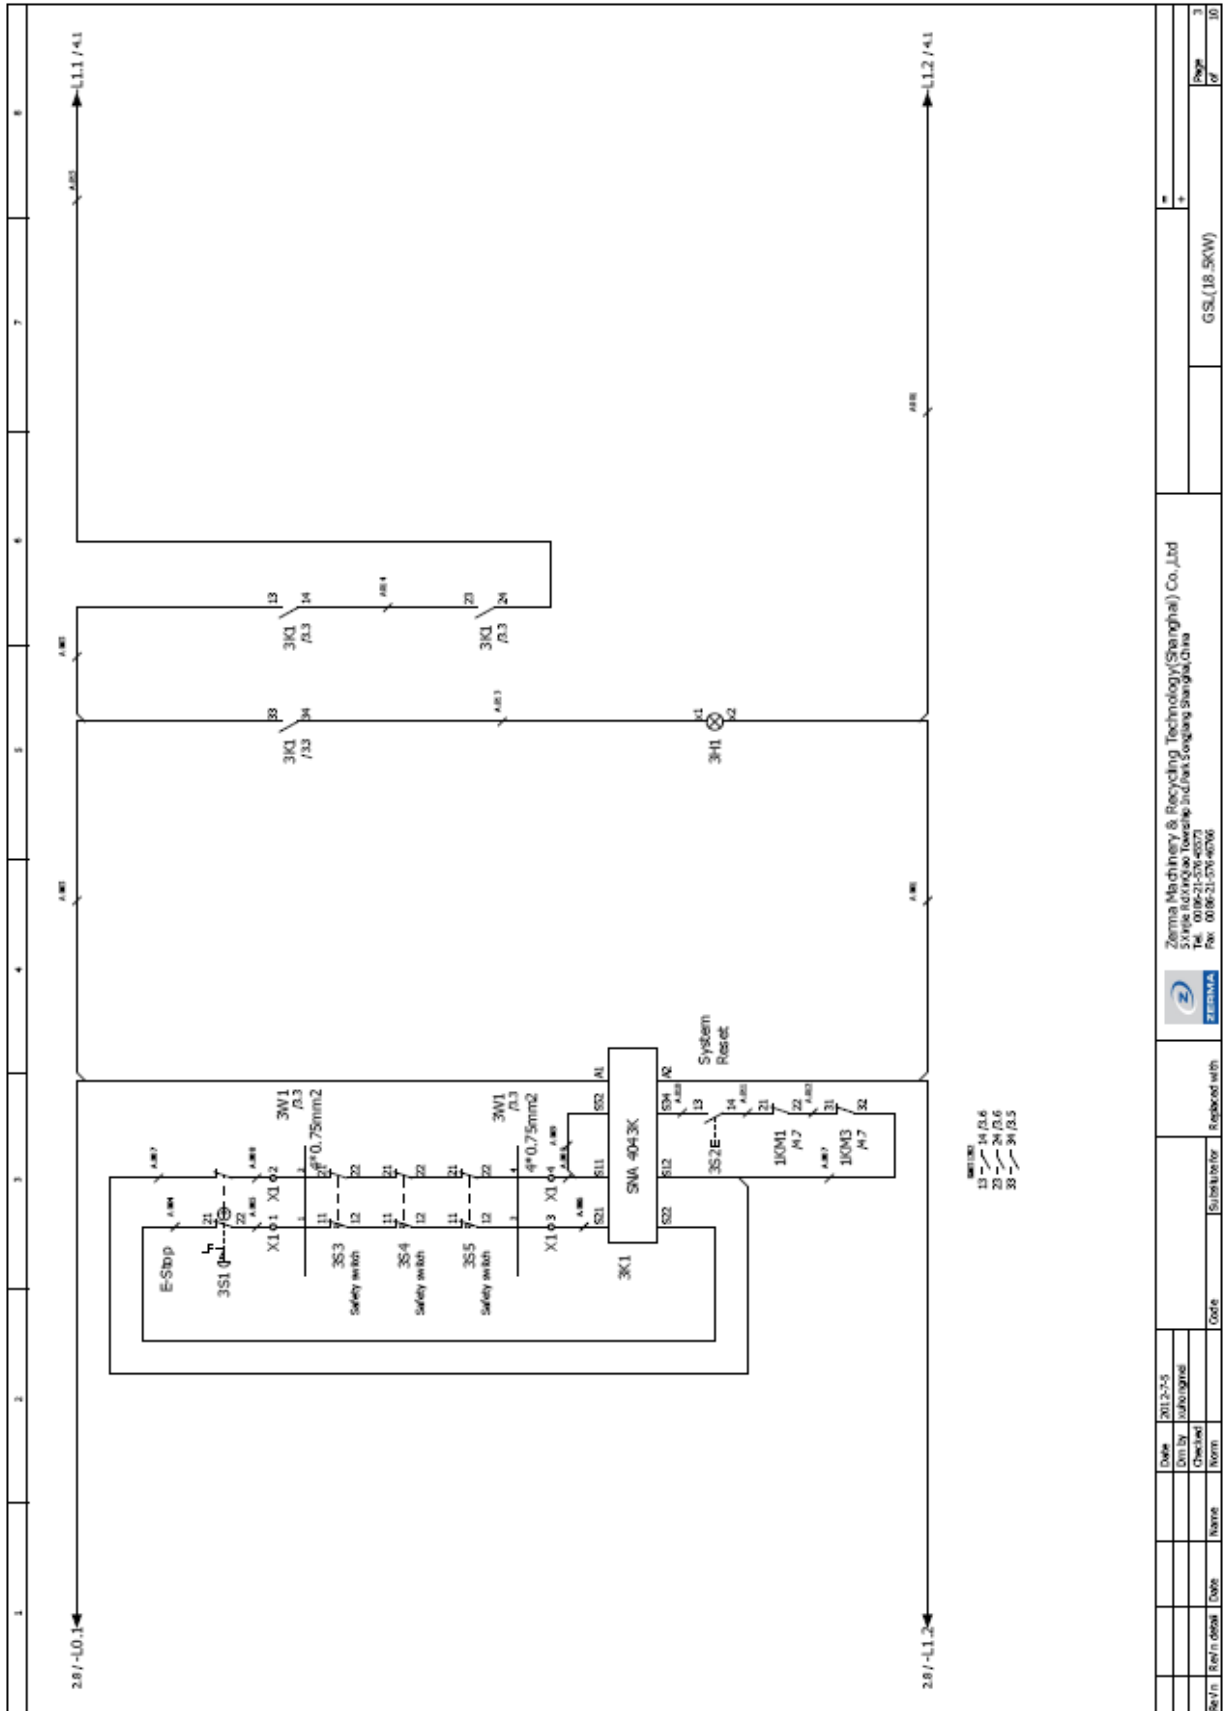


Rev./E	Rev./E	Code	Supplier/Rev	Replaced with	 ZEMMA Machinery & Recycling Technology(Shanghai) Co.,Ltd 1400901230000000 1400901230000000 Fax: 0086-21-270-40766
01	01	01	01	01	
02	02	02	02	02	
03	03	03	03	03	GSJ(18.5KW)
04	04	04	04	04	GSJ(18.5KW)

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

Function text:		Cable name		Cable type		Target designation		Connection point		Terminal		Jumper		Target designation		Connection point		Cable name		Cable type		Page / column			
Granulator	Strip =+-X1	-IM1	494mm ²	RE	UL	RE	UL	RE	UL	-RE													/L5		
		-IM2	494mm ²	UL	VL	UL	VL	UL	VL	VL	-JF1													/L4	
		-IM3	4*0.75mm ²	VL	WL	VL	WL	VL	WL	WL	-JF1													/L4	
				WL	WL	WL	WL	WL	WL	WL	-JF1														/L4
				IM1	494mm ²	MR	MR	MR	MR	MR	-JF1														/L5
				IM2	494mm ²	UL	UL	UL	UL	UL	-JF1														/L5
				IM3	494mm ²	VR	VR	VR	VR	VR	-JF1														/L5
						RE	RE	RE	RE	RE	-RE														/L5
						11	11	11	11	11	-S11														/L3
						21	21	21	21	21	-S11														/L3
						12	12	12	12	12	-S11														/L3
						22	22	22	22	22	-S11														/L3
											-RE														/L3

Date	2012-2-5	Checked	Norm	Code	Subcontractor	Registered with	ZEMMA	Zemina Machinery & Recycling Technology (Shanghai) Co., Ltd 14000152000 14000152000 Fax: 0086-21-27046706	GSL(18.3KW)	Page	5
	Drawn										Checked

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

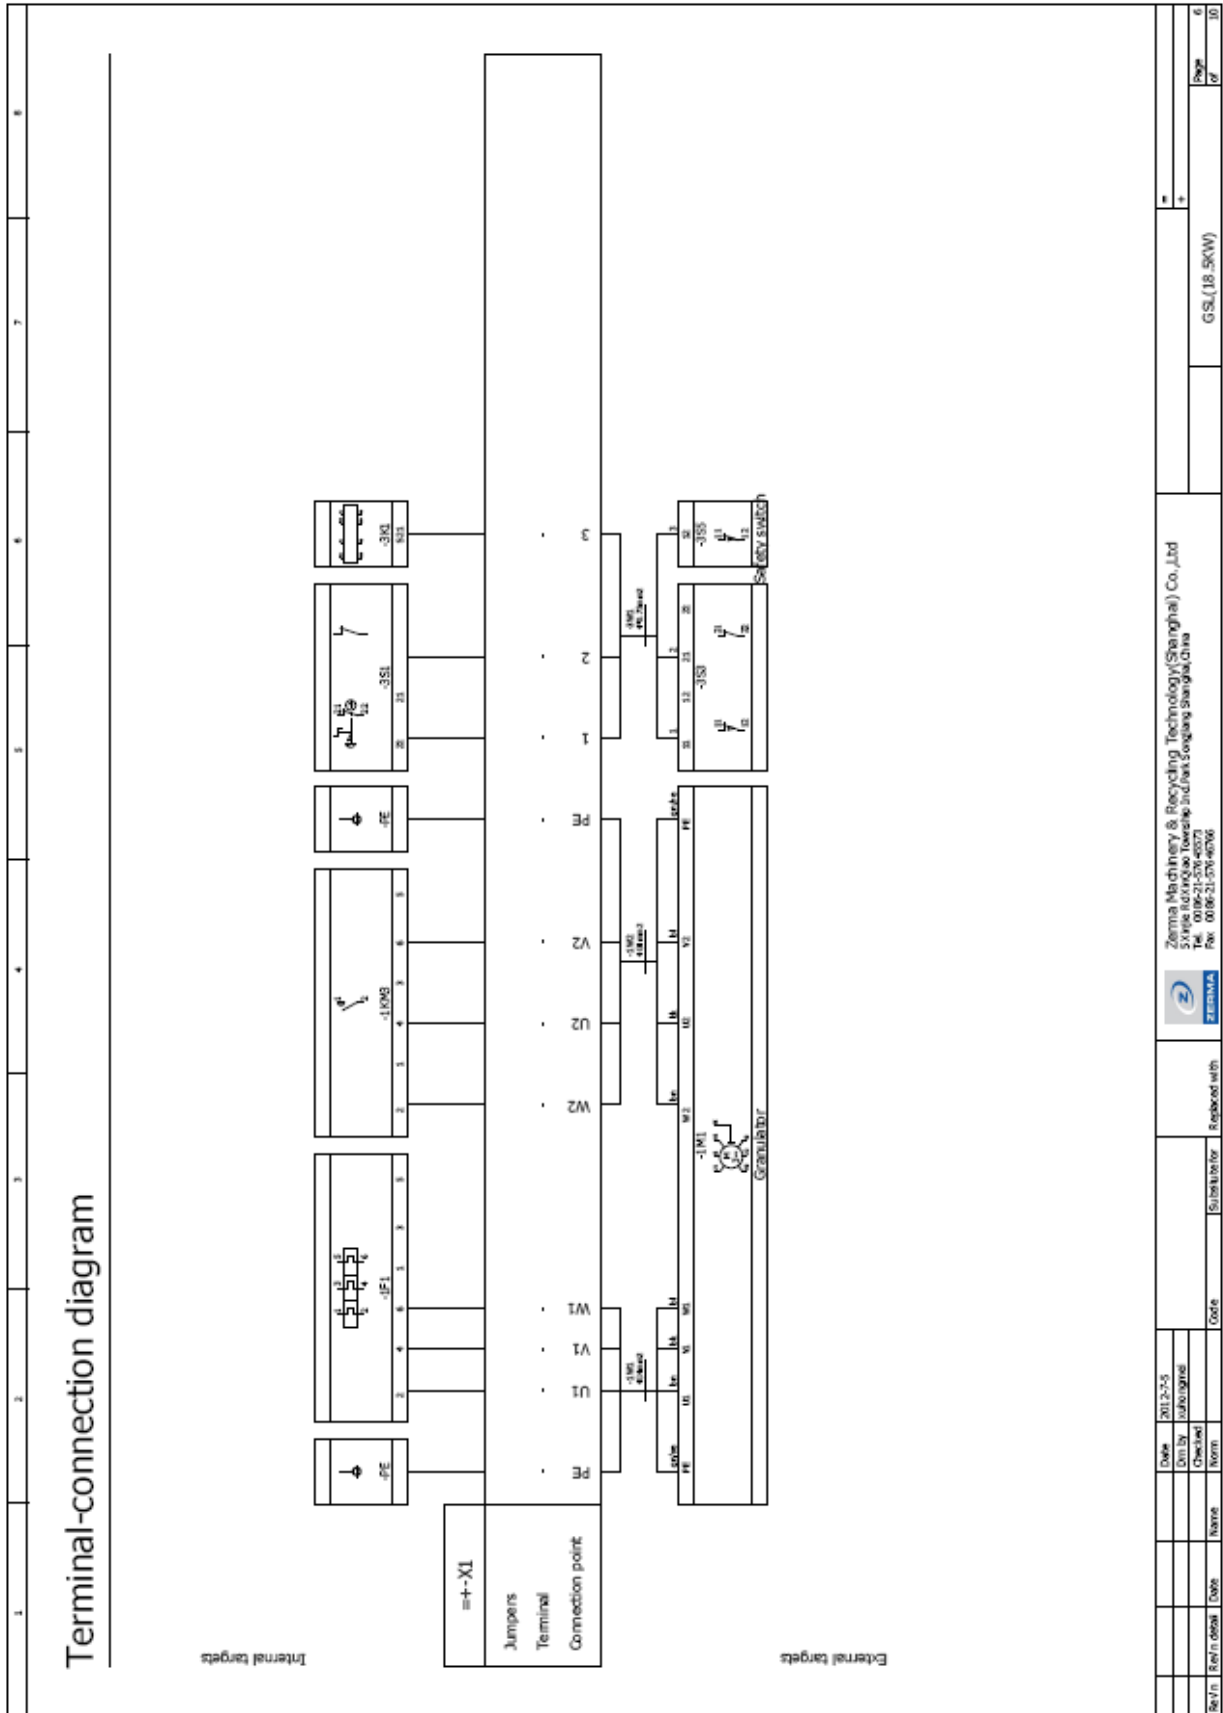

ORIGINAL INSTRUCTION
PART A: Basic machine
Slow speed Granulator A 30 Series

1	2	3	4	5	6	7	8
Summarized parts list							
Material number	Quantity	Component Name	Description	Reference name	Manufacturer		
80007290	1	Control box	AE10318.500 (WPH*0 380V/600*210)		RITTAL		
80031185	1	PE busbar	3 x 17/7 piece		Leipold		
80030774	1	Overload relay(16-24A)	ZB30C-24	IF1	Moeller		
80031032	3	Bulb&lamp socket (white/yellow)	M22-LED230-W	3H1/4H1/4H2	Moeller		
80005940	6	Floating adapter	M22-A	351;362;4H1;4H2;4H1;4H2	Moeller		
80005410	1	Label	A22-XA	4H1	Moeller		
80005420	1	Label mount	A22-R/65-X	4H1	Moeller		
80008140	1	Indicator red	M22-L-R	4H1	Moeller		
80008160	1	Indicator white	M22-L-W	4H2	Moeller		
80031282	1	Safety monitoring	SMA40-43K(AC220V/R1.188.1710.0	3K1	Wieland		
80030770	2	Power Contactor AC220V	D1LM25-10C(220-230V/50HZ)	10M1;10M3	Moeller		
80030725	2	Auxiliary contact module	D1LM30C-X/H11	10M1;10M2	Moeller		
80030797	1	Power Contactor AC220V	D1LM17-10C(220-230V/50HZ)	10M2	Moeller		
80030727	1	Auxiliary contact module	D1LM30C-X/H22	10M3	Moeller		
80031108	1	Star-delta timing relay	3RP1574-1NP3	4KT1	Siemens		
80030494	1	Circuit-breaker 40A	L2MB1-A40	1Q1	Moeller		
80005730	1	Door coupling rotary handle	N2M1-XTVDVR	1Q1	Moeller		
80005910	1	Extension shaft-400mm	N2M1/2-XV4	1Q1	Moeller		
80031192	2	Terminal cover	N2M1-XKSA (260021)	1Q1	Moeller		

Date	2012-2-5	Checked		ZEMMA Zemina Machinery & Recycling Technology(Shanghai) Co.,Ltd 1409601220001 1409601220001 Fax: 0086-21-570-40766	GSL(18.5KW)	Page 17
Drawn	YAFANGJIAN	Checked				
Rev'd	Rev'd	Date	Code	Substitutor	Replaced with	

18 ADDITION

Documentation Gear motor Granulator
(PART B)
Delivery documentation



Virtus Equipment

9120 Centerlinks Commerce Dr., Unit 4
Fort Myers, FL 33912

239-219-1500

Parts@Virtus-Equipment.com

www.Virtus-Equipment.com